
AVC–LAN CIRCUIT (MULTI–DISPLAY – GATEWAY ECU)

CIRCUIT DESCRIPTION

Each unit of the navigation system connected to AVC–LAN (communication bus) communicates by transferring the signals from each switch.
When +B short and GND short occur in this AVC–LAN, navigation system will not function normally as communication is discontinued.
In AVC–LAN, multi–display becomes the communication master, and the radio receiver assy has enough resistance necessary for transmitting the communication.


WIRING DIAGRAM

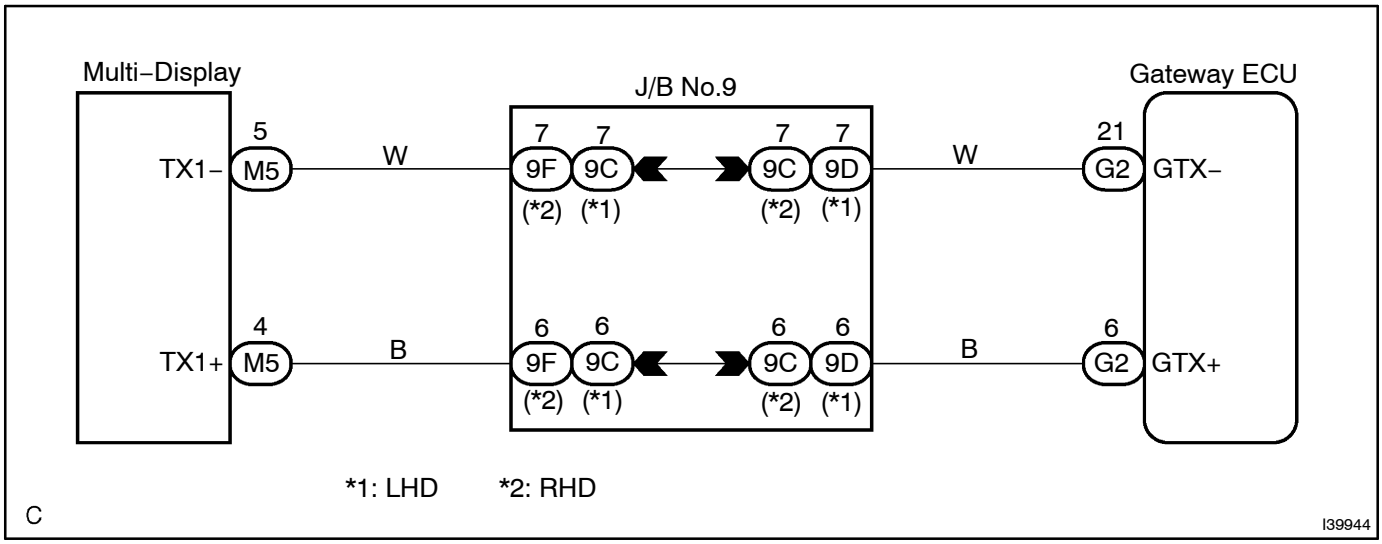


INSPECTION PROCEDURE

1	CHECK HARNESS AND CONNECTOR(MULTI–DISPLAY – GATEWAY ECU)

Multi–Display:

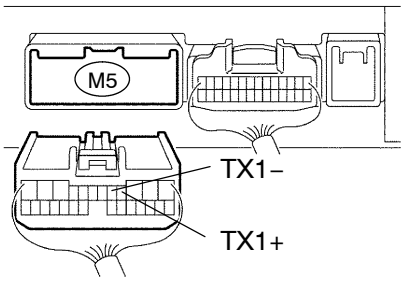

Gateway ECU:

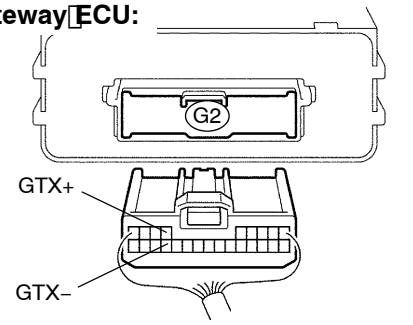

(a) Disconnect the connector from the multi–display (M5) and gateway ECU (G2).

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
TX1+ – GTX+	Always	Below 1 Ω
TX1– – GTX–	Always	Below 1 Ω
TX1+ – Body ground	Always	10 kΩ or higher
TX1– – Body ground	Always	10 kΩ or higher

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05–1570)