

05IA8–01


LOCATION

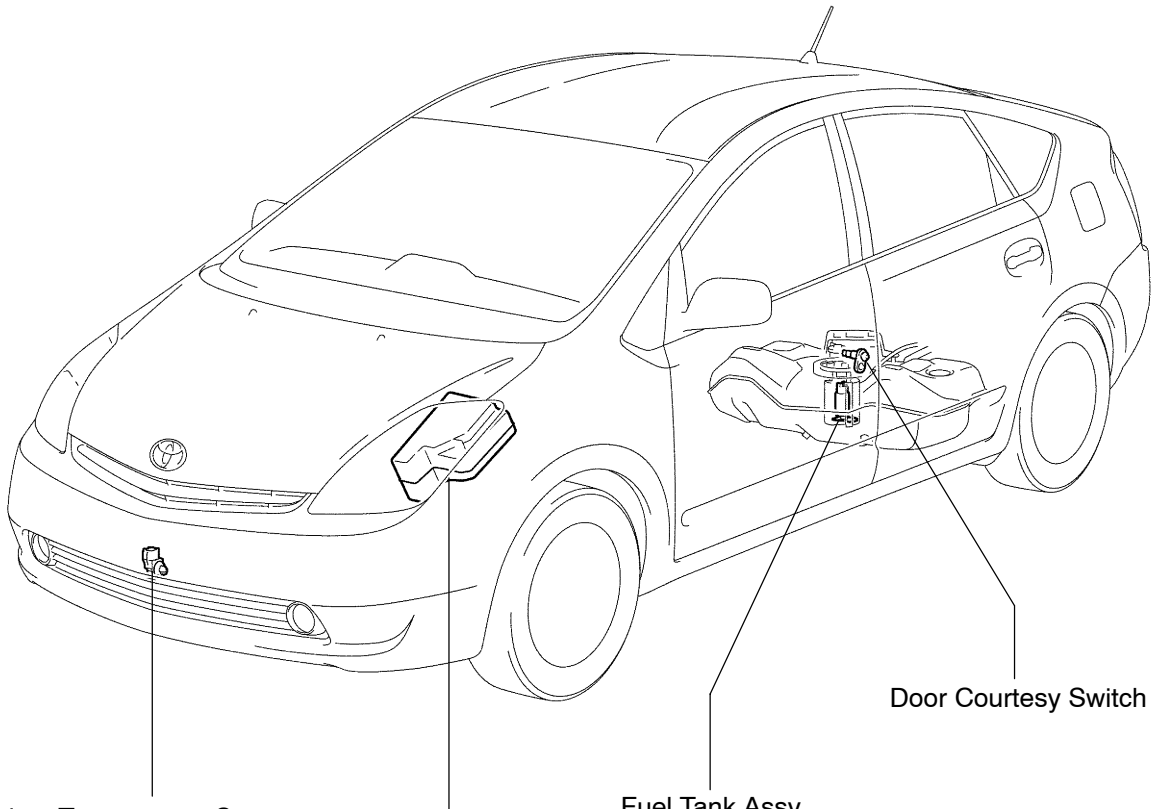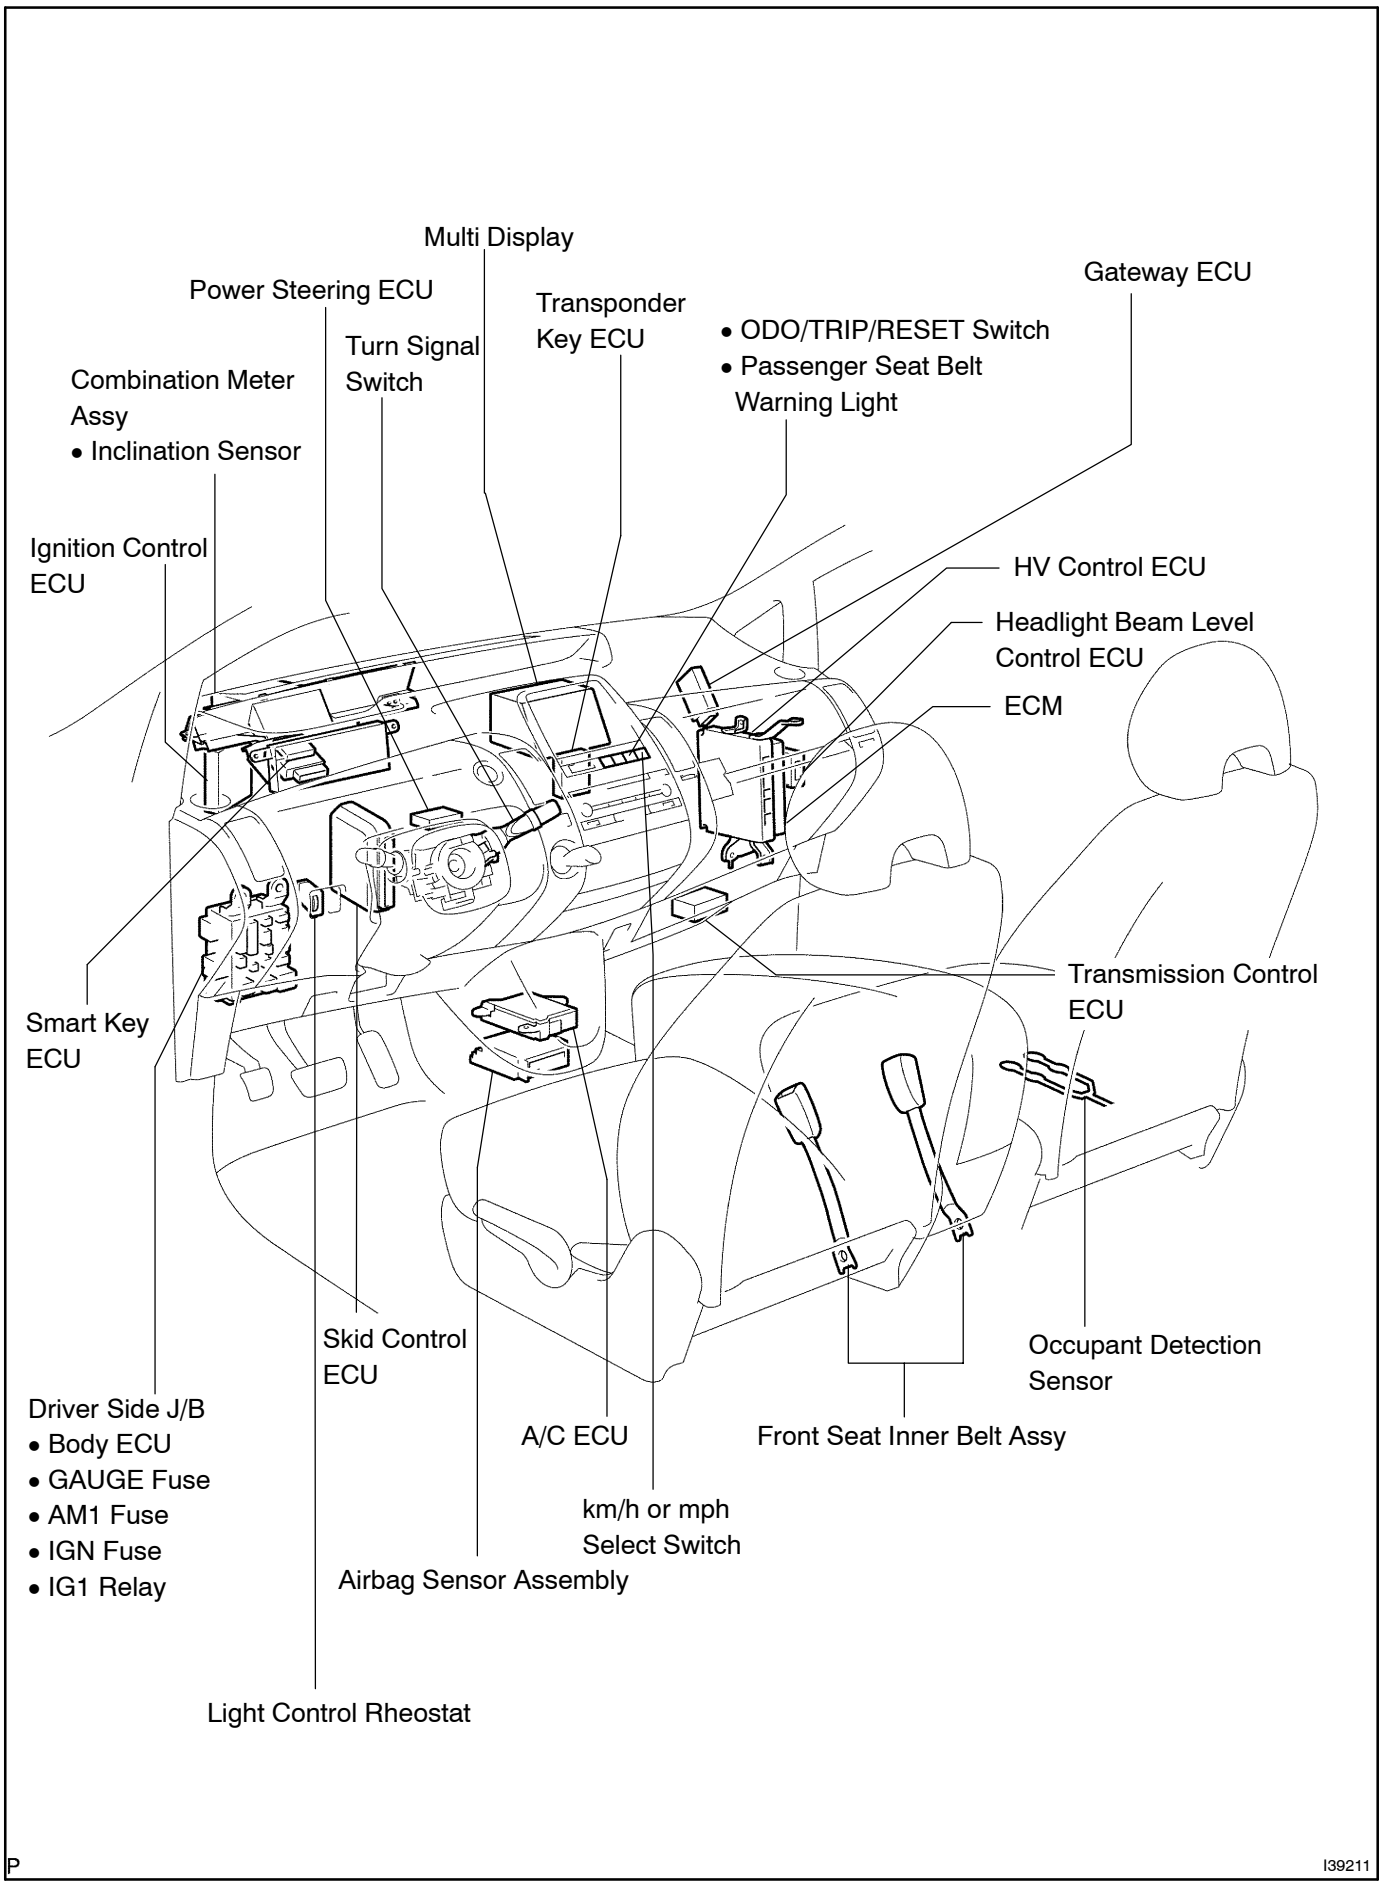

P

I39212


Multi Display
Power Steering ECU
Transponder Key ECU
Gateway ECU
Turn Signal Switch
• ODO/TRIP/RESET Switch
• Passenger Seat Belt Warning Light
Combination Meter Assy
• Inclination Sensor
Ignition Control ECU
HV Control ECU
Headlight Beam Level Control ECU
ECM
Transmission Control ECU
Smart Key ECU
Skid Control ECU
Occupant Detection Sensor
Driver Side J/B
• Body ECU
• GAUGE Fuse
• AM1 Fuse
• IGN Fuse
• IG1 Relay
A/C ECU
Front Seat Inner Belt Assy
km/h or mph Select Switch
Airbag Sensor Assembly
Light Control Rheostat
P
I39211

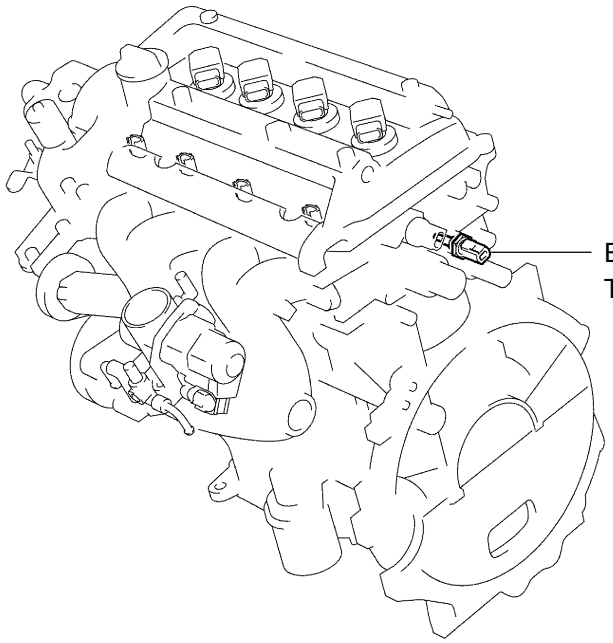

P

I39213