
SEAT BELT WARNING LAMP FOR DRIVER'S SEAT DOES NOT OPERATE

WIRING DIAGRAM


LHD Models:

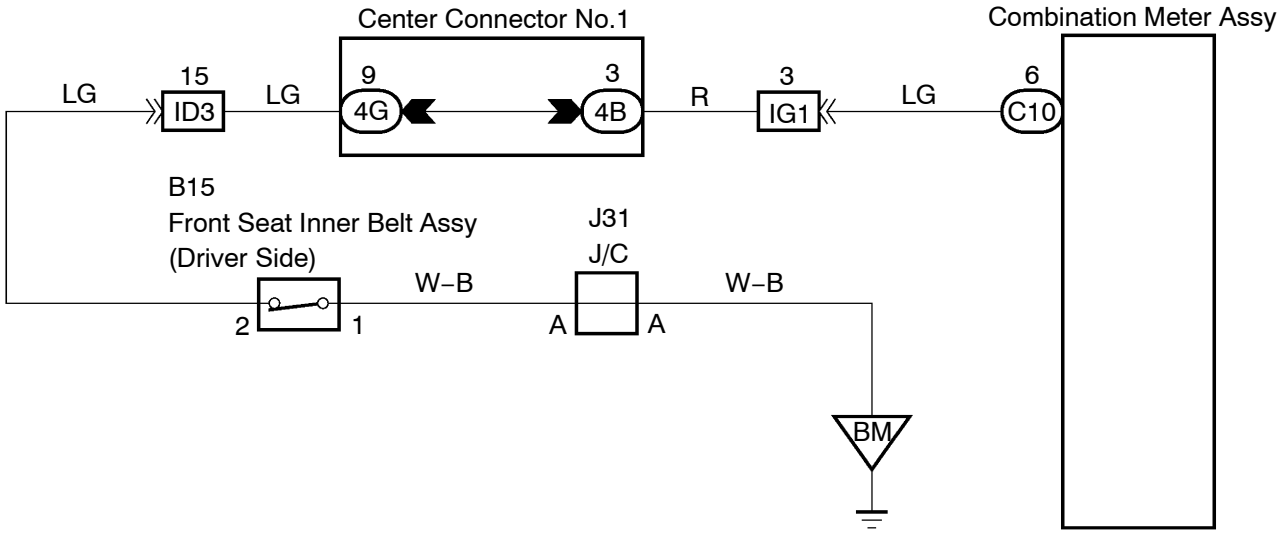

C

I39234

RHD Models:

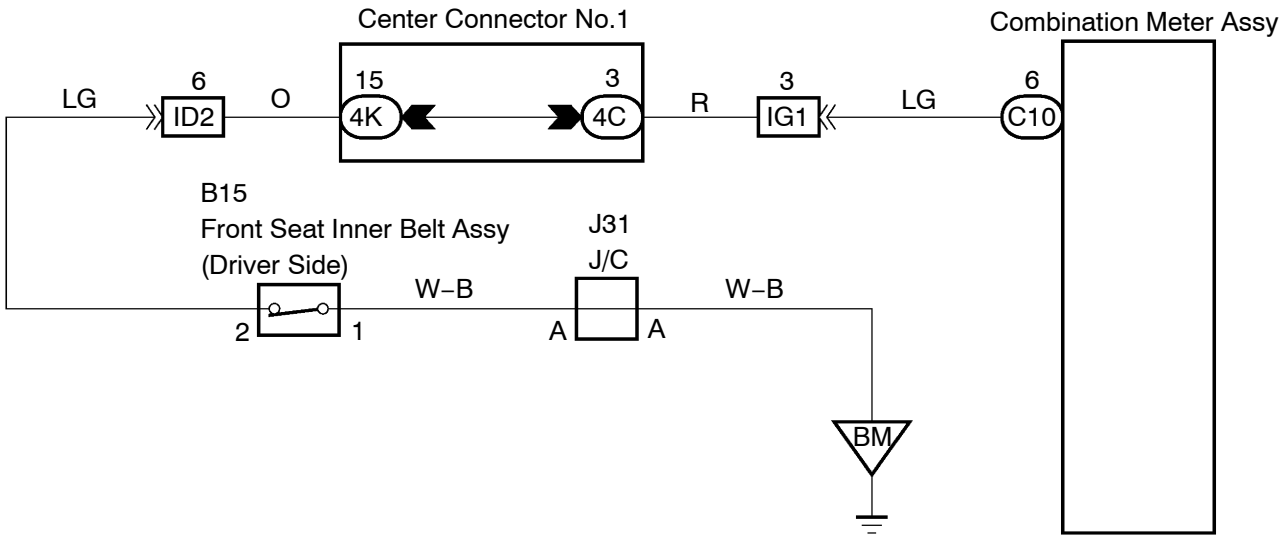


C

I39234

INSPECTION PROCEDURE

1	INSPECT FRONT SEAT INNER BELT ASSY(DRIVER SIDE)

Front Seat Inner Belt Assy (Driver Side)
Conector Front View:

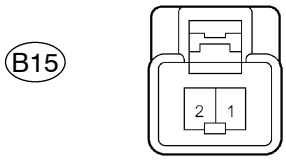

I40072

(a) Disconnect the connector from the front seat inner belt assy (Driver Side).
(b) Measure the resistance according to the value(s) in the table below.

Standard:


Terminal No	Condition	Specified condition
B15–1 – B15–2	Seat belt is fastened	10 kΩ or higher
B15–1 – B15–2	Seat belt is unfastened	Below 1 Ω

NG → **REPLACE FRONT SEAT INNER BELT ASSY (DRIVER SIDE)**


OK

2	CHECK HARNESS AND CONNECTOR(FRONT SEAT INNER BELT ASSY – COMBIATION METER ASSY)(SEE PAGE 01–36)

Front Seat Inner Belt Assy (Driver Side)
Wire Harness View:

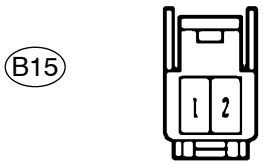

Combination Meter Assy
Wire Harness View:

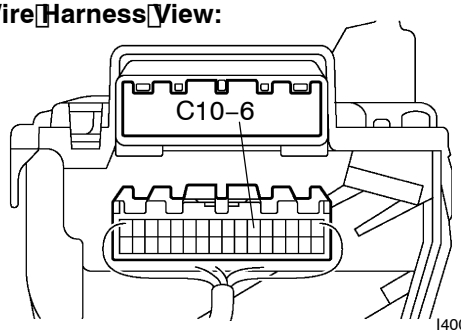

I40074

(a) Disconnect the C10 and B15 connectors.
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Condition	Specified Condition
C10–6 – B15–2	Always	Below 1 Ω
B15–1 – Body ground	Always	Below 1 Ω
C10–6 – Body ground	Always	10 kΩ or higher

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

REPLACE COMBINATION METER ASSY(SEE PAGE 71–19)