


05ICZ–01

LOCATION

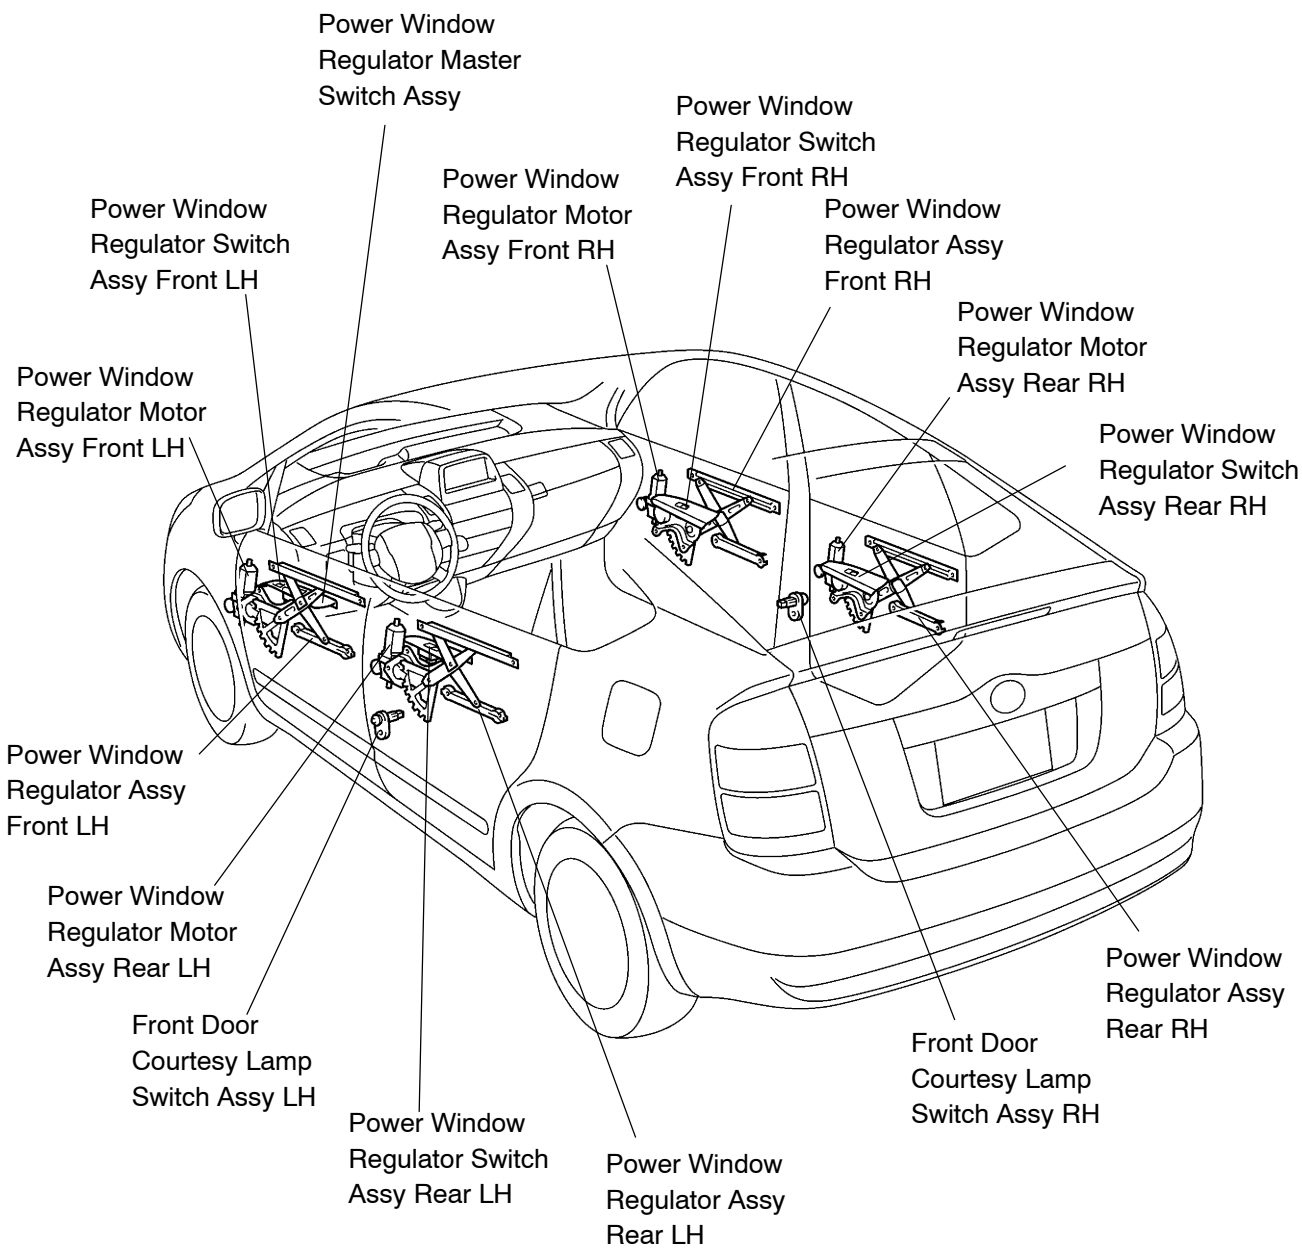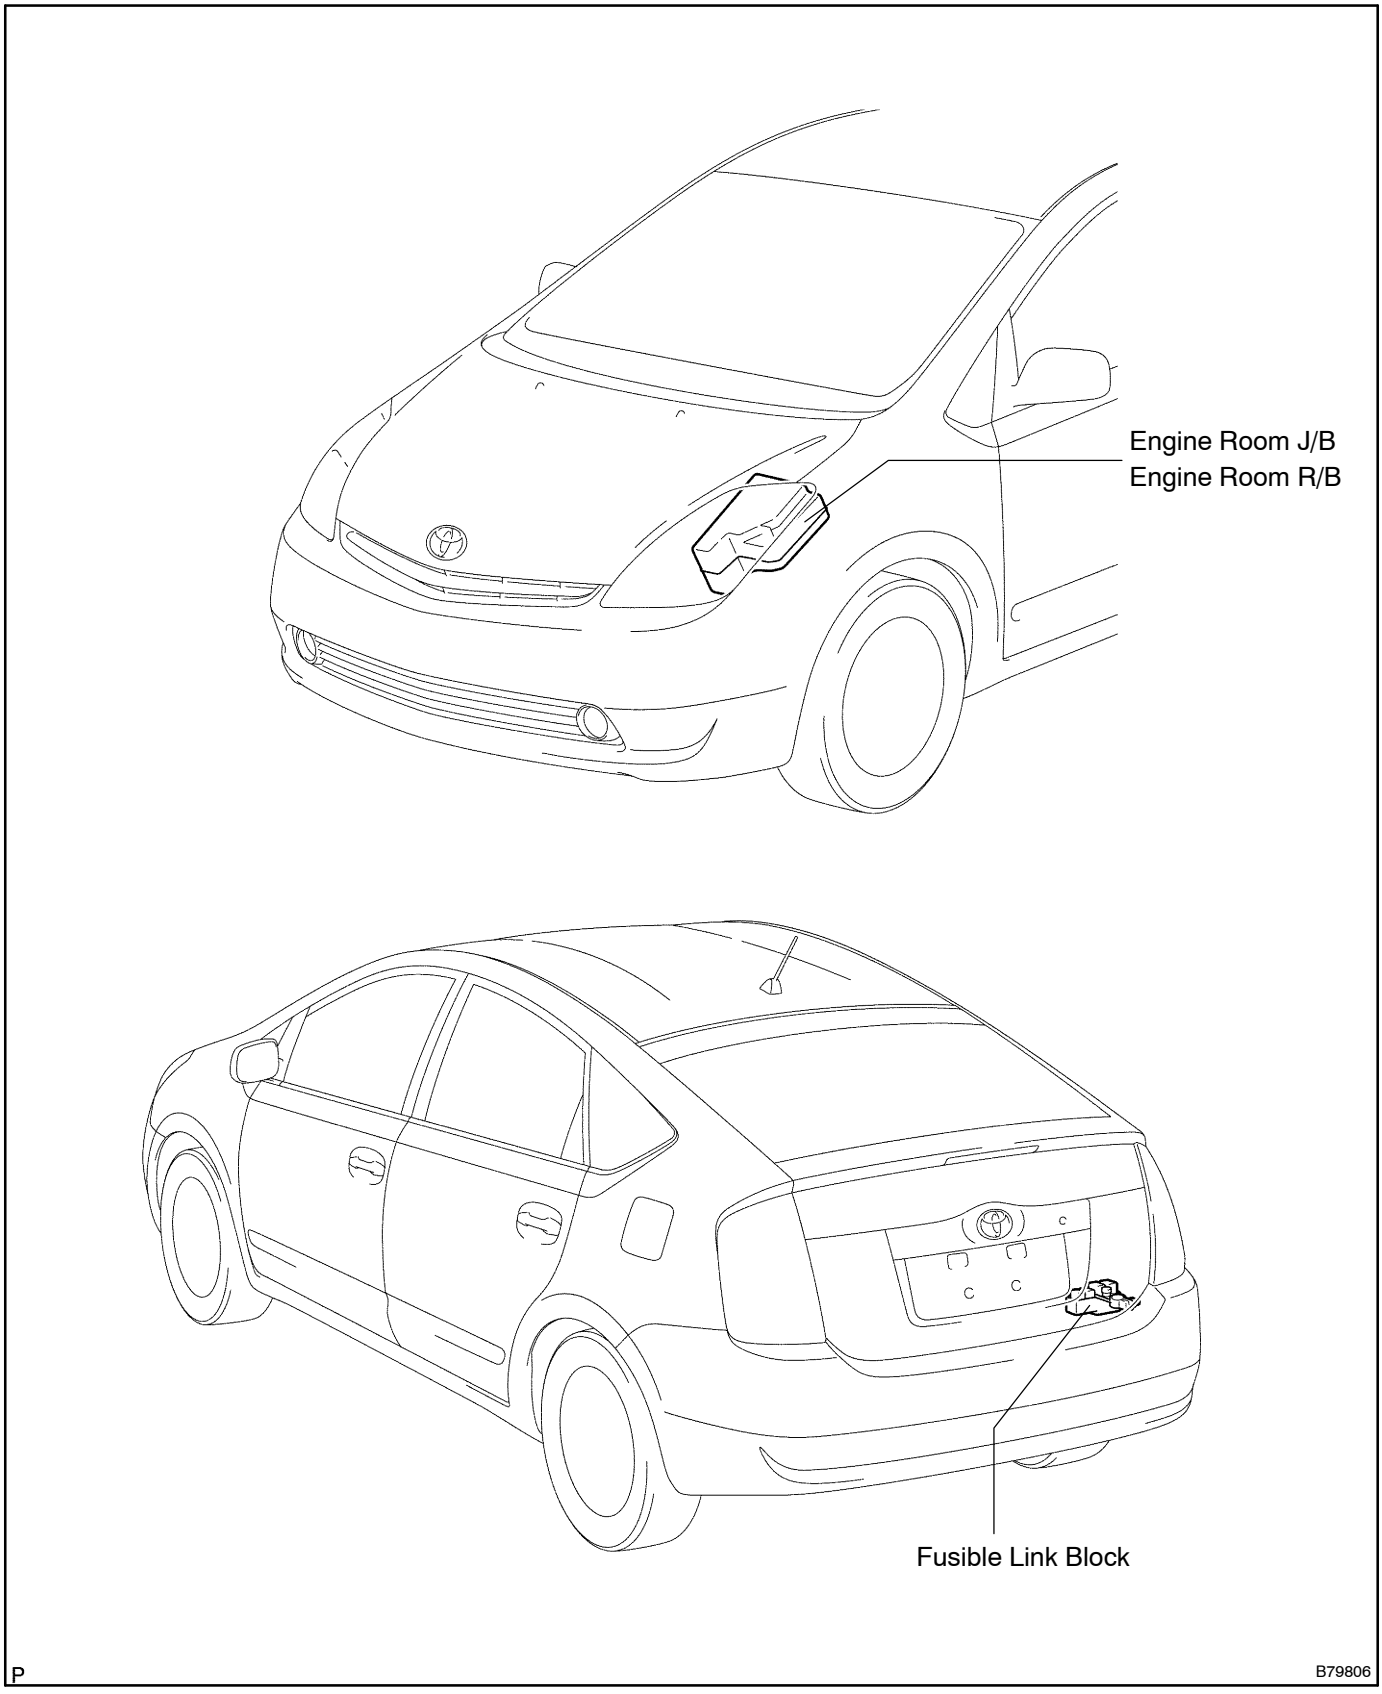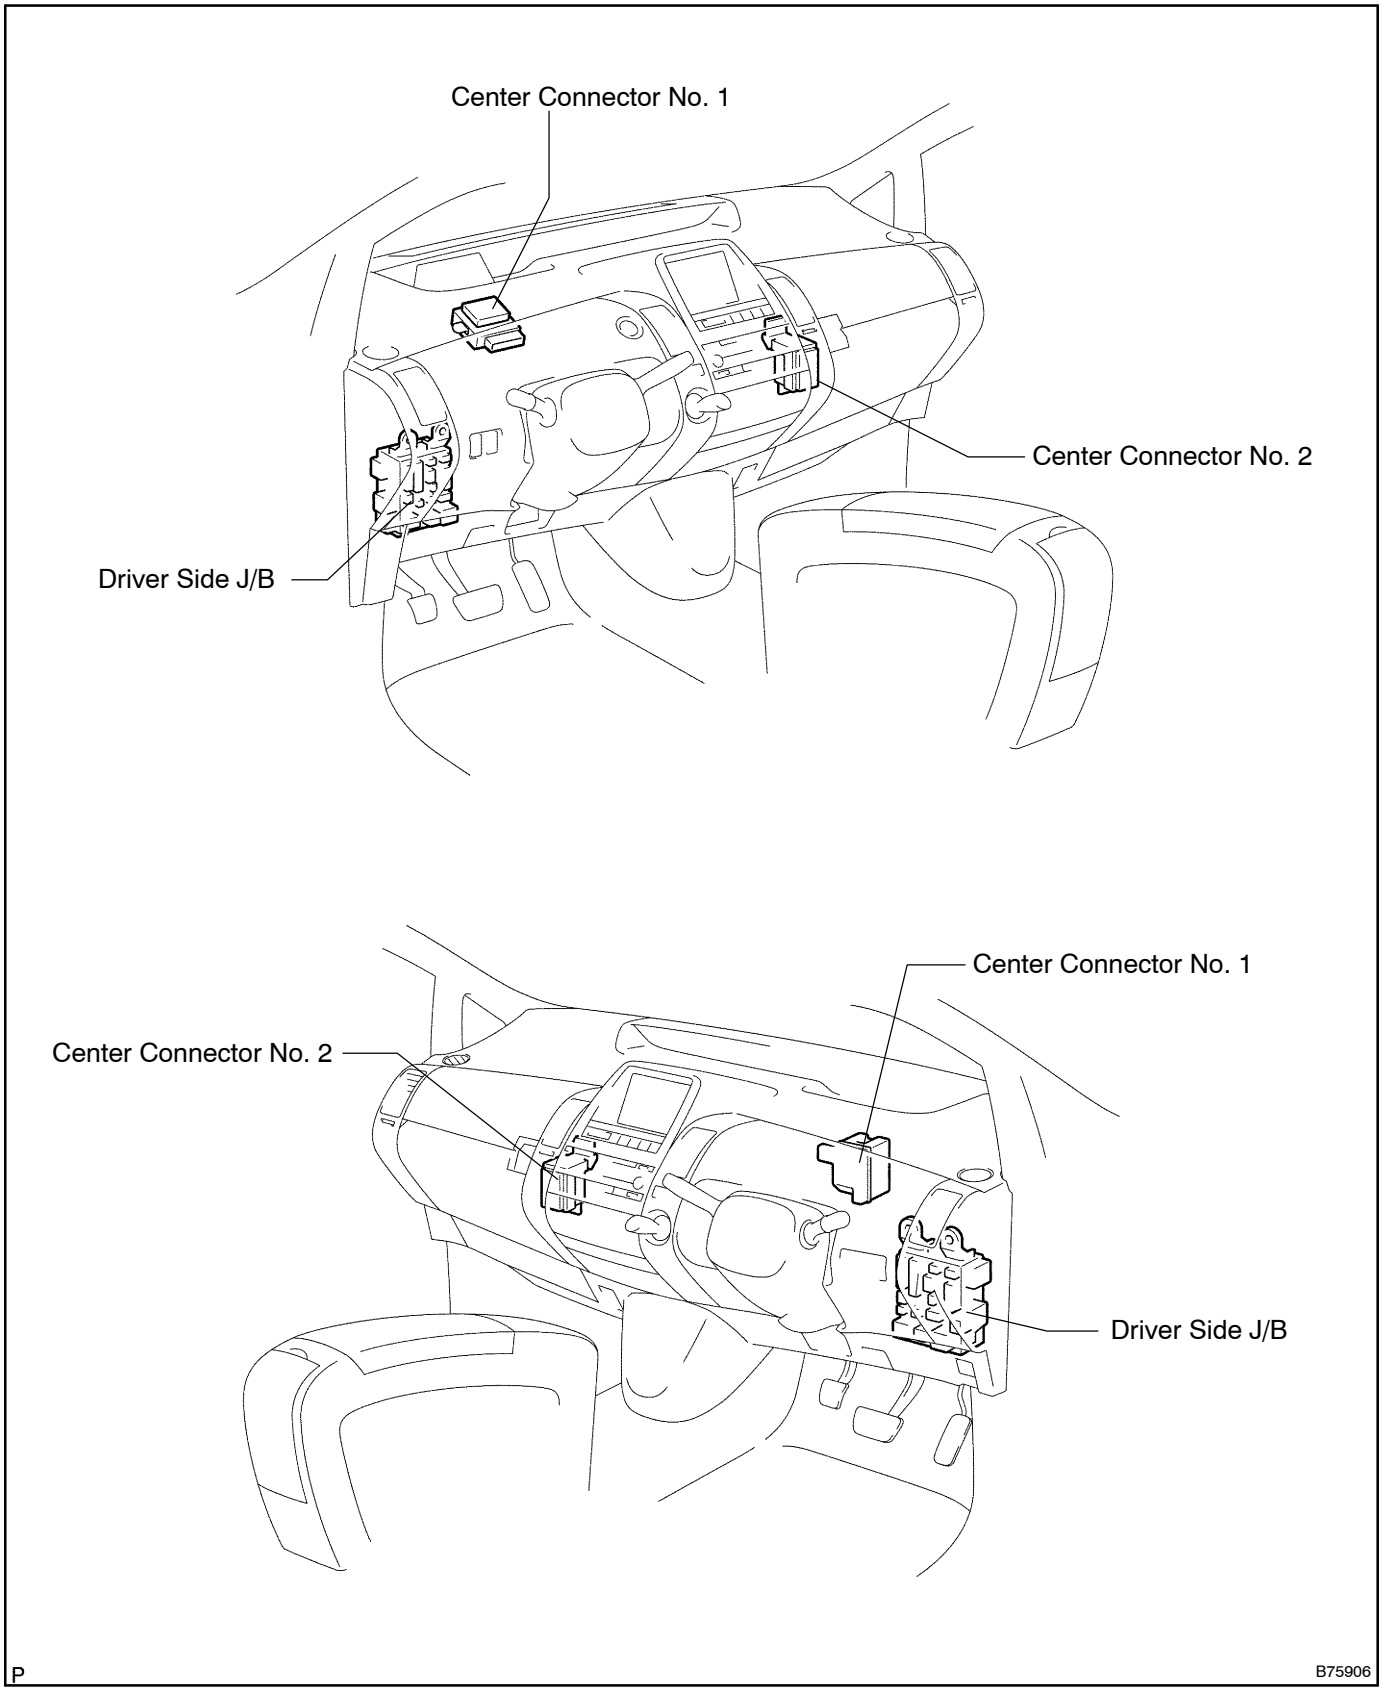


Engine Room J/B
Engine Room R/B
Fusible Link Block
P
B79806


Center Connector No. 1
Center Connector No. 2
Driver Side J/B
Center Connector No. 1
Center Connector No. 2
Driver Side J/B
P
B75906