

05IF5–01

LOCATION

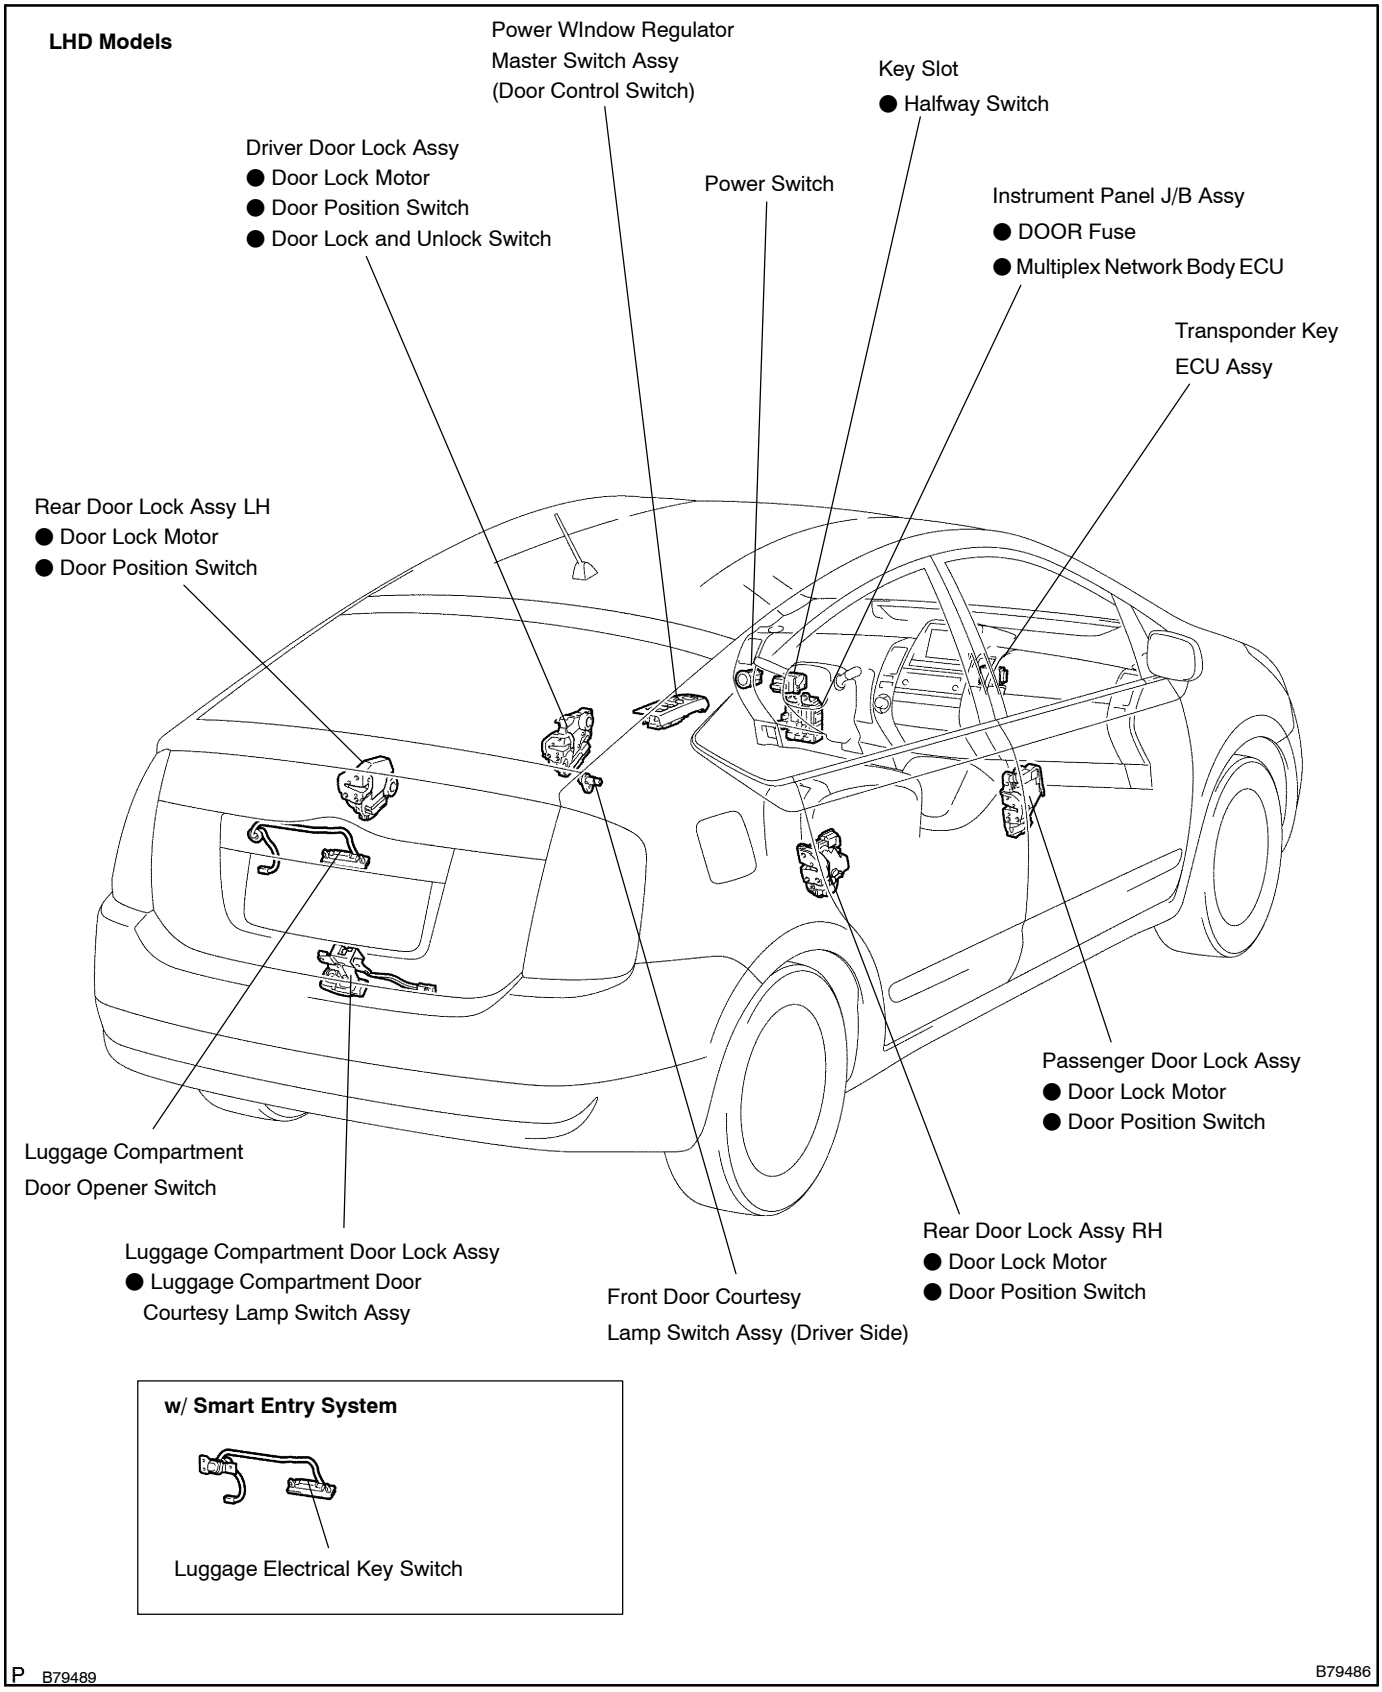

RHD Models

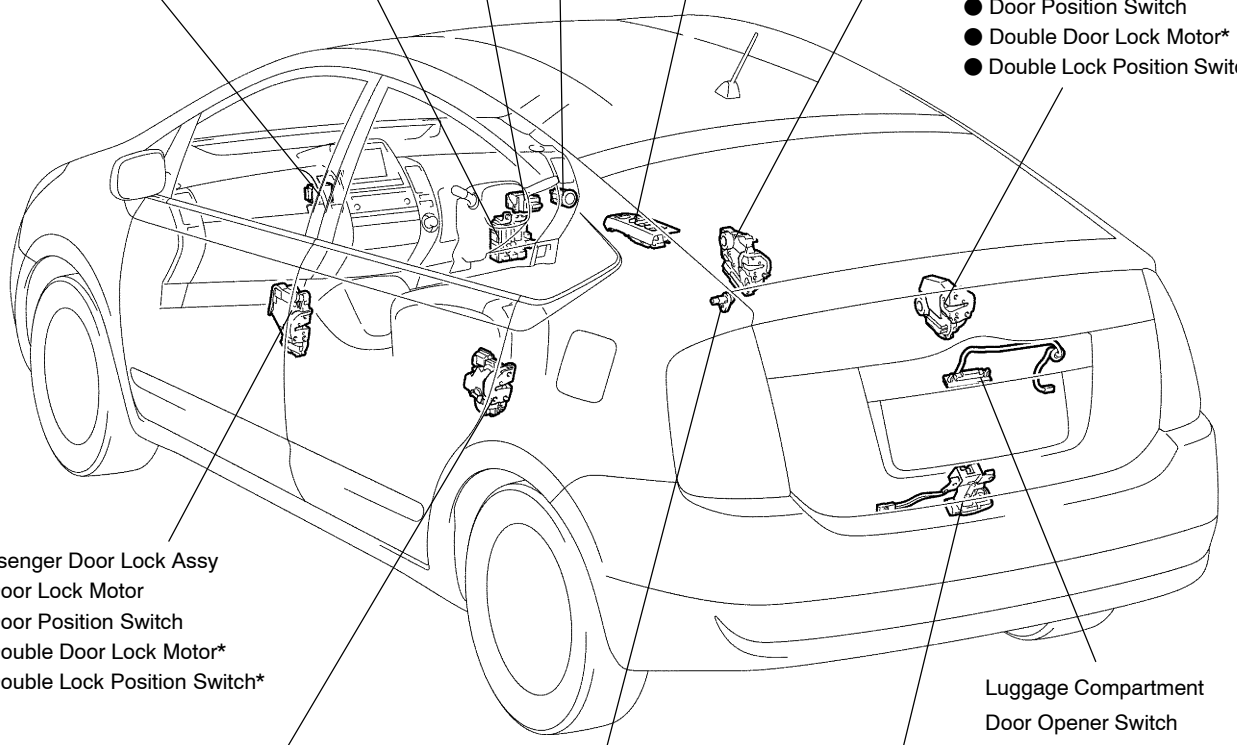

Key Slot
- Halfway Switch

Driver Door Lock Assy
- Door Lock Motor
- Door Position Switch
- Door Lock and Unlock Switch
- Double Door Lock Motor*
- Double Lock Position Switch*

Instrument Panel J/B Assy
- DOOR Fuse
- Multiplex Network Body ECU

Power Switch

Power WIndow Regulator Master Switch Assy (Door Control Switch)

Transponder Key ECU Assy

Rear Door Lock Assy RH
- Door Lock Motor
- Door Position Switch
- Double Door Lock Motor*
- Double Lock Position Switch*

Passenger Door Lock Assy
- Door Lock Motor
- Door Position Switch
- Double Door Lock Motor*
- Double Lock Position Switch*

Luggage Compartment Door Opener Switch

Rear Door Lock Assy LH
- Door Lock Motor
- Door Position Switch
- Double Door Lock Motor*
- Double Lock Position Switch*

Front Door Courtesy Lamp Switch Assy (Driver Side)

Luggage Compartment Door Lock Assy
- Luggage Compartment Door Courtesy Lamp Switch Assy

w/ Smart Entry System

Luggage Electrical Key Switch

*: w/ Double Lock System

P

B79487