
05IFK–01

DTC CHECK/CLEAR

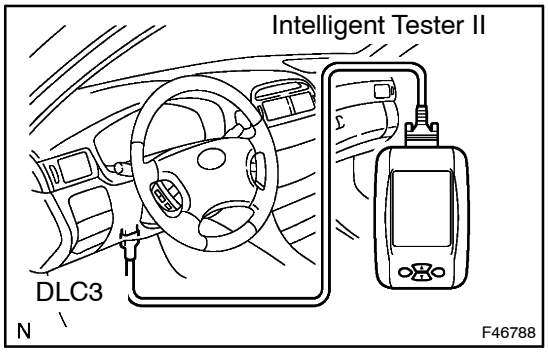

1. DTC CHECK

(a) Checking DTCs.
  (1) Connect the intelligent tester II to the DLC3.
  (2) Turn the power switch to ON (IG).
  (3) Read the DTCs following the prompts on the tester screen.

HINT:
Refer to the intelligent tester II operator's manual for further details.

2. CLEAR DTC

(a) Clearing the DTCs.
(b) Connect the intelligent tester II to the DLC3.
  (1) Turn the power switch to ON (IG).
  (2) Operate the intelligent tester II to clear the codes.

HINT:
Refer to the intelligent tester II operator's manual for further details.