
05IC6–01

INSPECTION

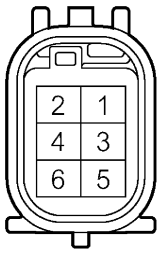

H

E67622

1. INSPECT OUTSIDE DOOR HANDLE

(a) Remove the outside door handle (see page 75–9).


(b) Check the resistance between the terminals of the connector when the switch is operated.

Standard:

Switch Condition	Tester Connection	Specified Condition
Switch pushed	1 – 3	Below 1 Ω
Switch not pushed	1 – 3	10 kΩ or higher

If the result is not as specified, replace the outside door handle.

Smart Key Cancel Switch

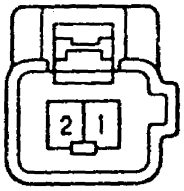

B50965

2. INSPECT SMART KEY CANCEL SWITCH

(a) Remove the outside door handle.

(b) Check the resistance between the terminals of the connector when the switch is operated.

Standard:

Switch Condition	Tester Connection	Specified Condition
Switch pushed	1 – 2	Below 1 Ω
Switch not pushed	1 – 2	10 kΩ or higher

If the result is not as specified, replace the smart system cancel switch.