
05IIR–01

INSPECTION

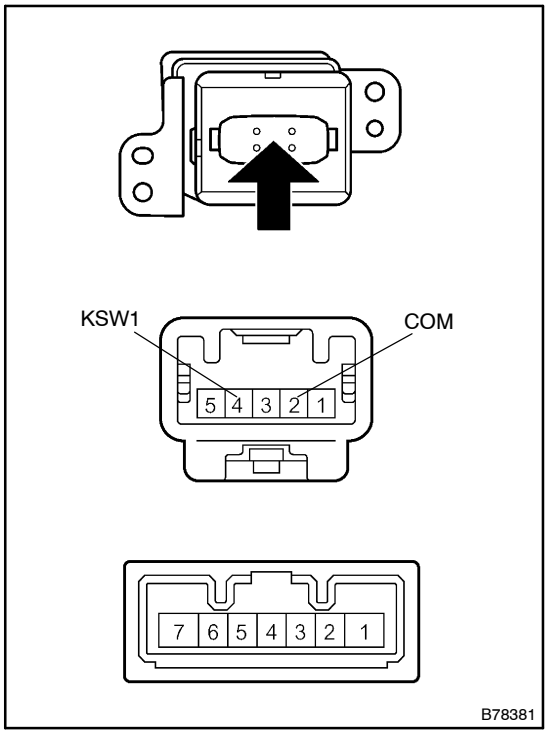

1. INSPECT KEY SLOT ASSY


(a) Remove the key slot assy.

(b) Measure the resistance of the slot.

Standard:

Tester Connection	Key Slot Condition	Specified Condition
4 (KSW1) – 2 (COM)	Key is in key slot	Below 1 Ω
4 (KSW1) – 2 (COM)	No key in is slot	10 kΩ or higher

If the result is not as specified, replace the slot assy.

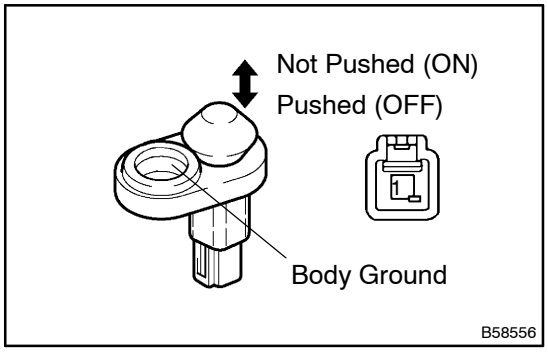

2. INSPECT FRONT DOOR COURTESY LAMP SWITCH ASSY (DRIVER SIDE)

(a) Remove the courtesy lamp switch.

(b) Measure the switch resistance.

Standard:

Tester Condition	Switch Condition	Specified Condition
1 – Body ground	Not Pushed	Below 1 Ω
1 – Body ground	Pushed	10 kΩ or higher