
05JEH–01

DTC CHECK/CLEAR

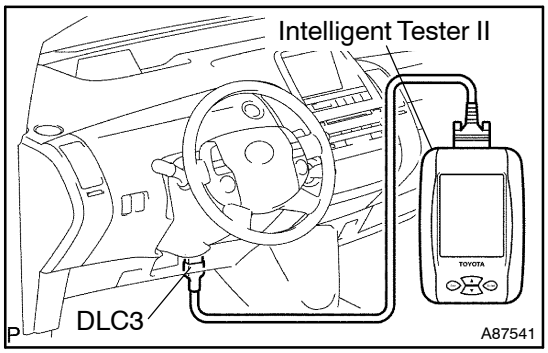

1. CHECK DTC

(a) Connect the intelligent tester II to the DLC3.

(b) Change the power switch's power mode to ON (IG) by pushing the power switch.

(c) Read the DTCs by following the directions on the tester's screen.

HINT:

Refer to the intelligent tester ll operator's manual for further details.

2. CLEAR DTC

(a) Connect the intelligent tester II to the DLC3.

(b) Change the power switch's power mode to ON (IG) by pushing the power switch.

(c) Erase the DTCs by following the directions on the tester's screen.

HINT:

Refer to the intelligent tester ll operator's manual for further details.