
05IE9–01

# DTC CHECK/CLEAR

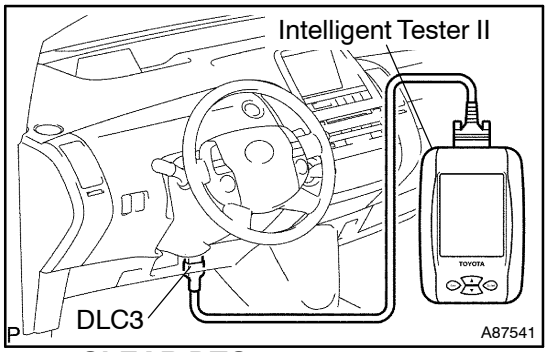


**1. CHECK DTC**

(a) Connect the intelligent tester II to the DLC3.
(b) Turn the power switch ON (IG).
(c) Read the DTCs by following the directions on the tester's screen.

HINT:
Refer to the intelligent tester ll operator's manual for further details.

**2. CLEAR DTC**

(a) Connect the intelligent tester II to the DLC3.
(b) Turn the power switch ON (IG).
(c) Erase the DTCs by following the directions on the tester's screen.

HINT:
Refer to the intelligent tester ll operator's manual for further details.