

05ICB–01


LOCATION

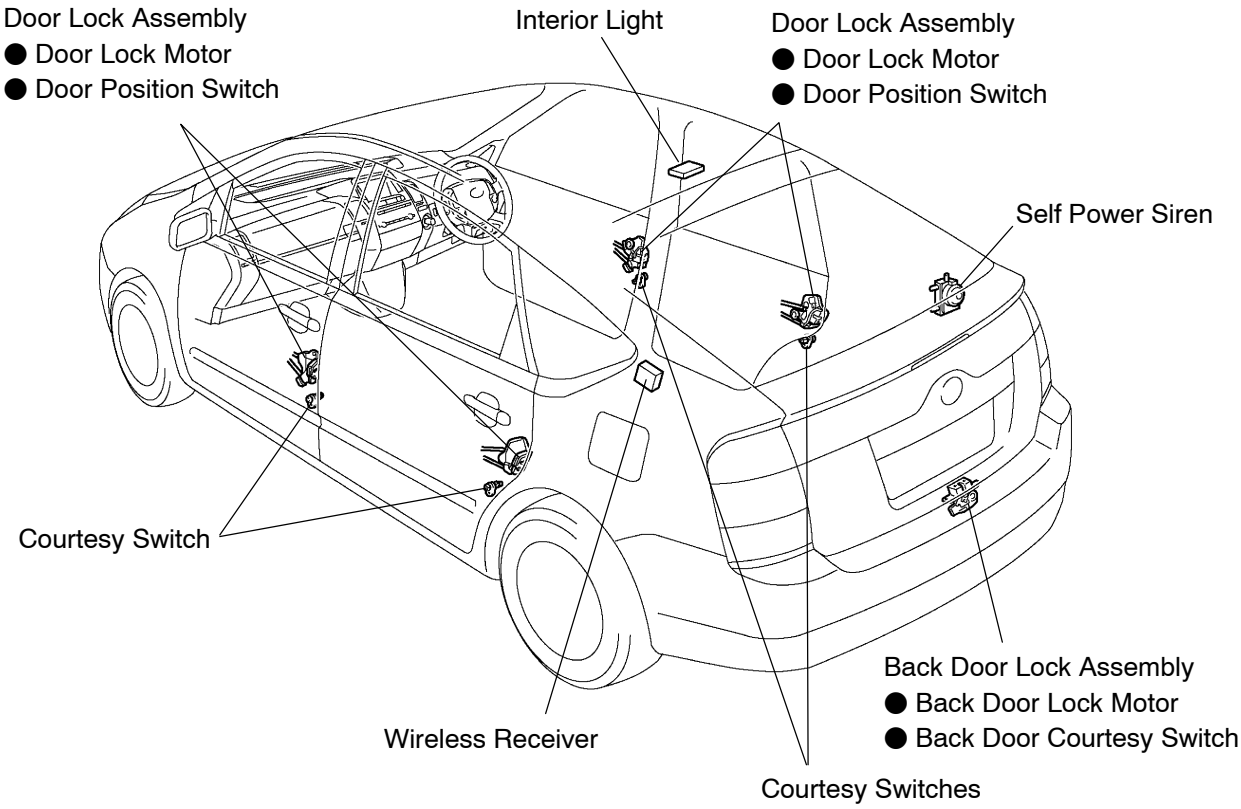

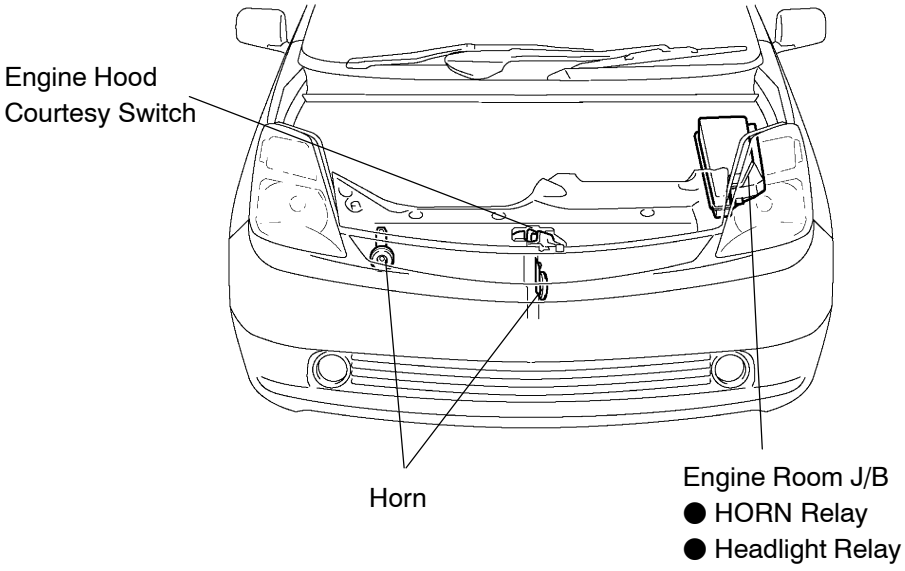

Y

B75929

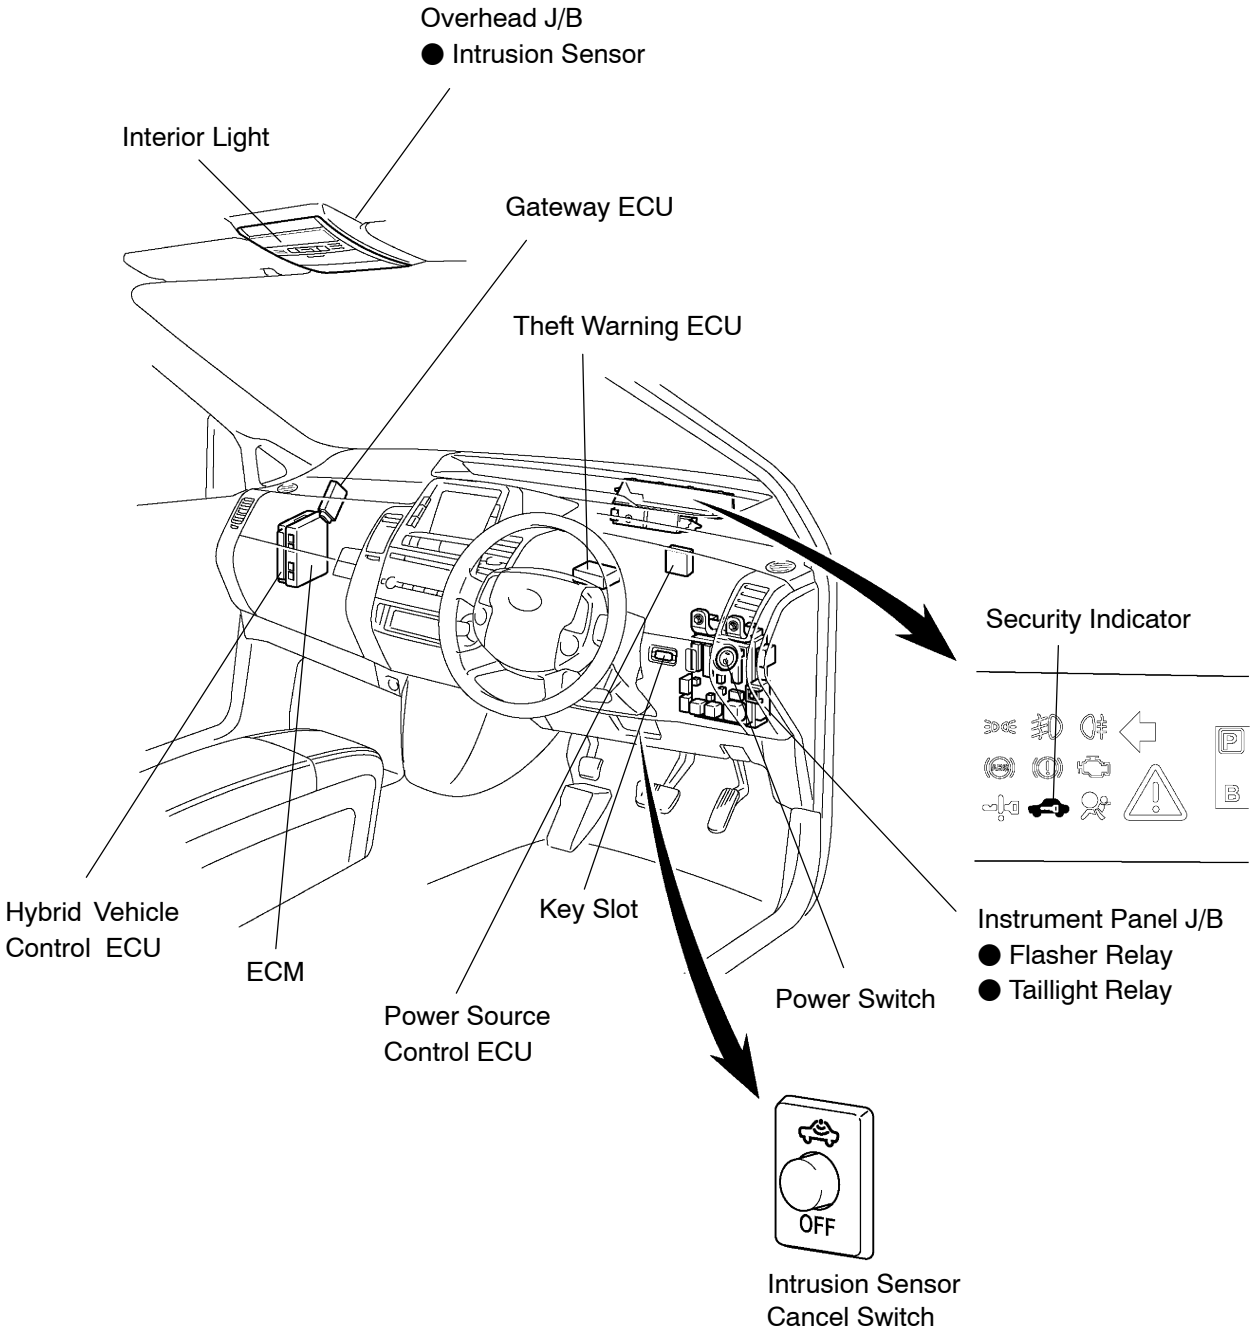
Overhead J/B
● Intrusion Sensor
Interior Light
Gateway ECU
Theft Warning ECU
Security Indicator
Hybrid Vehicle
Control ECU
ECM
Key Slot
Power Source
Control ECU
Power Switch
Instrument Panel J/B
● Flasher Relay
● Taillight Relay
OFF
Intrusion Sensor
Cancel Switch
B75930

Y