
ECU POWER SOURCE CIRCUIT

CIRCUIT DESCRIPTION

This circuit provides power to operate the theft warning ECU.

WIRING DIAGRAM

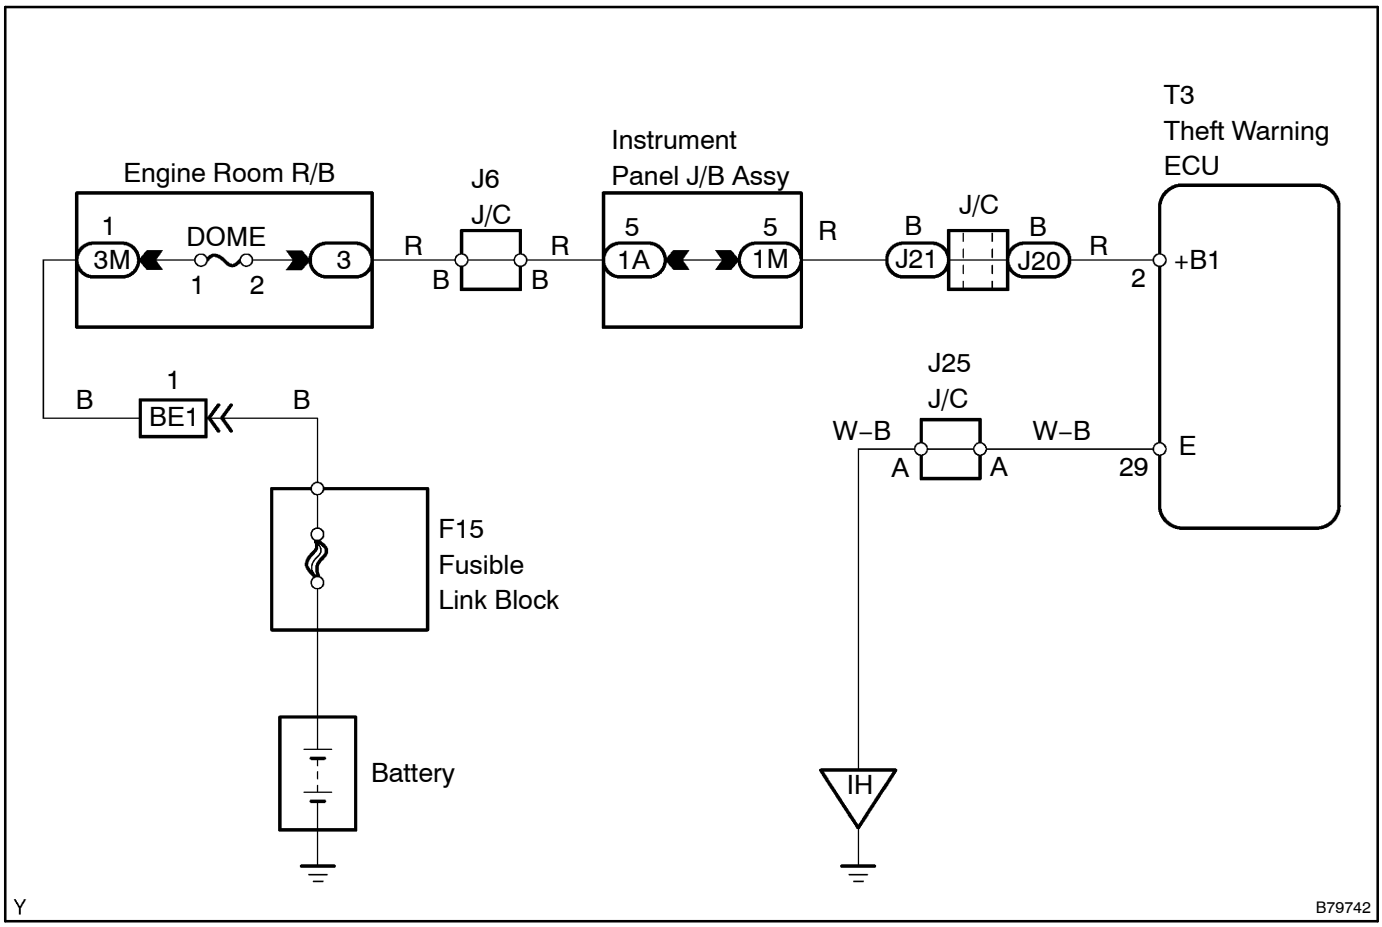

INSPECTION PROCEDURE

1	INSPECT FUSE (DOME)


(a) Remove the DOME fuse from the engine room R/B.
(b) Measure the resistance.
Standard: Below 1 Ω

NG → **REPLACE FUSE**

OK

2	CHECK WIRE HARNESS

Wire Harness Side

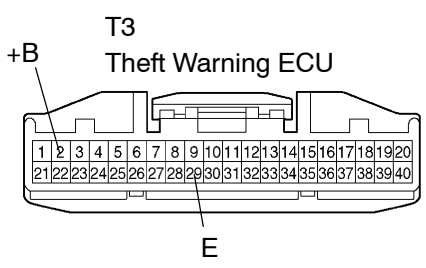

(a) Disconnect the T3 ECU connector.

(b) Measure the voltage and resistance of the wire harness side connector.

Standard:

Tester Connection	Specified Condition
T3–2 (+B1) – Body ground	10 to 14 V
T3–29 (E) – Body ground	Below 1 Ω

NG → **REPAIR OR REPLACE HARNESS AND CONNECTOR**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (See page 05–2209)