
05HHR–01

SYSTEM DIAGRAM

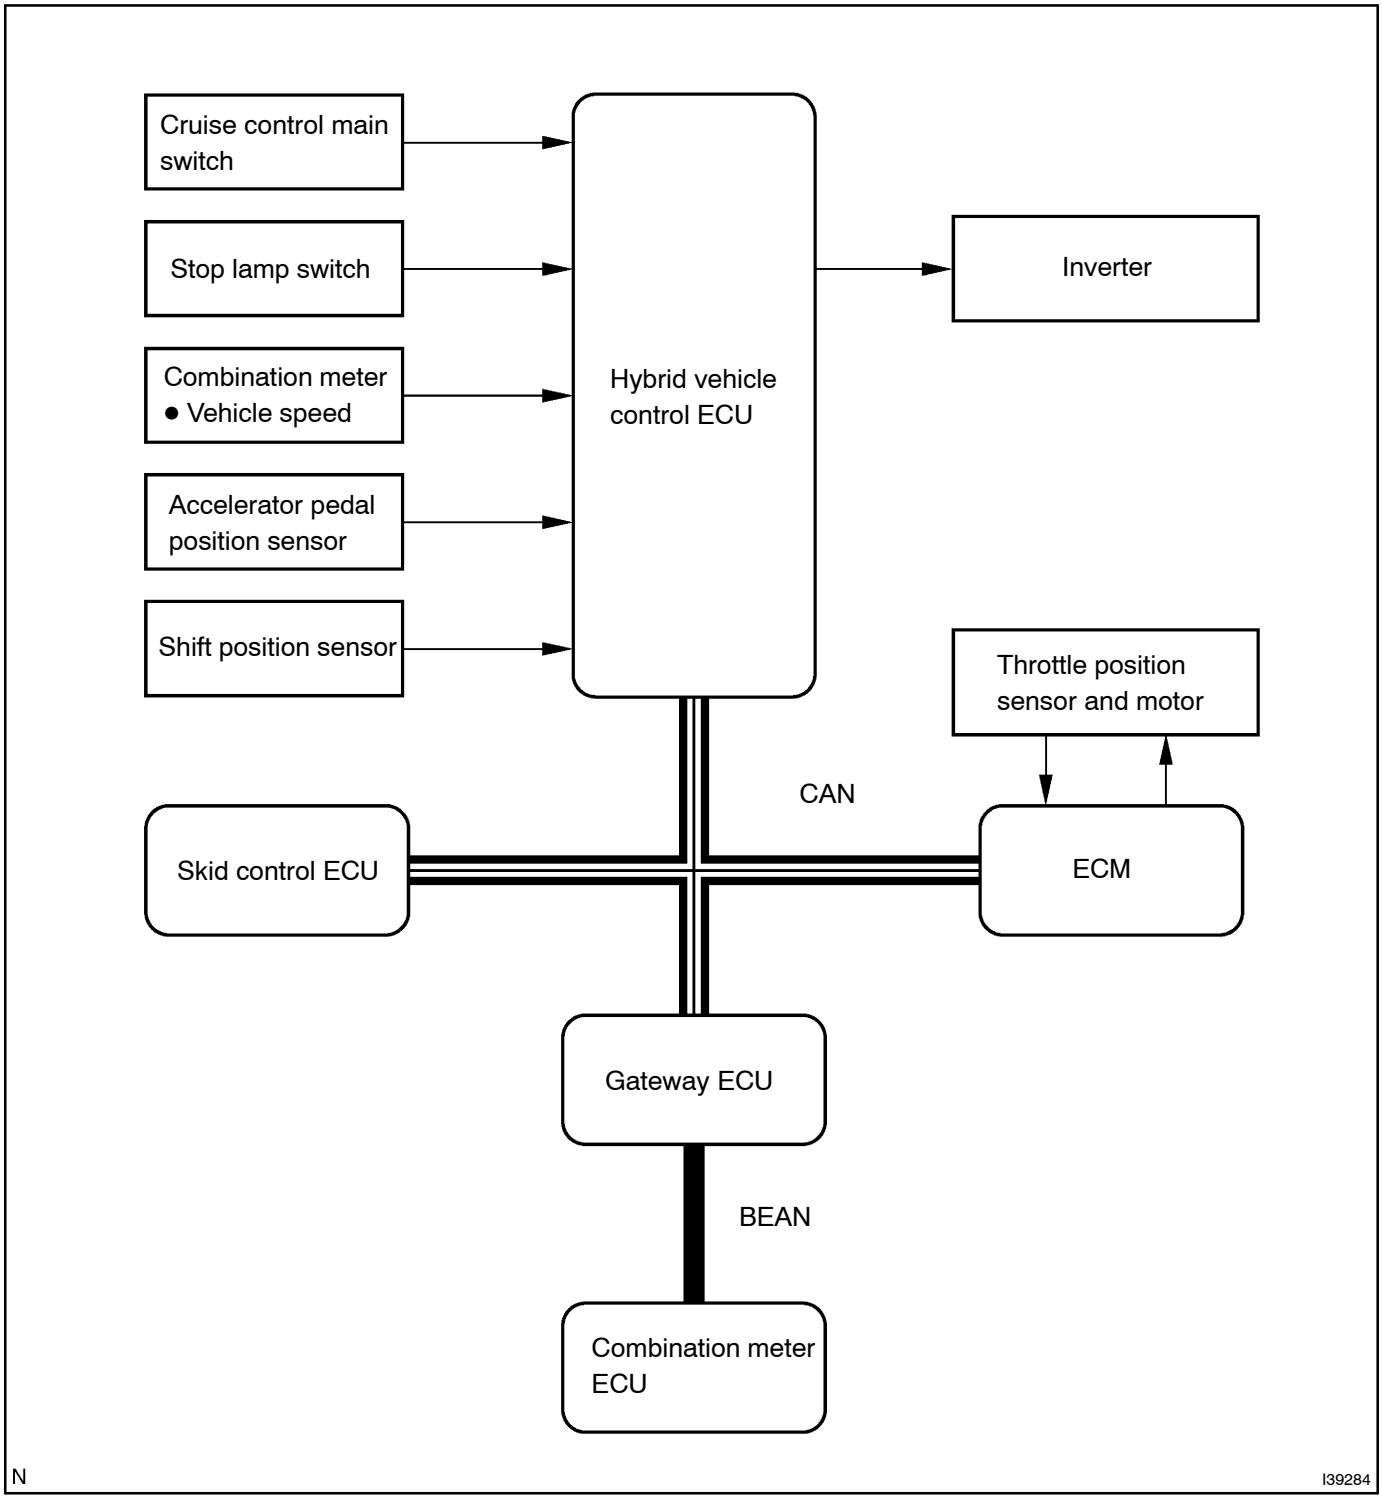

Transmitting ECU (transmitter)	Receiveing ECU	Signals	Communication Method
Hybrid Vehicle Control ECU	ECM	• Engine torque demand signal	• CAN
Hybrid Vehicle Control ECU	Combination Meter ECU	• CRUISE main indicator signal • Cruise control warning signal	• CAN • BEAN
Skid Control ECU	Hybrid Vehicle Control ECU	• Cruise control cancel signal	• CAN