
05HIH–01

DTC CHECK/CLEAR

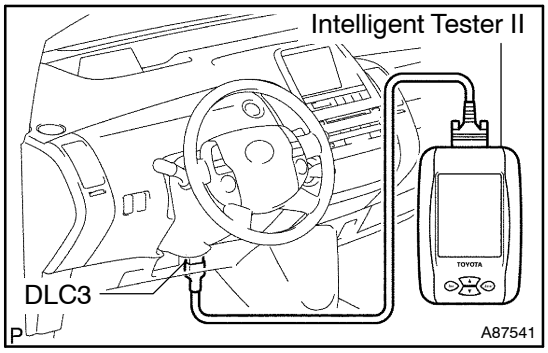

1. CHECK FOR DTCs

(a) Using the intelligent tester II, check for DTCs.
  (1) Connect the intelligent tester II to the DLC3.
  (2) Turn the power switch on (IG).
  (3) Read the DTCs on the tester screen.

HINT:

The intelligent tester II has a "Snapshot" function which records the monitored data.

Refer to the intelligent tester II operator's manual for further details.

2. CLEAR THE DTCs

(a) Using the intelligent tester II, clear the DTCs.
  (1) Connect the intelligent tester II to the DLC3.
  (2) Turn the power switch on (IG).
  (3) Clear the DTCs by following the prompts on the tester screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.