
MASS AIR FLOW METER (1NZ–FXE)

100MA–01

REPLACEMENT

1. REMOVE REAR FLOOR BOARD NO.2 (See page 19–2)
2. REMOVE DECK FLOOR BOX REAR (See page 19–2)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 19–2)
4. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19–2)

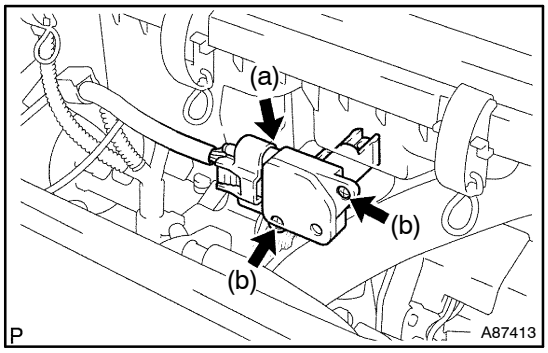

5. REMOVE MASS AIR FLOW METER
(a) Disconnect the mass air flow meter connector.
(b) Remove the 2 screws, then remove the mass air flow meter.

6. INSTALL MASS AIR FLOW METER

NOTICE:

Be careful that the O–ring is not cracked or jammed when installing.

7. CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19–2)
8. INSTALL REAR FLOOR BOARD NO.3
9. INSTALL DECK FLOOR BOX REAR
10. INSTALL REAR FLOOR BOARD NO.2
11. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01–29)