
FUEL INJECTOR ASSY (1NZ–FXE)

COMPONENTS

1111M–01

LHD Steering Position Type:

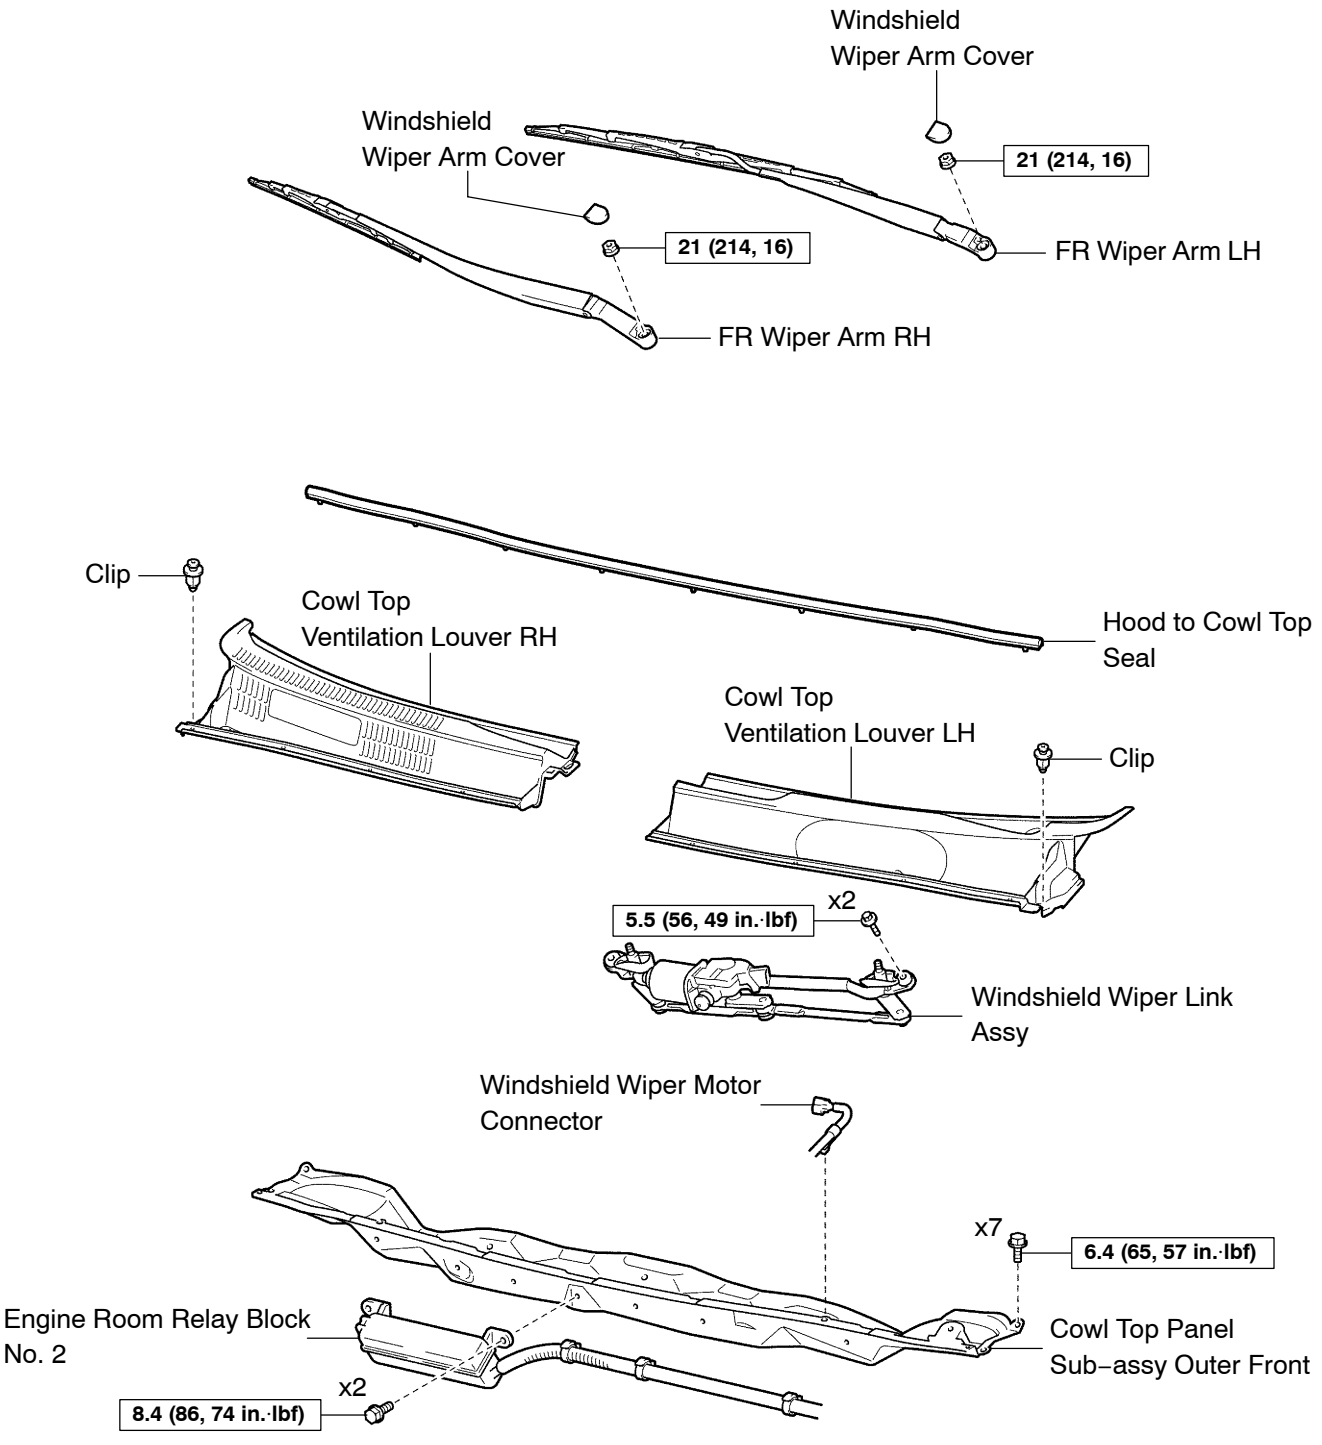


N·m (kgf·cm, ft·lbf) : Specified torque

P


A86311


RHD Steering Position Type:

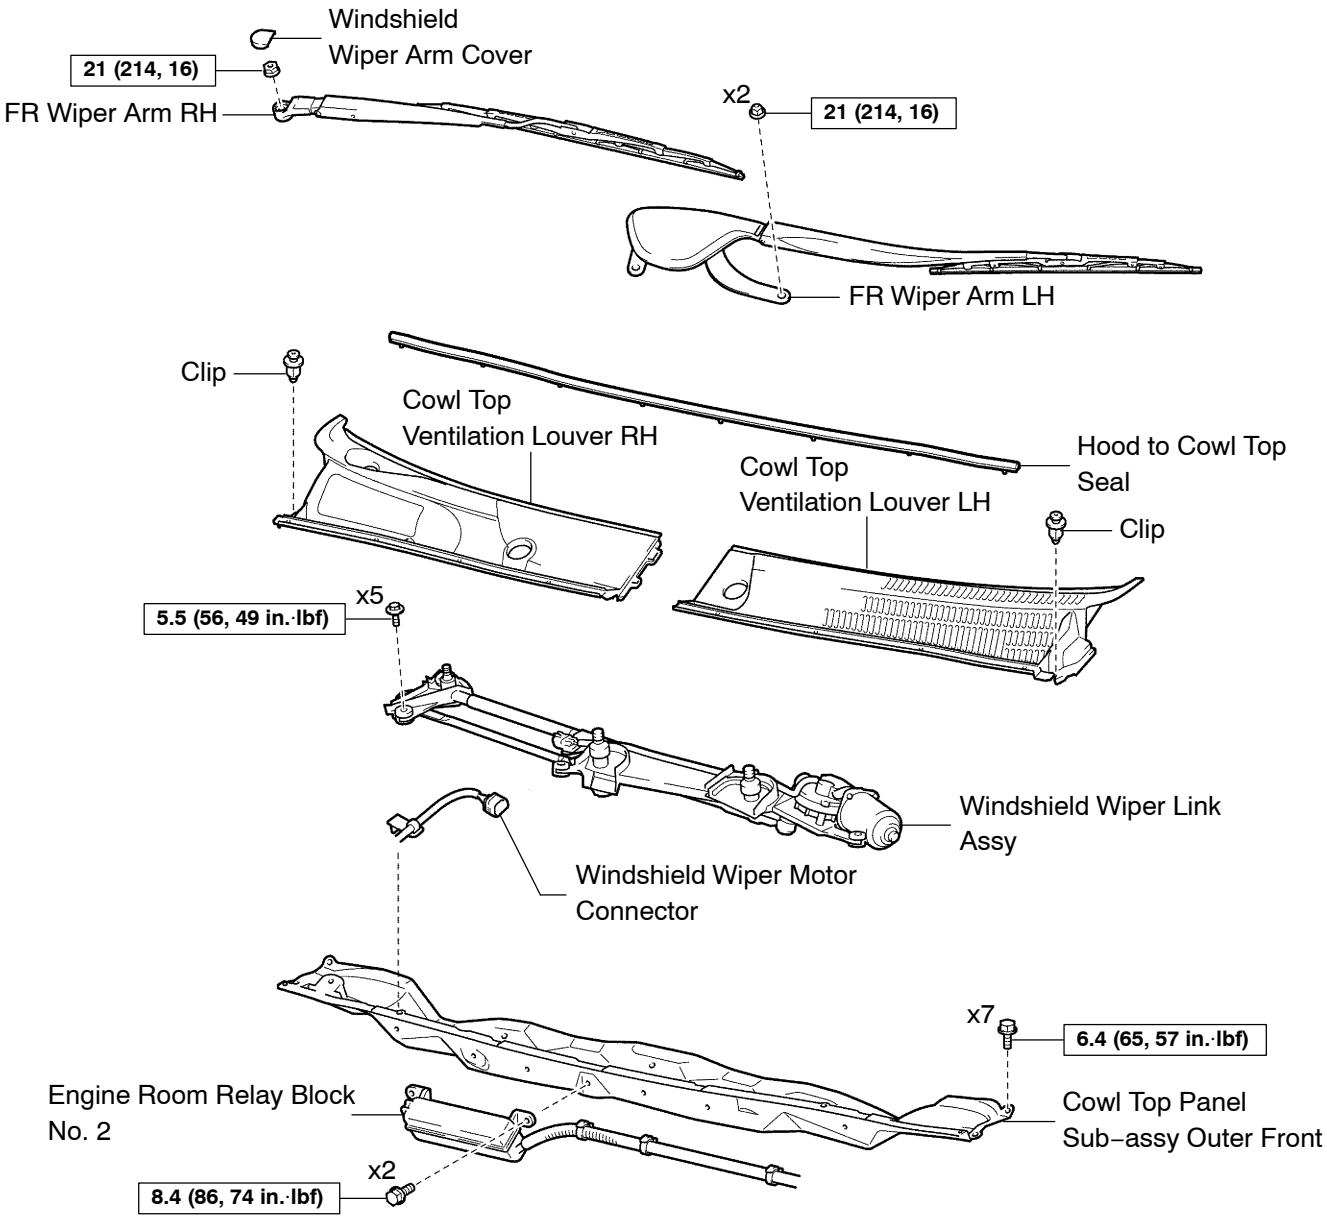

N·m (kgf·cm, ft·lbf) : Specified torque

A86312

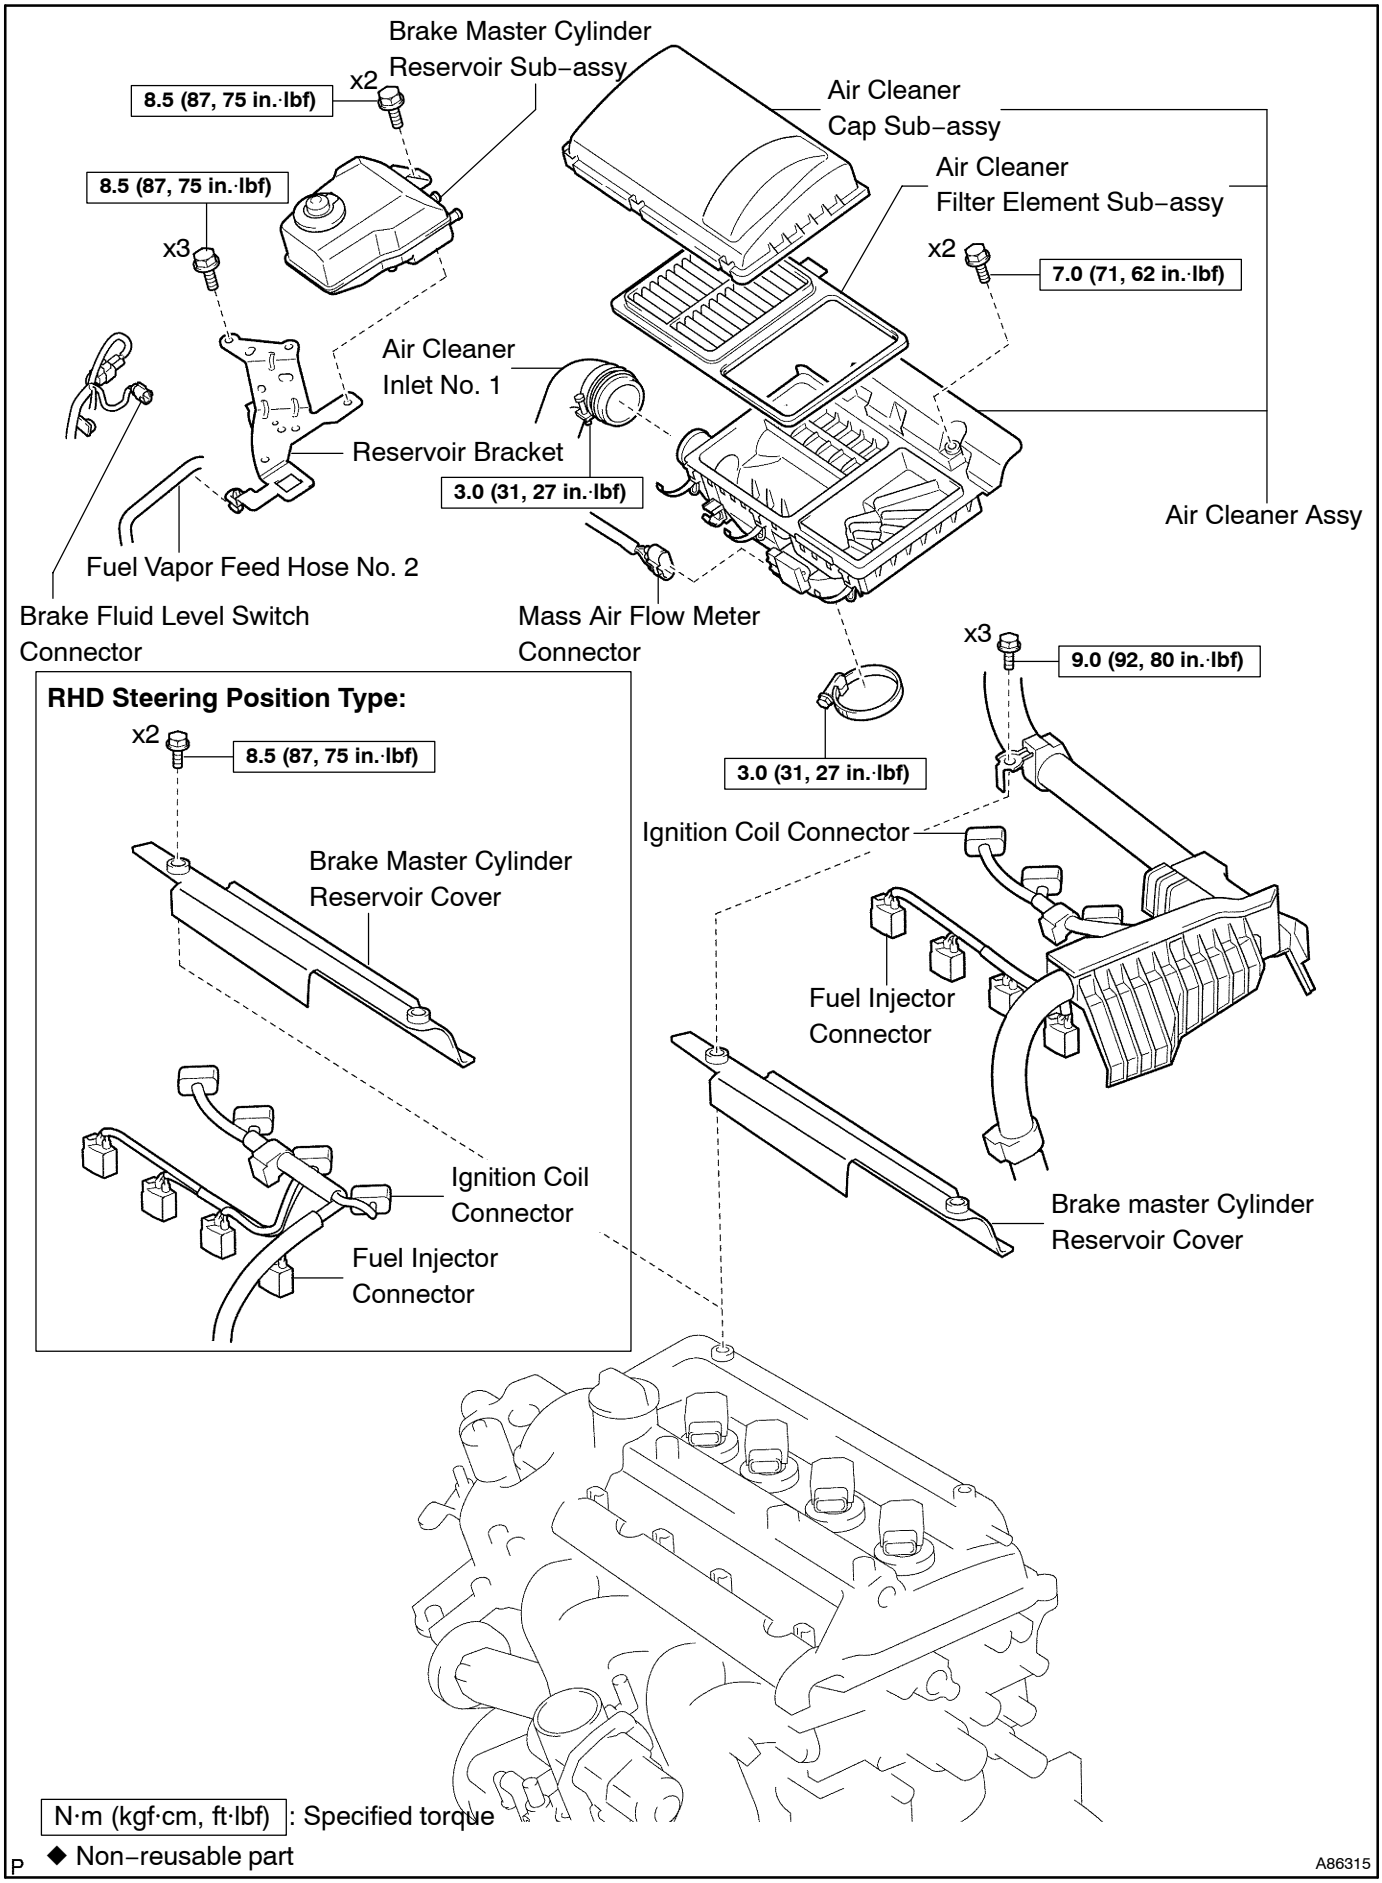
Brake Master Cylinder Reservoir Sub–assy
x2
8.5 (87, 75 in.·lbf)
8.5 (87, 75 in.·lbf)
x3
Air Cleaner Cap Sub–assy
Air Cleaner Filter Element Sub–assy
x2
7.0 (71, 62 in.·lbf)
Air Cleaner Inlet No. 1
Reservoir Bracket
3.0 (31, 27 in.·lbf)
Air Cleaner Assy
Fuel Vapor Feed Hose No. 2
Brake Fluid Level Switch Connector
Mass Air Flow Meter Connector
x3
9.0 (92, 80 in.·lbf)
3.0 (31, 27 in.·lbf)
Ignition Coil Connector
Fuel Injector Connector
Brake master Cylinder Reservoir Cover
RHD Steering Position Type:
x2
8.5 (87, 75 in.·lbf)
Brake Master Cylinder Reservoir Cover
Ignition Coil Connector
Fuel Injector Connector
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A86315

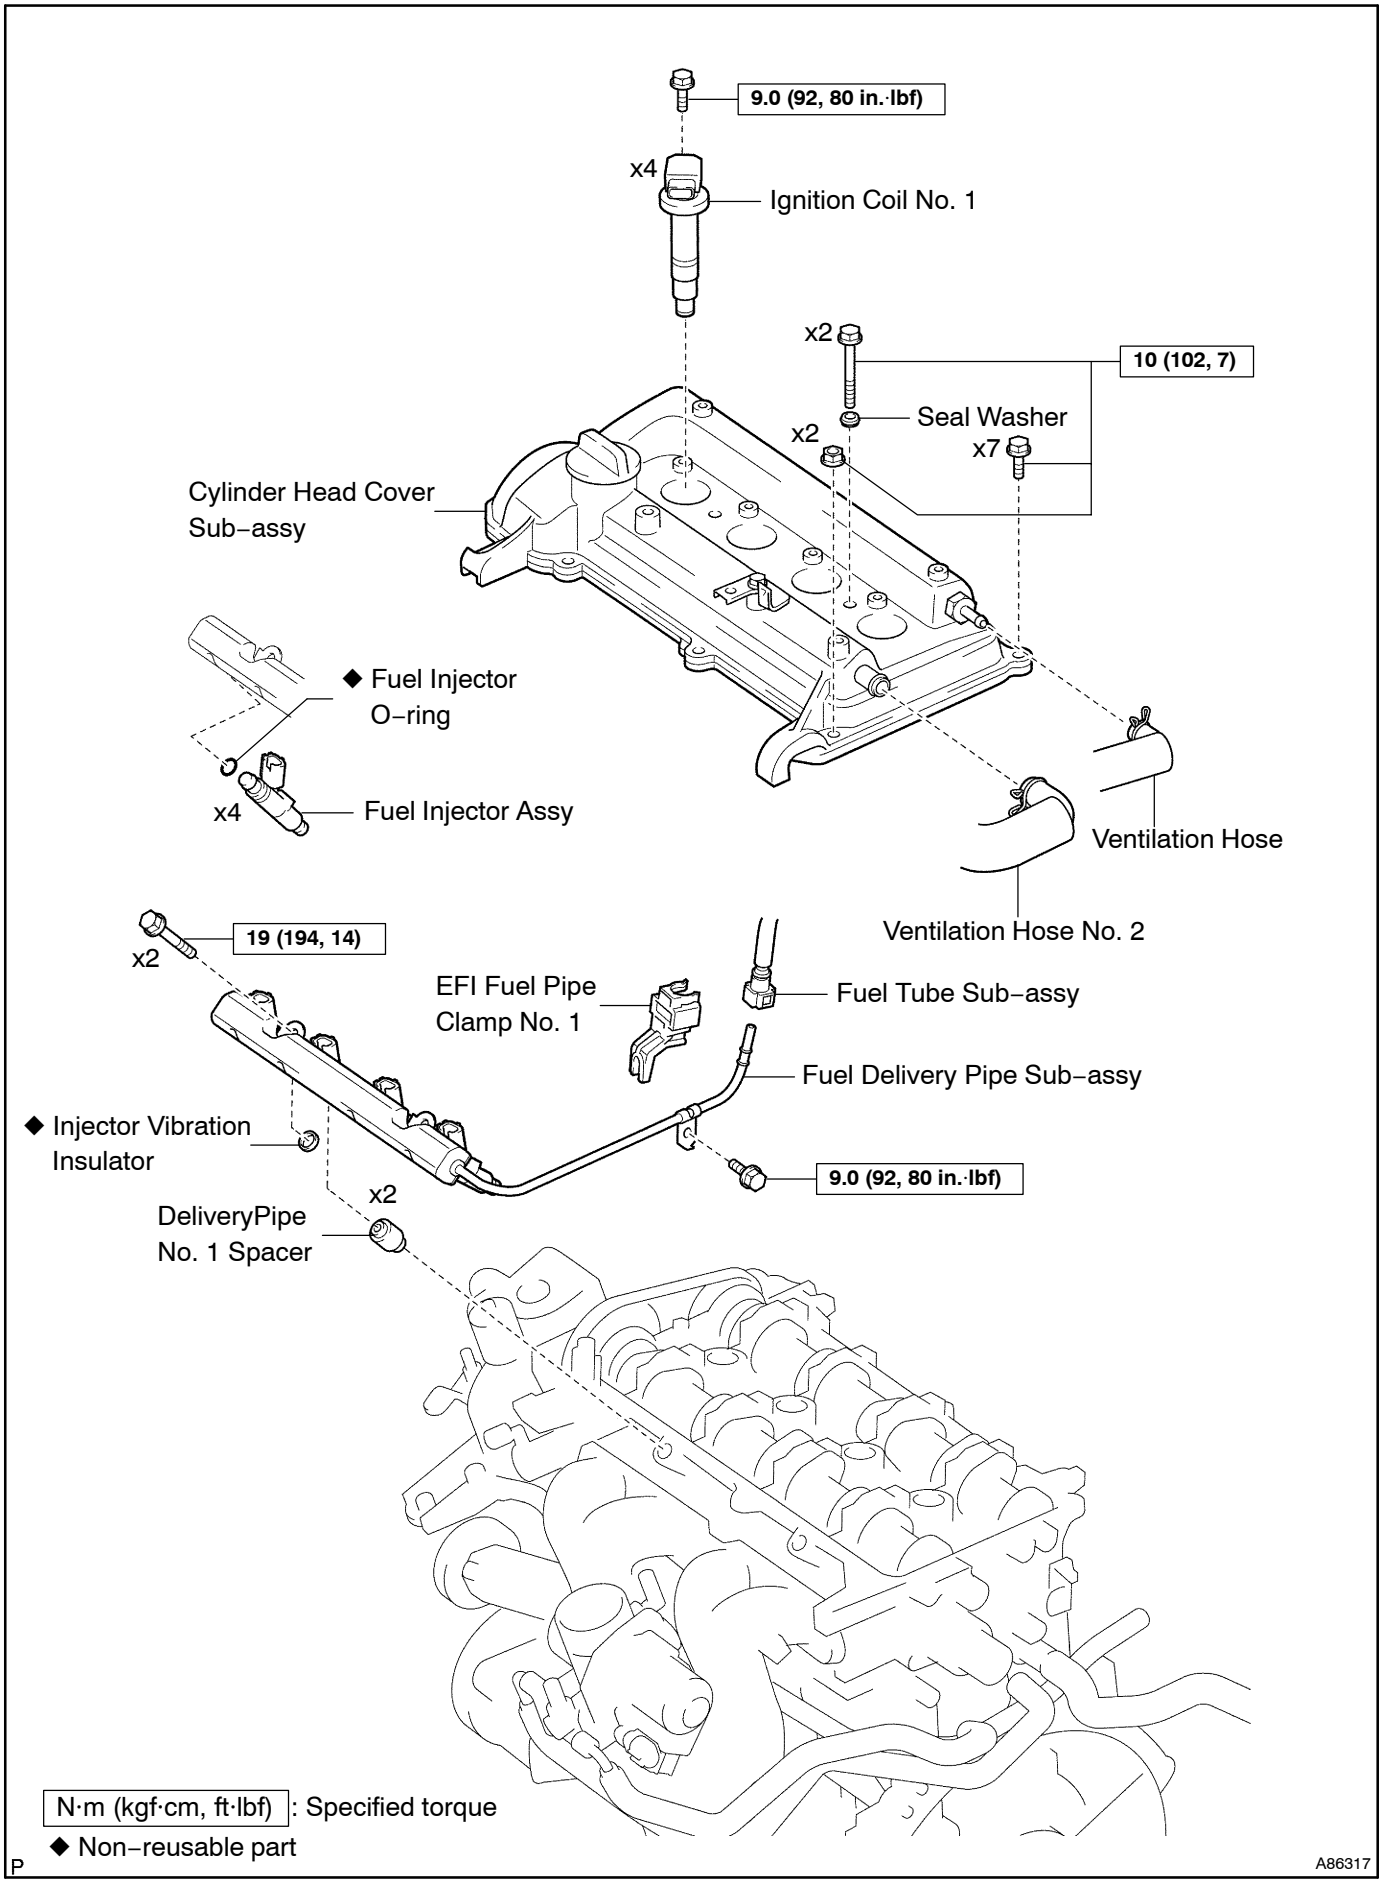
9.0 (92, 80 in.·lbf)
x4
Ignition Coil No. 1
x2
10 (102, 7)
Seal Washer
x2
x7
Cylinder Head Cover
Sub–assy
◆ Fuel Injector
O–ring
x4
Fuel Injector Assy
Ventilation Hose
Ventilation Hose No. 2
19 (194, 14)
x2
EFI Fuel Pipe
Clamp No. 1
Fuel Tube Sub–assy
Fuel Delivery Pipe Sub–assy
◆ Injector Vibration
Insulator
9.0 (92, 80 in.·lbf)
x2
DeliveryPipe
No. 1 Spacer
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
A86317