

FUEL TANK ASSY (1NZ–FXE)

COMPONENTS

1111Q–01

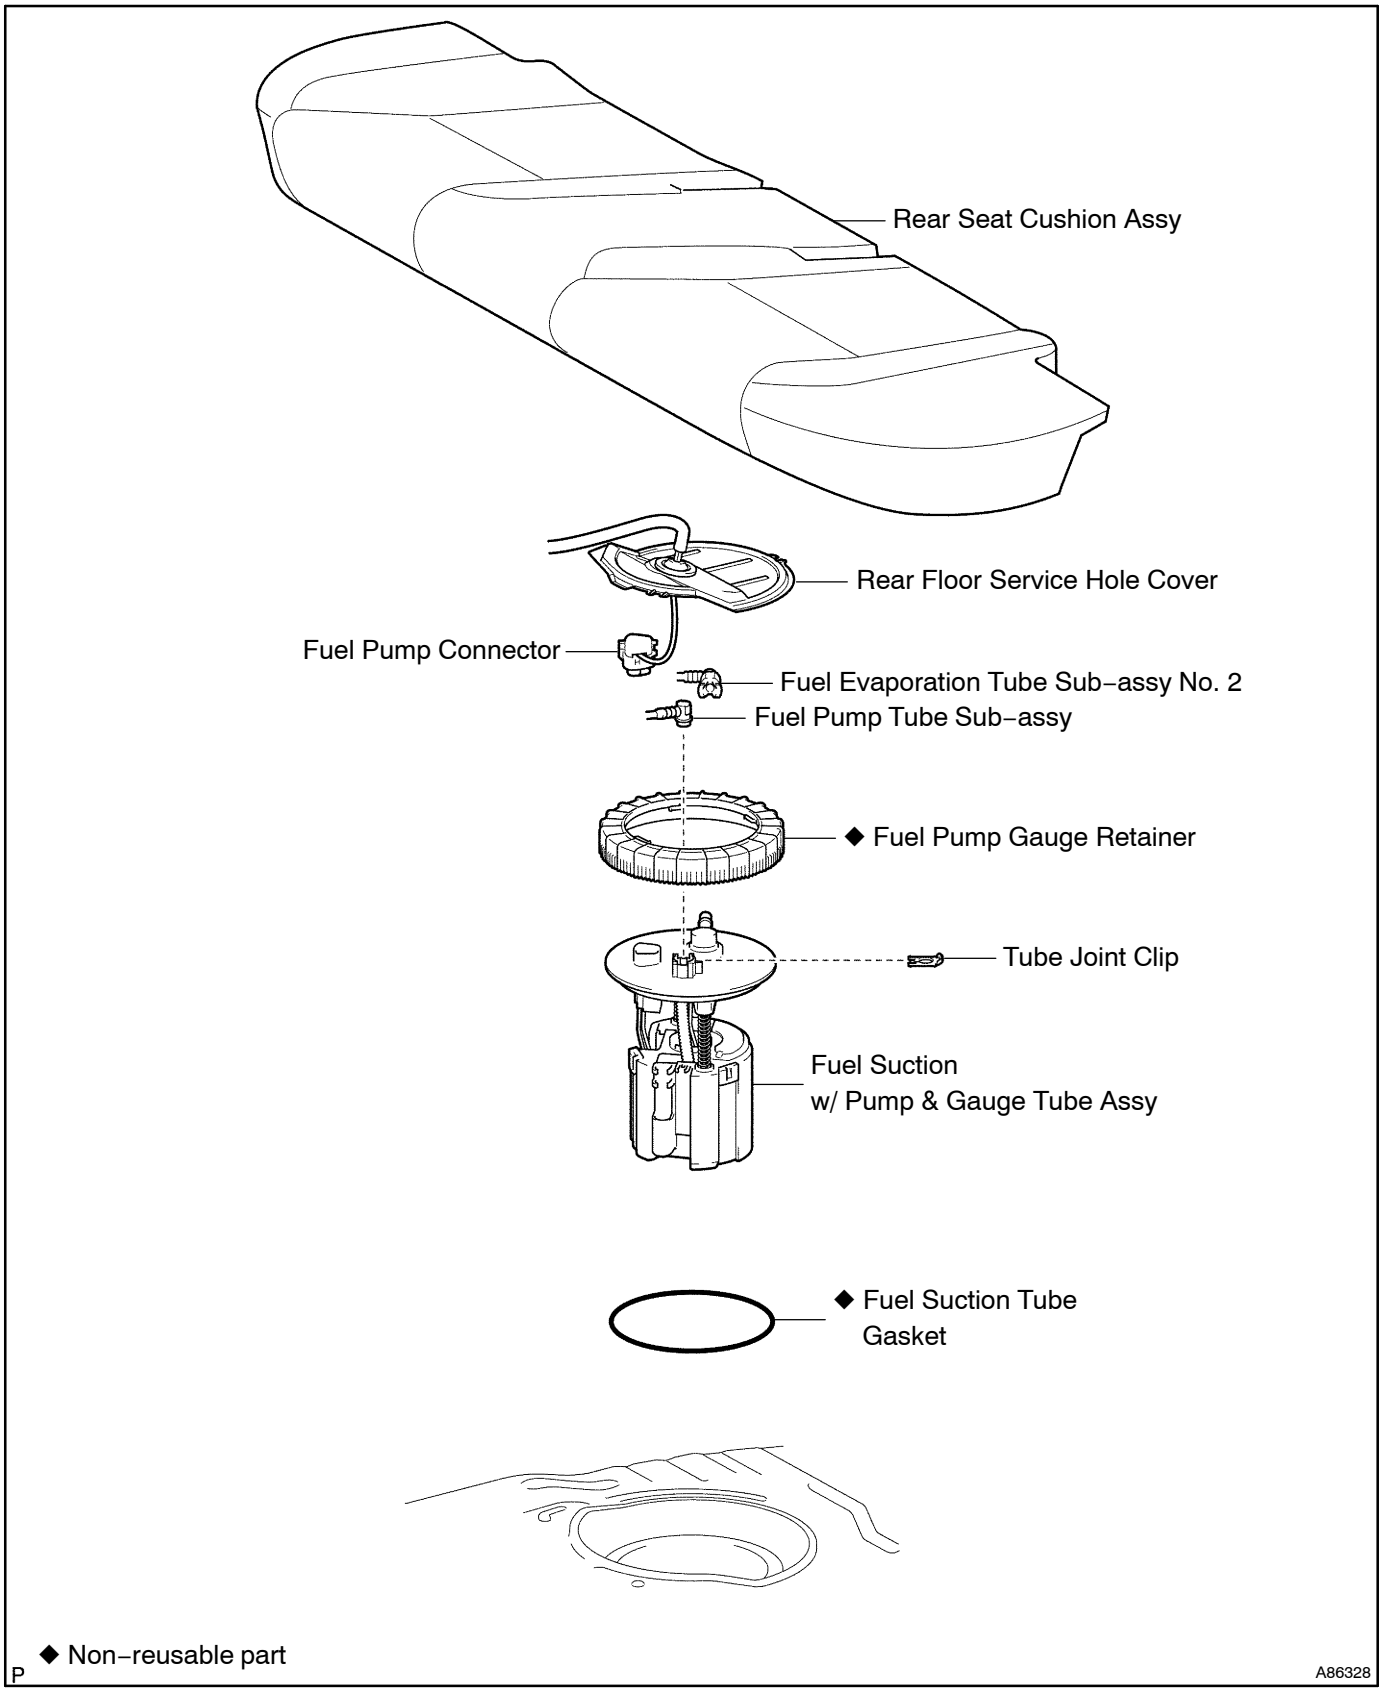


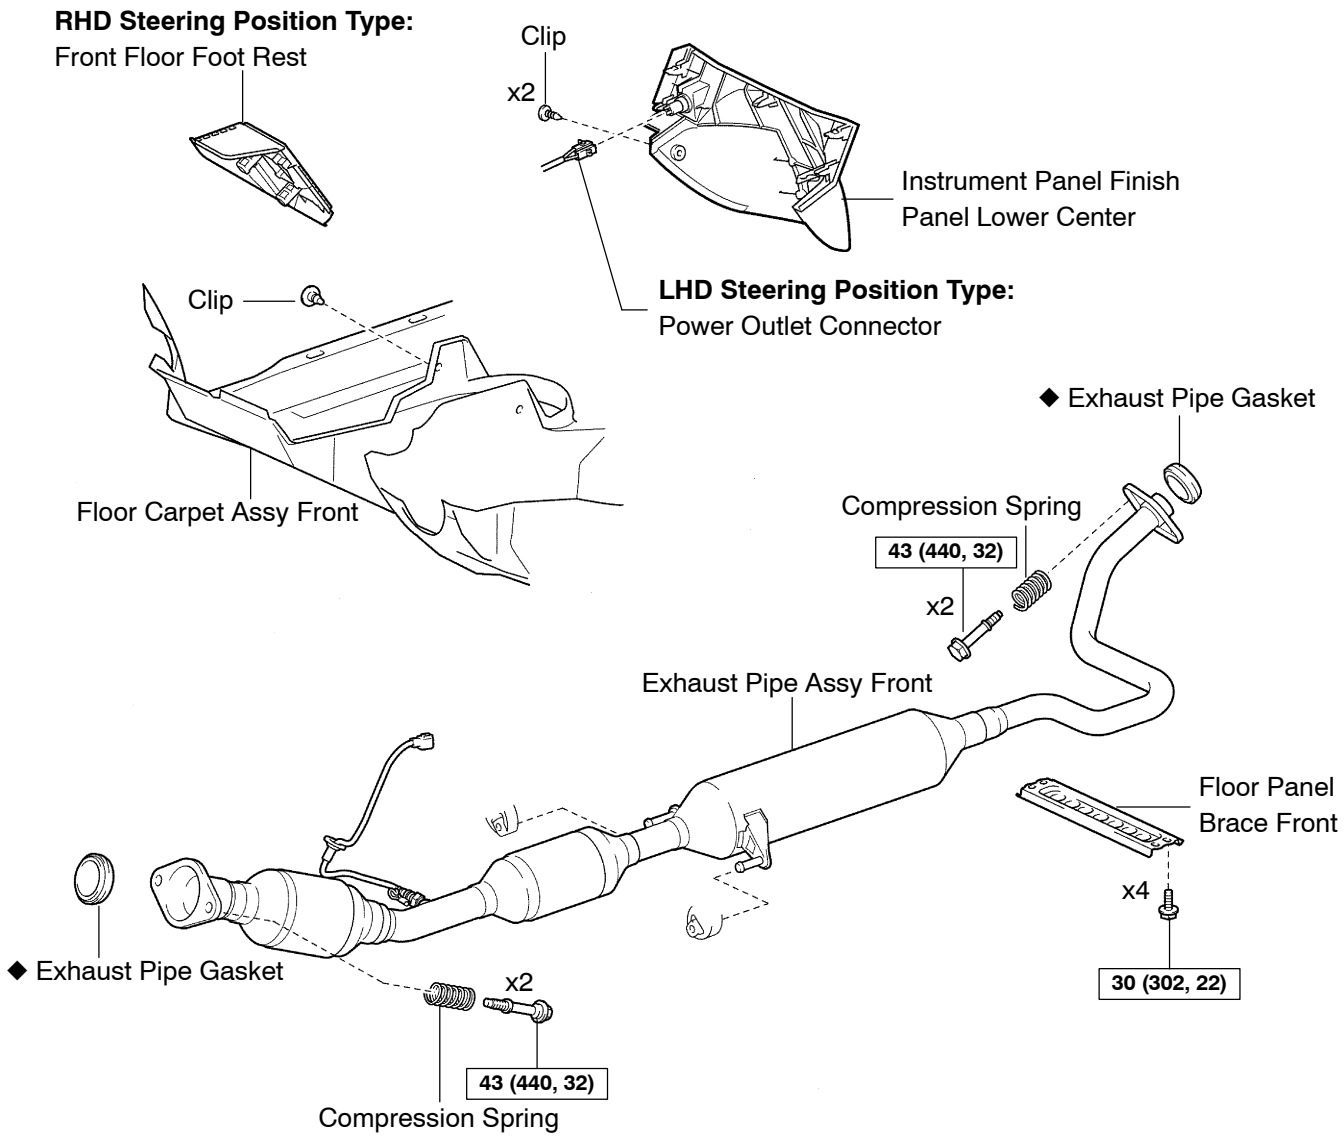


N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part

A88302

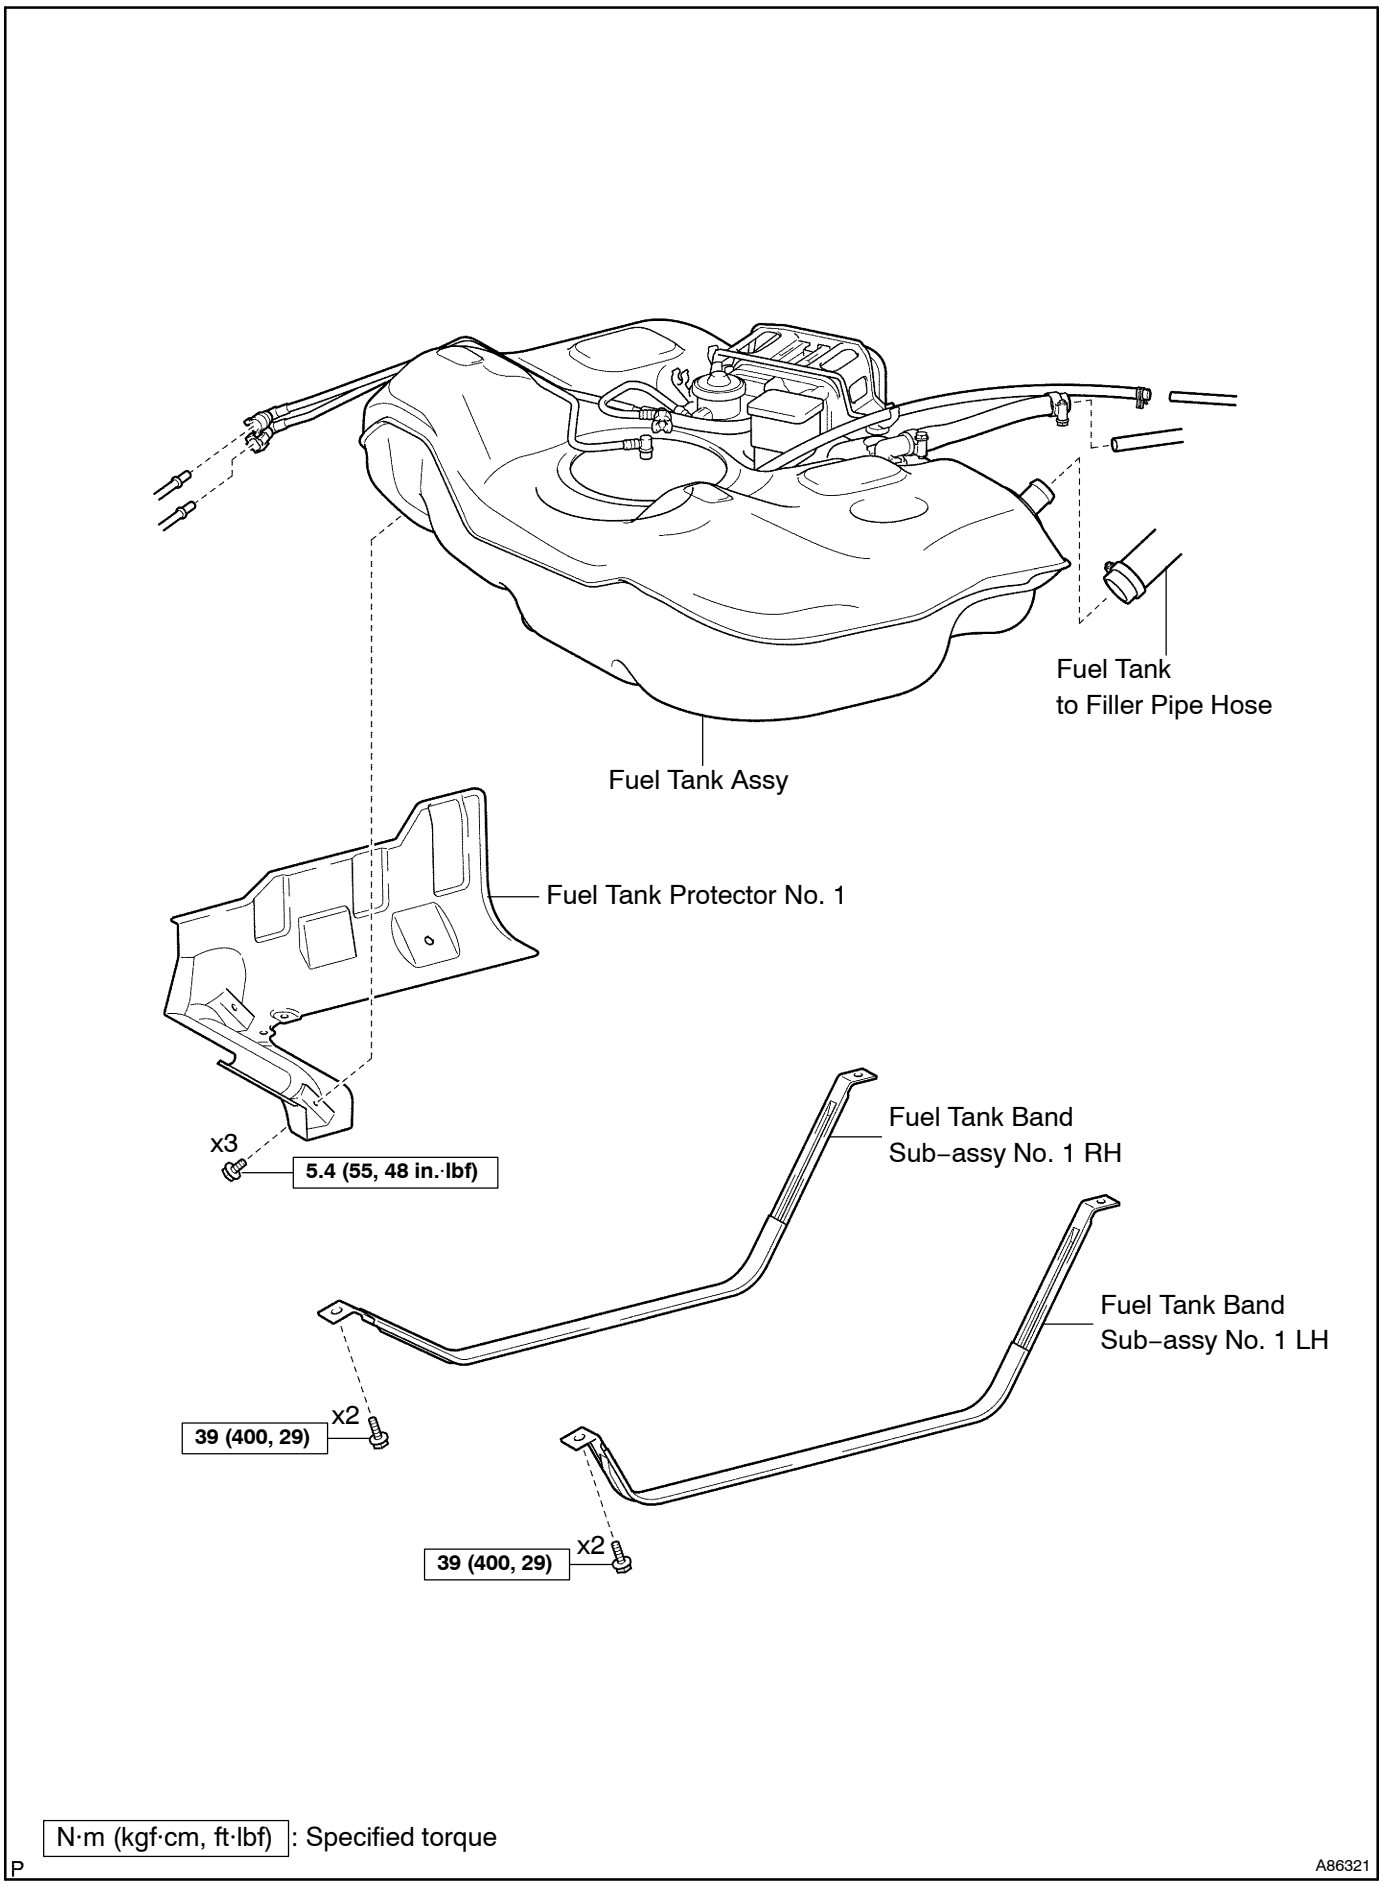
Fuel Tank
to Filler Pipe Hose
Fuel Tank Assy
Fuel Tank Protector No. 1
x3
5.4 (55, 48 in.·lbf)
Fuel Tank Band
Sub–assy No. 1 RH
Fuel Tank Band
Sub–assy No. 1 LH
x2
39 (400, 29)
x2
39 (400, 29)
N·m (kgf·cm, ft·lbf) : Specified torque
P
A86321

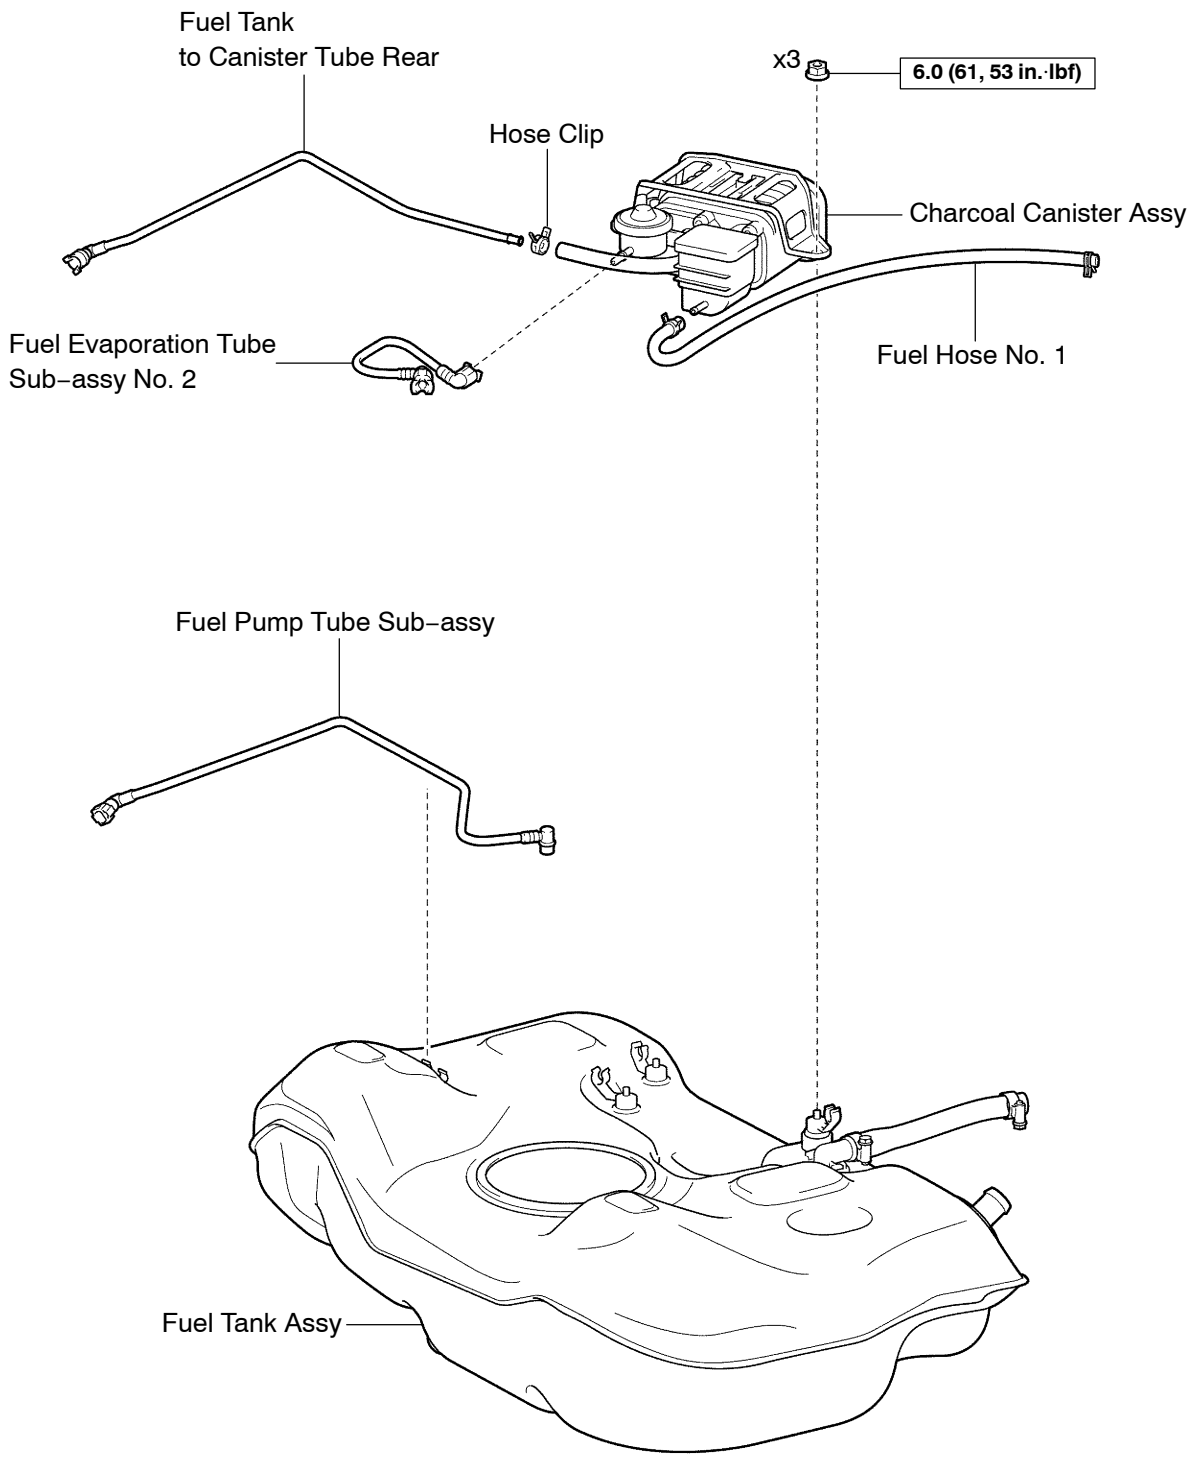

P N·m (kgf·cm, ft·lbf) : Specified torque

A86322