
VACUUM SWITCHING VALVE ASSY NO.2 (1NZ–FXE)

120DJ–01

REPLACEMENT

1. REMOVE REAR FLOOR BOARD NO.2 (See page 19–2)
2. REMOVE DECK FLOOR BOX REAR (See page 19–2)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 19–2)
4. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19–2)

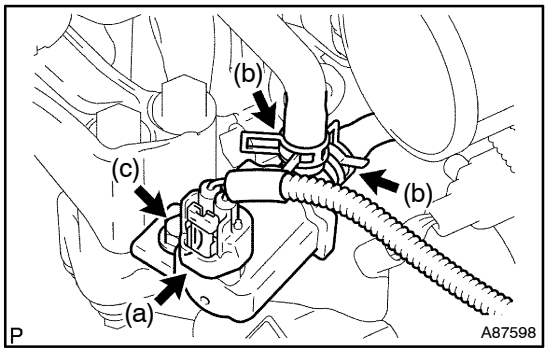

5. REMOVE VACUUM SWITCHING VALVE ASSY NO.2
   (a) Disconnect the VSV connector.
   (b) Disconnect the fuel vapor feed hose No.1 from the vacuum switching valve No.2.
   (c) Disconnect the fuel vapor feed hose No.2 from the vacuum switching valve No.2.
   (d) Remove the bolt, then remove the vacuum switching valve No.2.

6. INSTALL VACUUM SWITCHING VALVE ASSY NO.2
   Torque: 7.5 N·m (76 kgf·cm, 66 in.·lbf)
7. CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19–2)
8. INSTALL REAR FLOOR BOARD NO.3
9. INSTALL DECK FLOOR BOX REAR
10. INSTALL REAR FLOOR BOARD NO.2
11. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01–29)