
CHARCOAL CANISTER ASSY (1NZ–FXE)


120DK–01

REPLACEMENT


1. DISCHARGE FUEL SYSTEM PRESSURE (See page 11–3)
2. REMOVE REAR FLOOR BOARD NO.2 (See page 19–2)
3. REMOVE DECK FLOOR BOX REAR (See page 19–2)
4. REMOVE REAR FLOOR BOARD NO.3 (See page 19–2)
5. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19–2)
6. REMOVE REAR SEAT CUSHION ASSEMBLY (See page 72–9)
7. REMOVE REAR FLOOR SERVICE HOLE COVER (See page 11–25)
8. REMOVE FUEL SUCTION W/ PUMP & GAUGE TUBE ASSY (See page 11–25)
   SST 09808–14020 (09808–01410, 09808–01420, 09808–01430)
9. DRAIN FUEL
10. REMOVE FLOOR PANEL BRACE FRONT (See page 15–2)
11. REMOVE FRONT FLOOR FOOTREST (RHD STEERING POSITION TYPE) (See page 76–25)
12. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (See page 71–13)
13. REMOVE EXHAUST PIPE ASSY FRONT (See page 11–36)
14. REMOVE FUEL TANK PROTECTOR NO.1 (See page 11–36)
15. REMOVE FUEL TANK ASSY (See page 11–36)

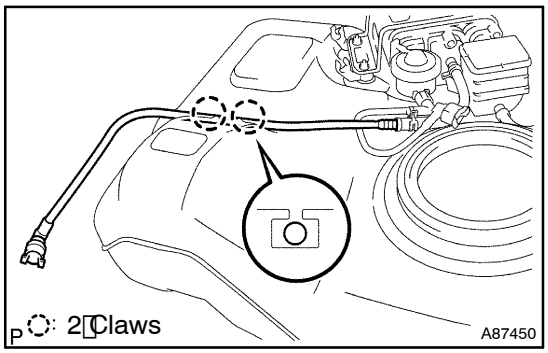


16. **REMOVE CHARCOAL CANISTER ASSY**
(a) Separate the 2 claw fittings, then remove the tube of the fuel tank to canister tube rear.

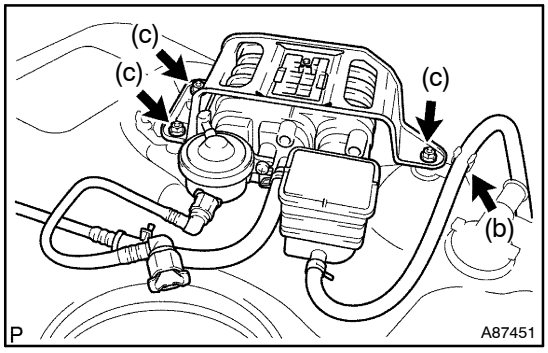


(b) Remove the fuel hose No. 1 from the clamp.
(c) Remove the 3 nuts, then remove the charcoal canister.

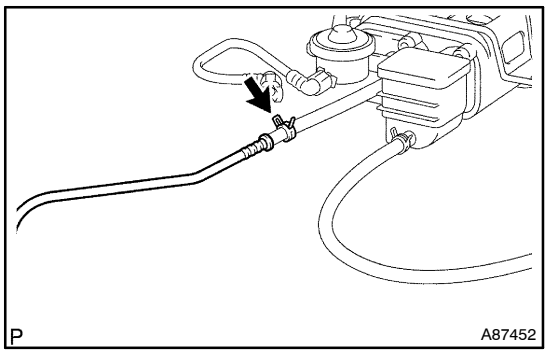

(d) Remove the fuel tank to canister tube rear from the charcoal canister.

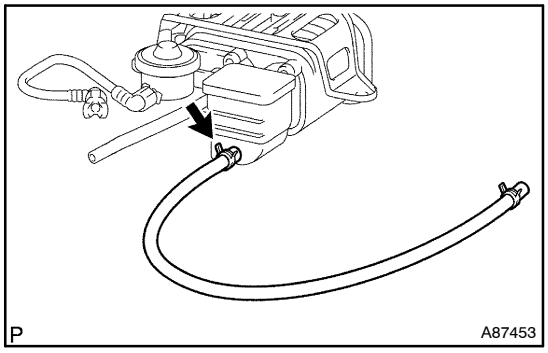


(e) Remove the fuel hose No. 1 from the charcoal canister.

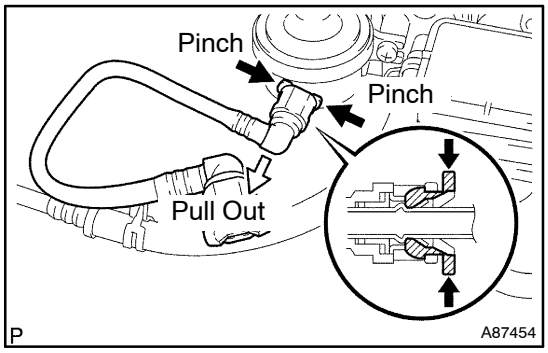


(f) Remove the fuel evaporation tube No. 2.
(1) Pinch the retainer of the fuel tube connector, then pull out the fuel tube connector to remove the fuel evaporation tube No. 2 from the charcoal canister.

NOTICE:

- **Remove dirt or foreign objects on the fuel tube connector before this work.**
- **Do not allow scratches or foreign objects on the parts when disconnecting as the fuel tube connector has the O–ring that seals the pipe.**
- **Perform this work by hand. Do not use any tools.**
- **Do not forcibly bend, twist or turn the nylon tube.**
- **Protect the connected part by covering it with a vinyl bag after disconnecting the fuel evaporation tube No. 2.**
- **If the fuel tube connector and pipe are stuck, push and pull them to release.**

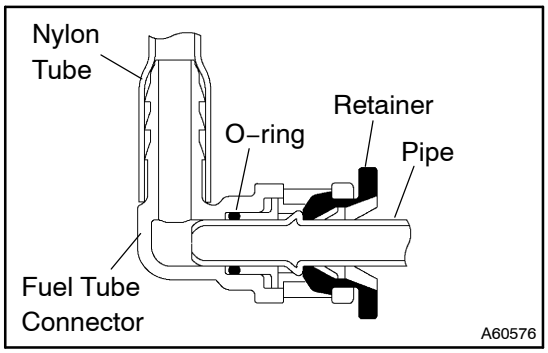

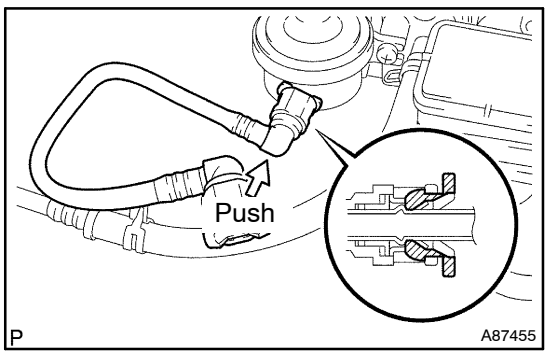

17. INSTALL CHARCOAL CANISTER ASSY

(a) Install the fuel evaporation tube No. 2.
(1) Align the fuel tube connector with the pipe, then push in the fuel tube connector until the retainer makes a ”click” sound to install the fuel evaporation tube No. 2 to the charcoal canister.

NOTICE:

- **Check that there are no scratches or foreign objects around the connected part of the fuel tube connector and pipe before this work.**
- **After connecting the fuel evaporation tube No. 2, check that the fuel evaporation tube No. 2 is securely connected by pulling the fuel tube connector and pipe.**

(b) Install the fuel hose No. 1 to the charcoal canister.
(c) Install the fuel tank to canister tube rear to the charcoal canister.
(d) Install the charcoal canister with the 3 nuts.
Torque: 6.0 N·m (61 kgf·cm, 53 in.·lbf)
(e) Install the fuel hose No. 1 to the clamp.

(f) Install the tube of the fuel tank to canister tube rear to the fuel tank.

18. **INSTALL FUEL TANK ASSY (See page 11–36)**
19. **INSTALL FUEL TANK PROTECTOR NO.1 (See page 11–36)**
20. **INSTALL EXHAUST PIPE ASSY FRONT (See page 11–36)**
21. **INSTALL FRONT FLOOR FOOTREST (RHD STEERING POSITION TYPE) (See page 76–25)**
22. **INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER**
23. **ADD FUEL**
24. **INSTALL FUEL SUCTION W/ PUMP & GAUGE TUBE ASSY (See page 11–25)**
    SST 09808–14020 (09808–01410, 09808–01420, 09808–01430)
25. **CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19–2)**
26. **CHECK FOR FUEL LEAKS (See page 11–7)**
27. **CHECK FOR EXHAUST GAS LEAKS**
28. **INSTALL FLOOR PANEL BRACE FRONT (See page 15–2)**
29. **INSTALL REAR FLOOR SERVICE HOLE COVER (See page 11–25)**
30. **INSTALL REAR SEAT CUSHION ASSEMBLY (See apge 72–9)**
31. **INSTALL REAR FLOOR BOARD NO.3**
32. **INSTALL DECK FLOOR BOX REAR**
33. **INSTALL REAR FLOOR BOARD NO.2**
34. **POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01–29)**