
FAN AND GENERATOR V BELT (1NZ–FXE)

141O3–01


REPLACEMENT

1. REMOVE ENGINE UNDER COVER RH

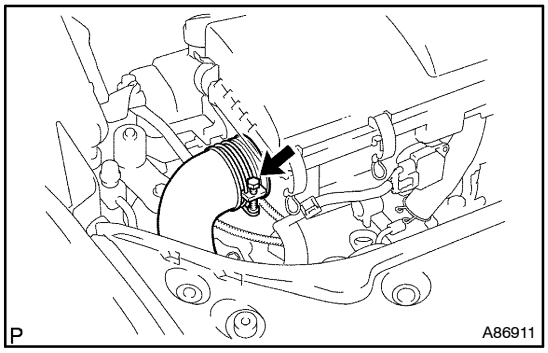

2. DISCONNECT AIR CLEANER INLET NO.1


(a) Loosen the clamp, then disconnect the air cleaner inlet No. 1 from the air cleaner case.

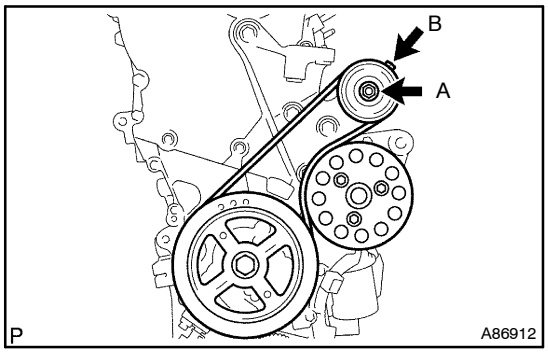

3. REMOVE FAN AND GENERATOR V BELT

(a) Install the idler puller assembly, then loosen nut A.

(b) Turn adjust bolt B, then relieve the V–ribbed belt tension to remove.

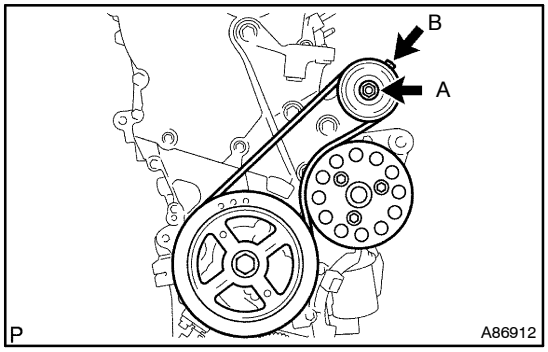

4. INSTALL FAN AND GENERATOR V BELT

(a) Temporarily install the V–ribbed belt to each pulley.

(b) Turn adjust bolt B to adjust the V–ribbed belt tension.

(c) Install the idler pulley assembly, then tighten nut A.
Torque: 40 N·m (408 kgf·cm, 30 ft·lbf)

5. INSPECT DRIVE BELT DEFLECTION AND TENSION (See page 14–1)

6. CONNECT AIR CLEANER INLET NO.1

7. INSTALL ENGINE UNDER COVER RH