
THERMOSTAT (1NZ–FXE)

160TH–01


REPLACEMENT

1. REMOVE RADIATOR SUPPORT OPENING COVER (See page 16–11)
2. REMOVE ENGINE UNDER COVER LH
3. REMOVE ENGINE UNDER COVER RH
4. DRAIN ENGINE COOLANT (See page 16–11)

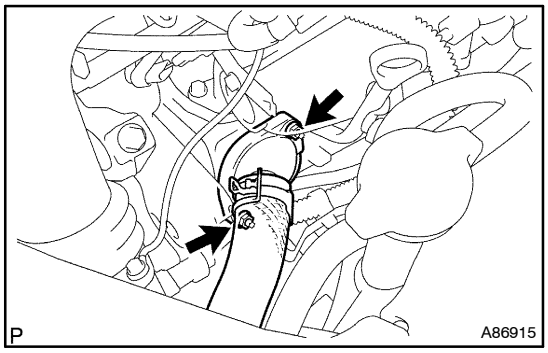

5. REMOVE WATER INLET


(a) Remove the 2 nuts and water inlet with radiator outlet hose.

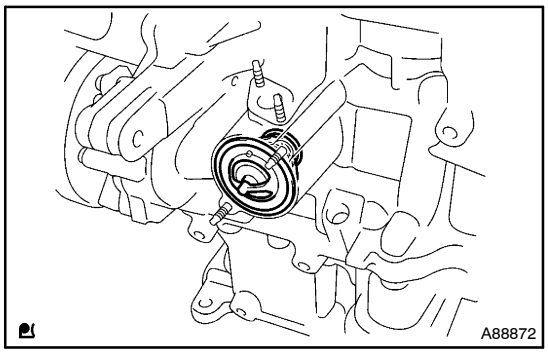

6. REMOVE THERMOSTAT


(a) Remove the thermostat.

(b) Remove the gasket from the thermostat.

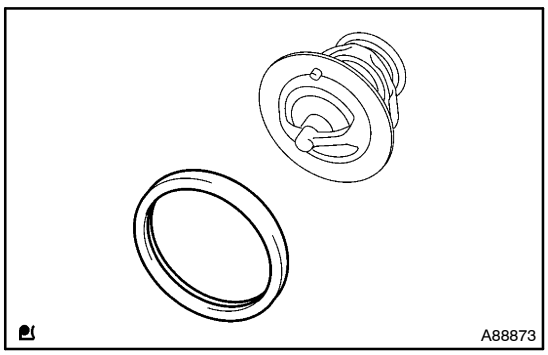

7. INSTALL THERMOSTAT

(a) Install a new gasket to the thermostat.

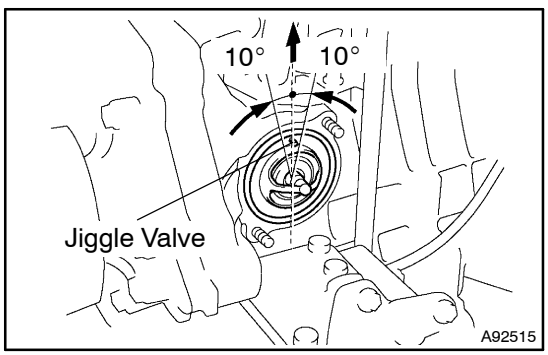

(b) Install the thermostat so the jiggle valve faces upward.

HINT:

The jiggle valve may be set within 10°of either side as illustrated.

8. INSTALL WATER INLET

(a) Install the water inlet with radiator outlet hose with the 2 nuts.

Torque:9.0 N·m (92 kgf·cm, 80 in.·lbf)

9. ADD ENGINE COOLANT (See page 16–11)

10. CHECK FOR ENGINE COOLANT LEAKS (See page 16–2)

11. INSTALL ENGINE UNDER COVER RH

12. INSTALL ENGINE UNDER COVER LH

13. INSTALL RADIATOR SUPPORT OPENING COVER