
160TN–01


REPLACEMENT

1. REMOVE FAN ASSY W/MOTOR (See page 16–21)

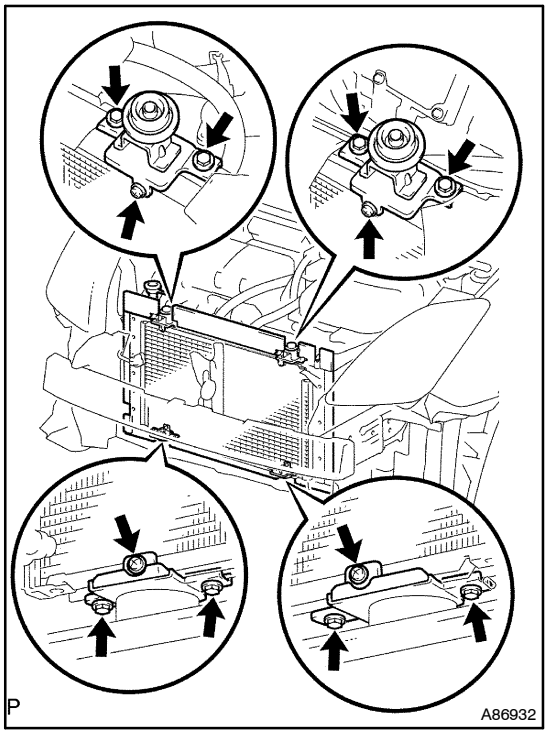


2. REMOVE NO.2 RADIATOR ASSY

(a) Remove the 3 bolts and radiator support upper RH.
(b) Remove the 3 bolts and radiator support upper LH.
(c) Remove the 3 bolts and radiator support lower RH.
(d) Remove the 3 bolts and radiator support lower LH.
(e) Remove the radiator assembly No. 2 from the vehicle.

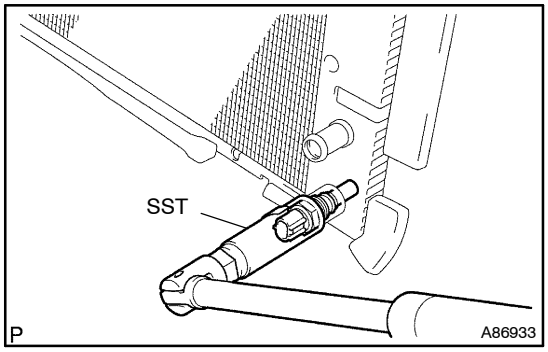


3. REMOVE RADIATOR FAN TEMPERATURE SWITCH

(a) Using SST, remove the radiator fan temperature switch.
SST 09817–33190

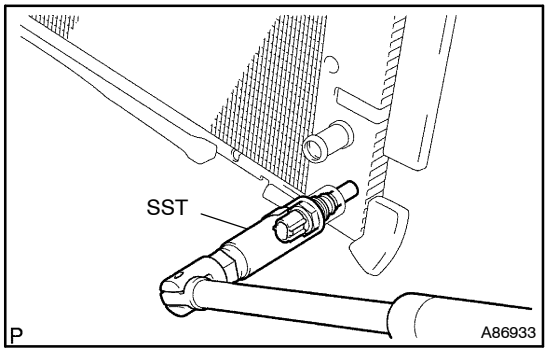

4. INSTALL RADIATOR FAN TEMPERATURE SWITCH

(a) Using SST, install the radiator fan temperature switch.
SST 09817–33190
Torque: 7.0 N·m (71 kgf·cm, 62 in.·lbf)

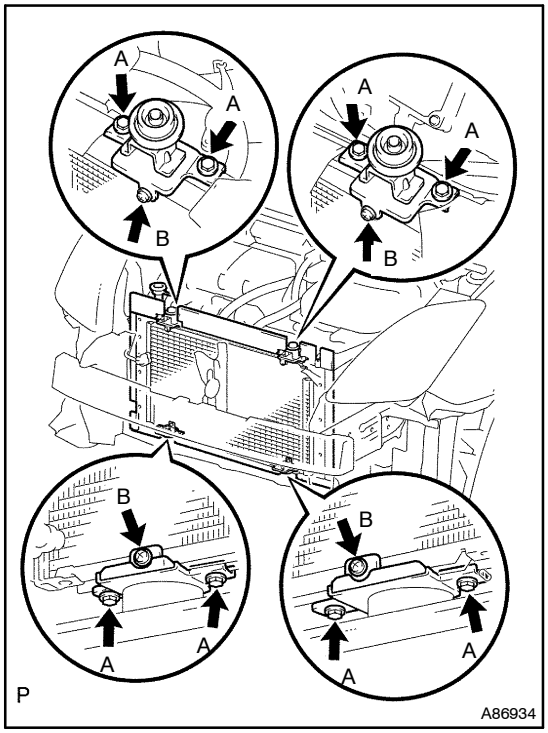

5. INSTALL NO.2 RADIATOR ASSY

(a) Install the radiator assembly No.2 to the vehicle.

(b) Install the radiator support lower LH with the 3 bolts.

Torque:
5.0 N·m (51 kgf·cm, 44 in.·lbf) for bolt A
3.9 N·m (40 kgf·cm, 35 in.·lbf) for bolt B

(c) Install the radiator support lower RH with the 3 bolts.

Torque:
5.0 N·m (51 kgf·cm, 44 in.·lbf) for bolt A
3.9 N·m (40 kgf·cm, 35 in.·lbf) for bolt B

(d) Install the radiator support upper LH with the 3 bolts.

Torque:
5.0 N·m (51 kgf·cm, 44 in.·lbf) for bolt A
3.9 N·m (40 kgf·cm, 35 in.·lbf) for bolt B

(e) Install the radiator support upper RH with the 3 bolts.

Torque:
5.0 N·m (51 kgf·cm, 44 in.·lbf) for bolt A
3.9 N·m (40 kgf·cm, 35 in.·lbf) for bolt B

6. INSTALL FAN ASSY W/MOTOR (See page 16–21)