
IGNITION COIL NO.1 (1NZ–FXE)

180BA–01


REPLACEMENT

1. **REMOVE REAR FLOOR BOARD NO.2 (See page 19–2)**
2. **REMOVE DECK FLOOR BOX REAR (See page 19–2)**
3. **REMOVE REAR FLOOR BOARD NO.3 (See page 19–2)**
4. **DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19–2)**

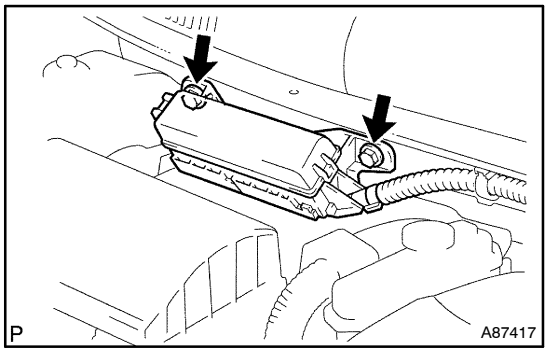

5. **REMOVE IGNITION COIL NO.1**

(a) Remove the 2 bolts, then remove the engine room relay block No.2.

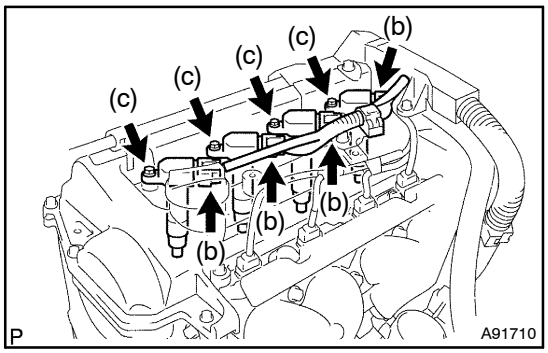

(b) Disconnect the 4 ignition coil connectors.

(c) Remove the 4 bolts, then remove the 4 ignition coils.

HINT:

Each ignition coil is installed with 1 bolt.

6. **INSTALL IGNITION COIL NO.1**

(a) Install the 4 ignition coils with the 4 bolts.

Torque: 9.0 N·m (92 kgf·cm, 82 in.·lbf)

HINT:

Each ignition coil is installed with 1 bolt.

(b) Connect the 4 ignition coil connectors.

(c) Install the engine room relay block No.2 with the 2 bolts.

Torque: 8.4 N·m (86 kgf·cm, 74 in.·lbf)

7. **CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19–2)**
8. **INSTALL REAR FLOOR BOARD NO.3**
9. **INSTALL DECK FLOOR BOX REAR**
10. **INSTALL REAR FLOOR BOARD NO.2**
11. **POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01–29)**