
# W/CONVERTER INVERTER ASSY

## COMPONENTS


2102M–01

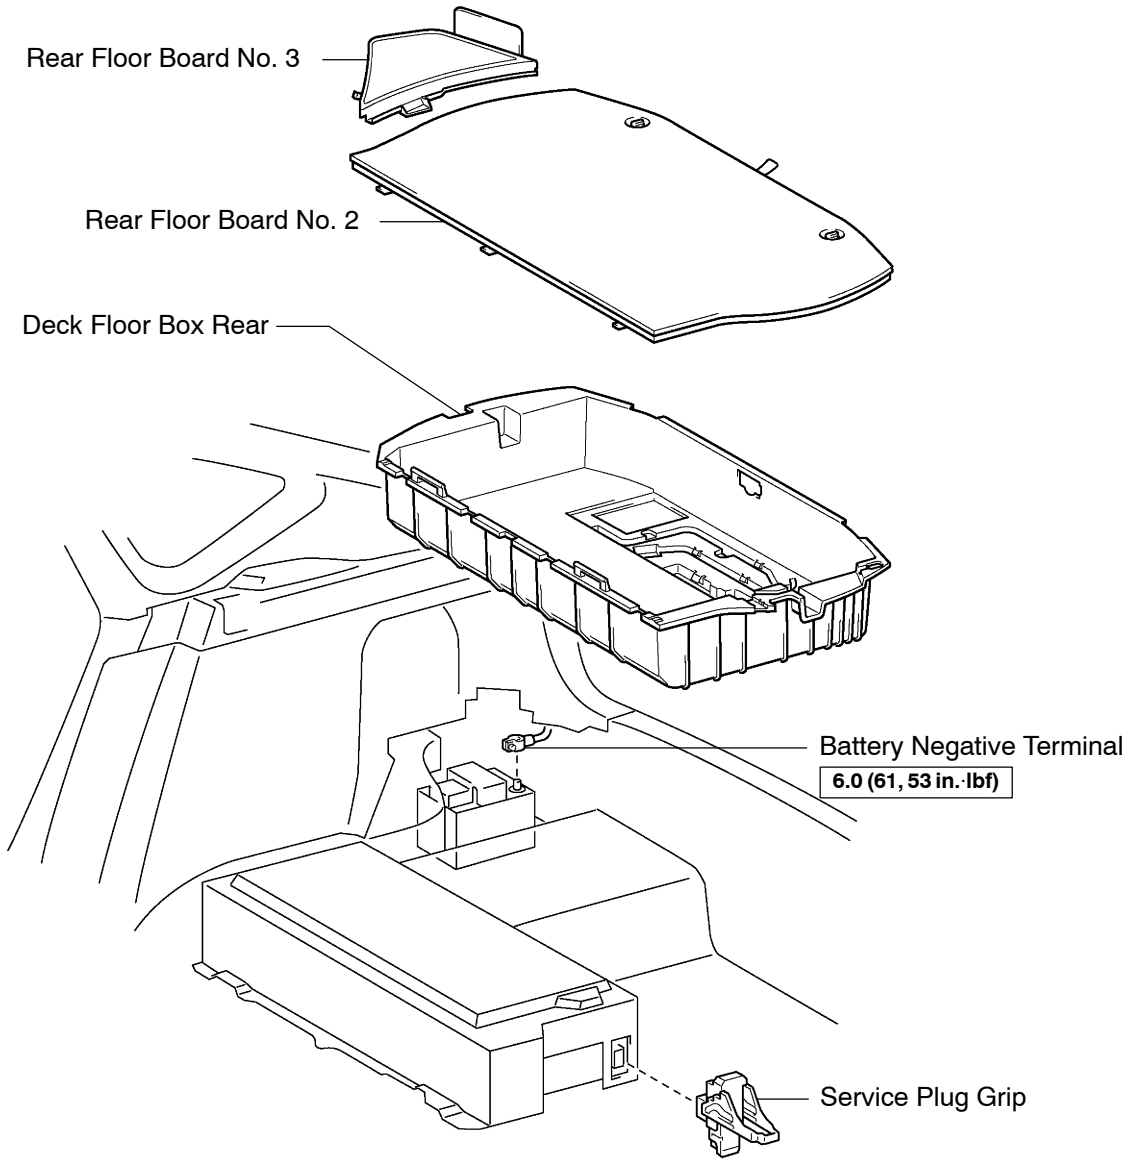


o N·m (kgf·cm, ft·lbf) : Specified torque

A83616

**LHD Steering Position Type:**

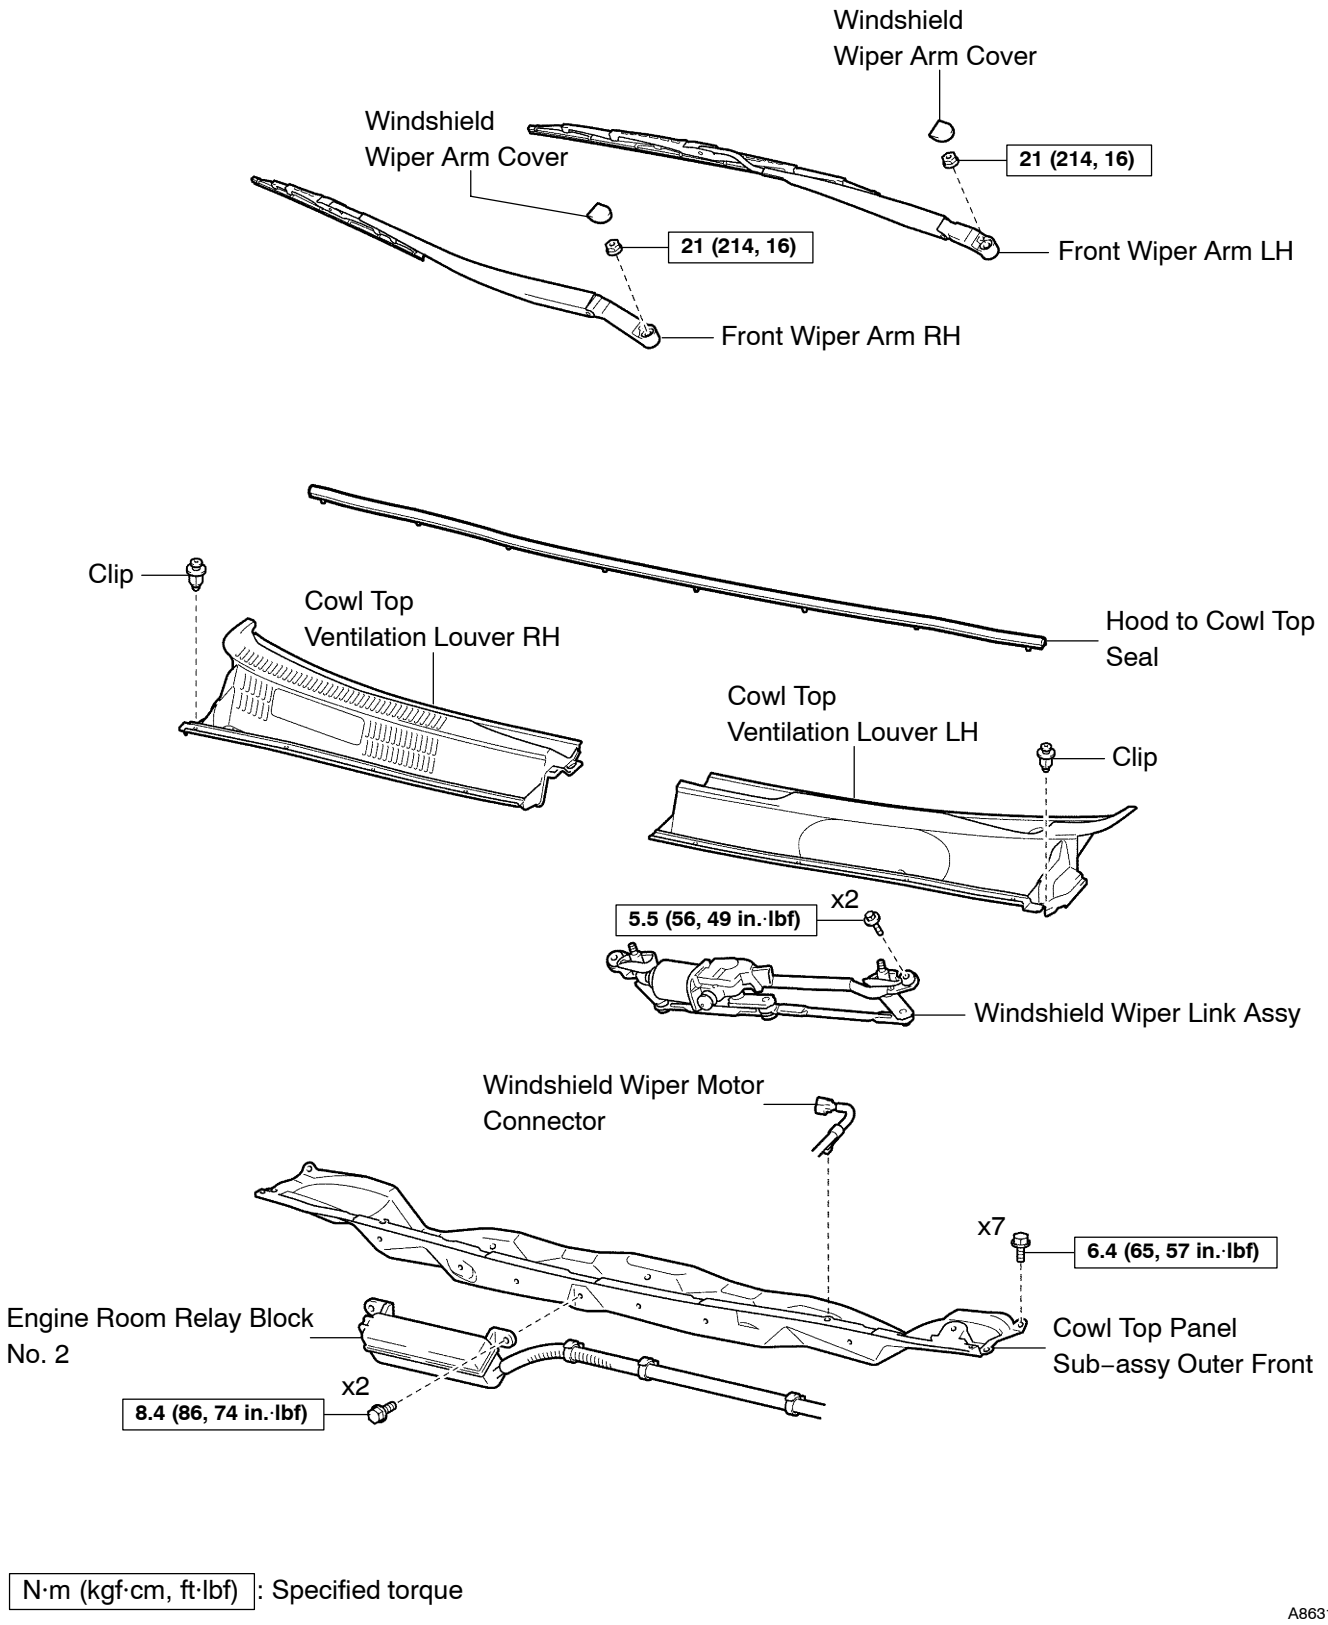



N·m (kgf·cm, ft·lbf) : Specified torque

P


A86311


**RHD Steering Position Type:**

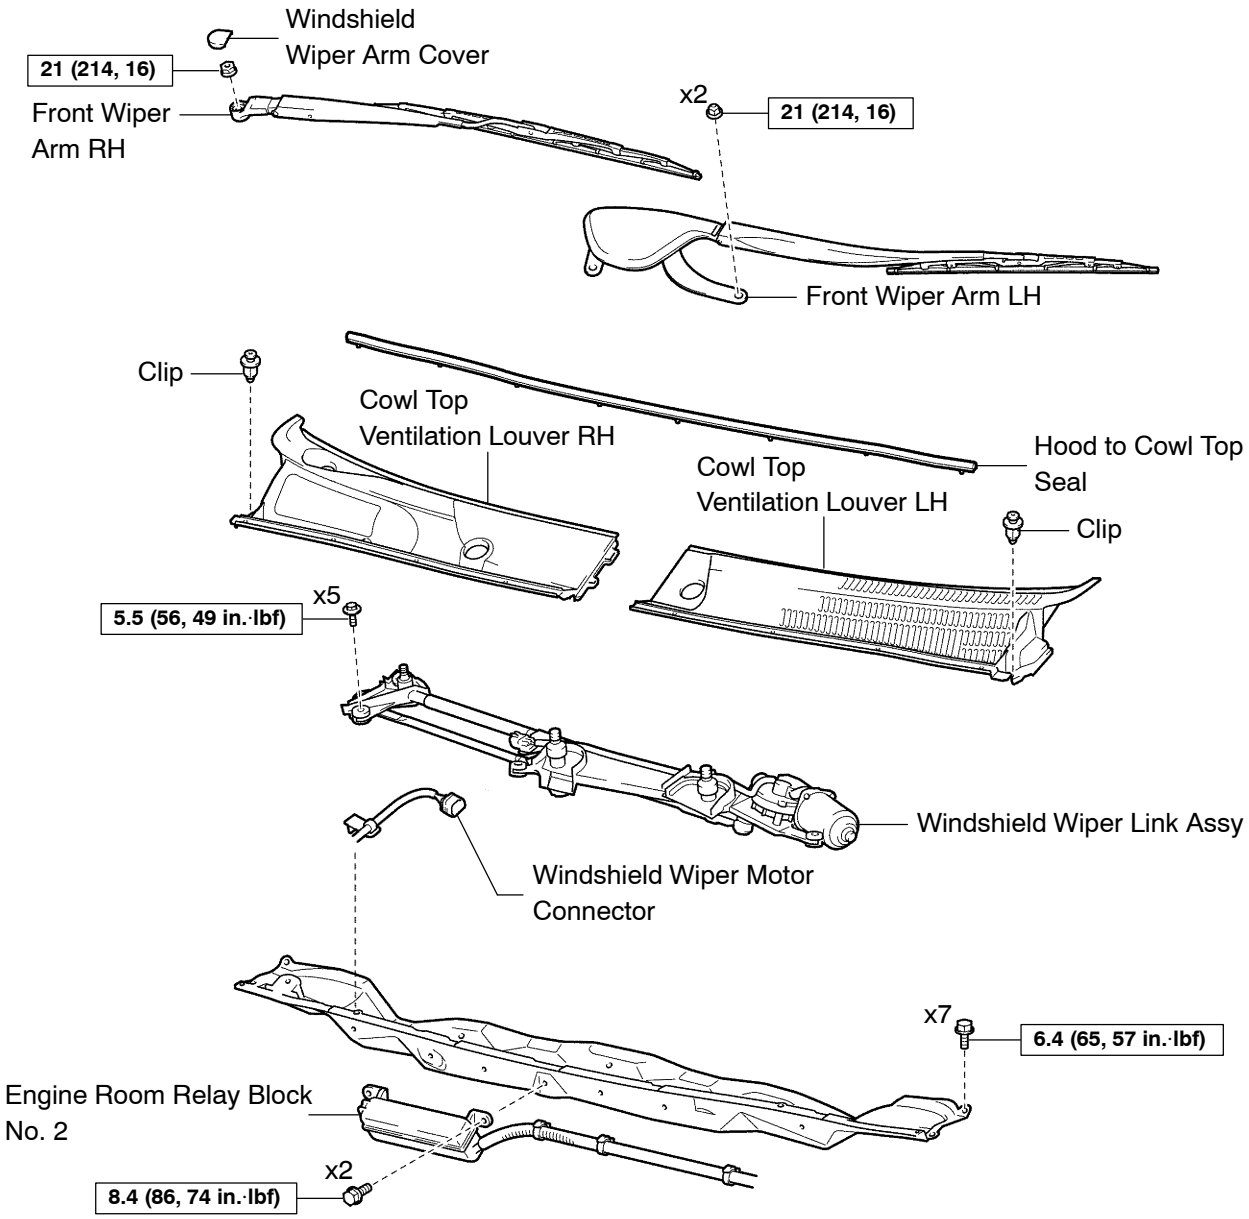


N·m (kgf·cm, ft·lbf) : Specified torque


A86312

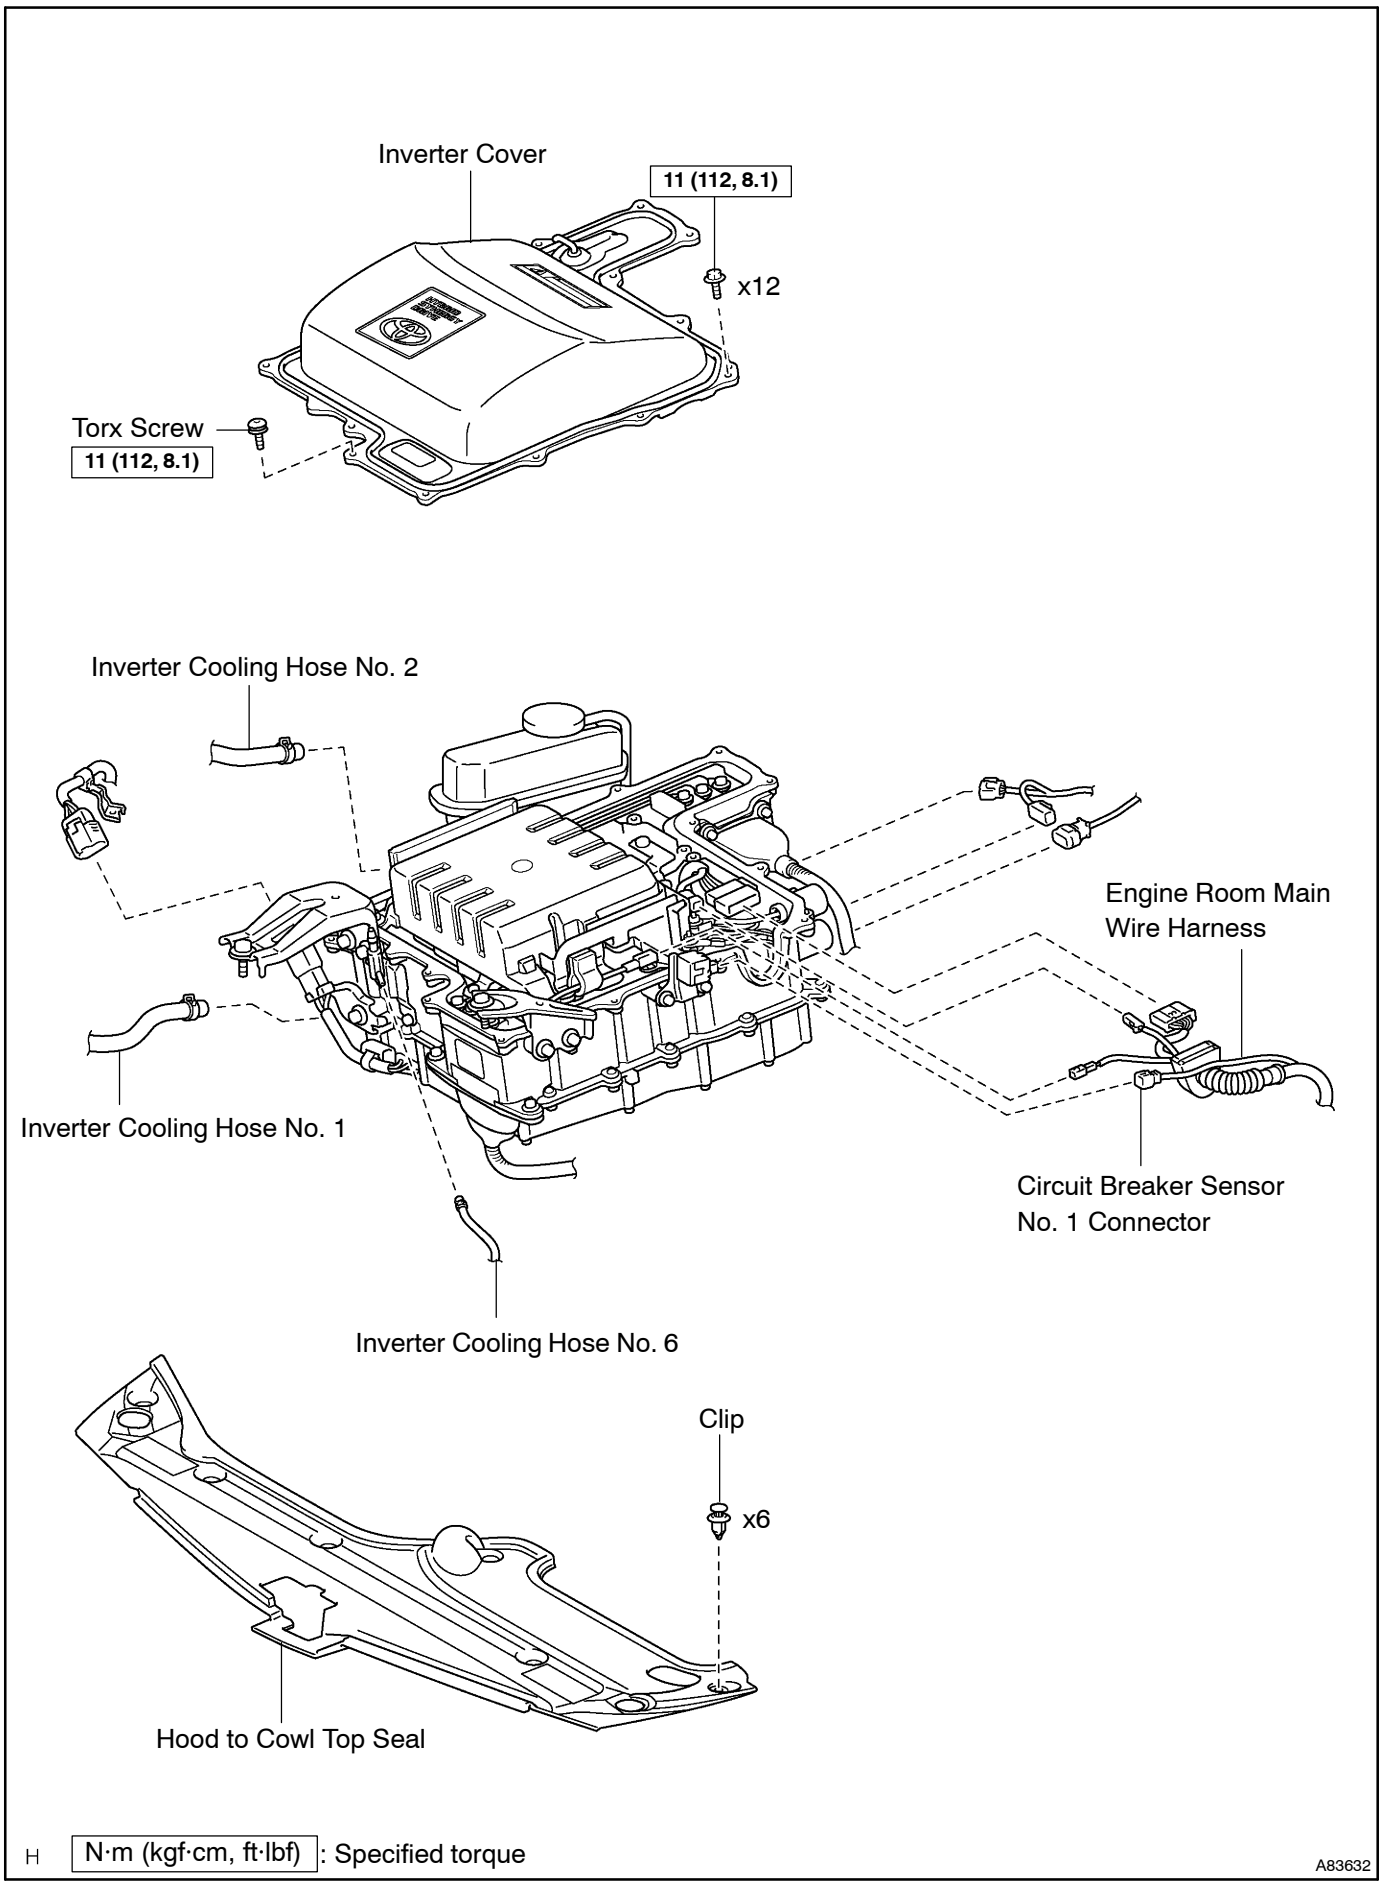
Inverter Cover
11 (112, 8.1)
x12
Torx Screw
11 (112, 8.1)
Inverter Cooling Hose No. 2
Engine Room Main Wire Harness
Inverter Cooling Hose No. 1
Circuit Breaker Sensor No. 1 Connector
Inverter Cooling Hose No. 6
Clip
x6
Hood to Cowl Top Seal
H
N·m (kgf·cm, ft·lbf): Specified torque
A83632

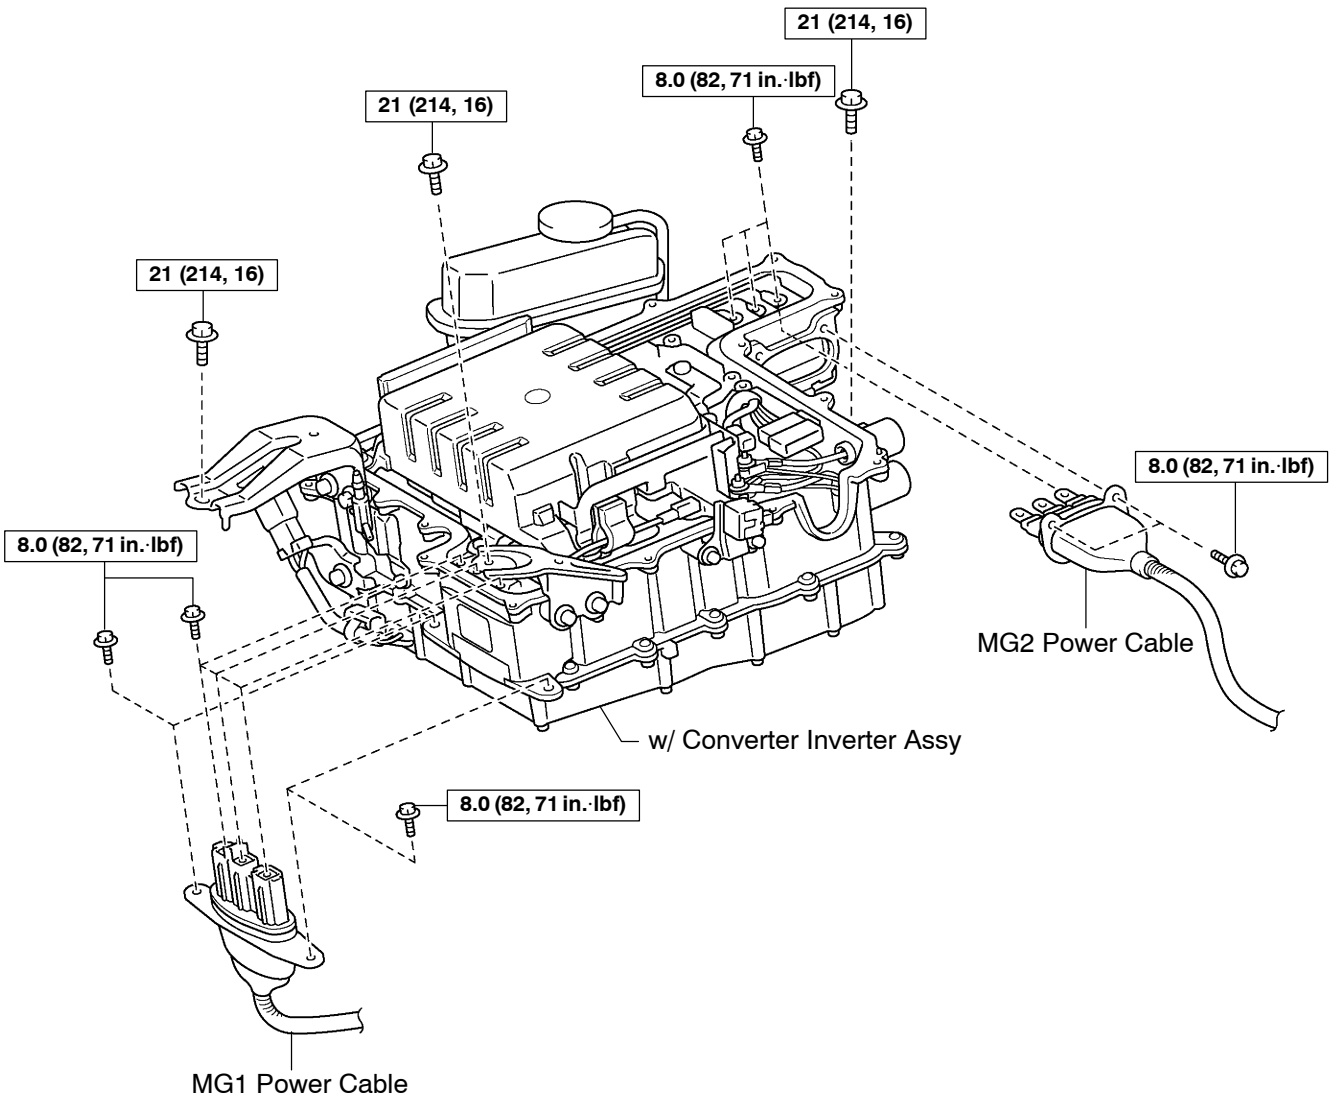


H N·m (kgf·cm, ft·lbf): Specified torque

A83631

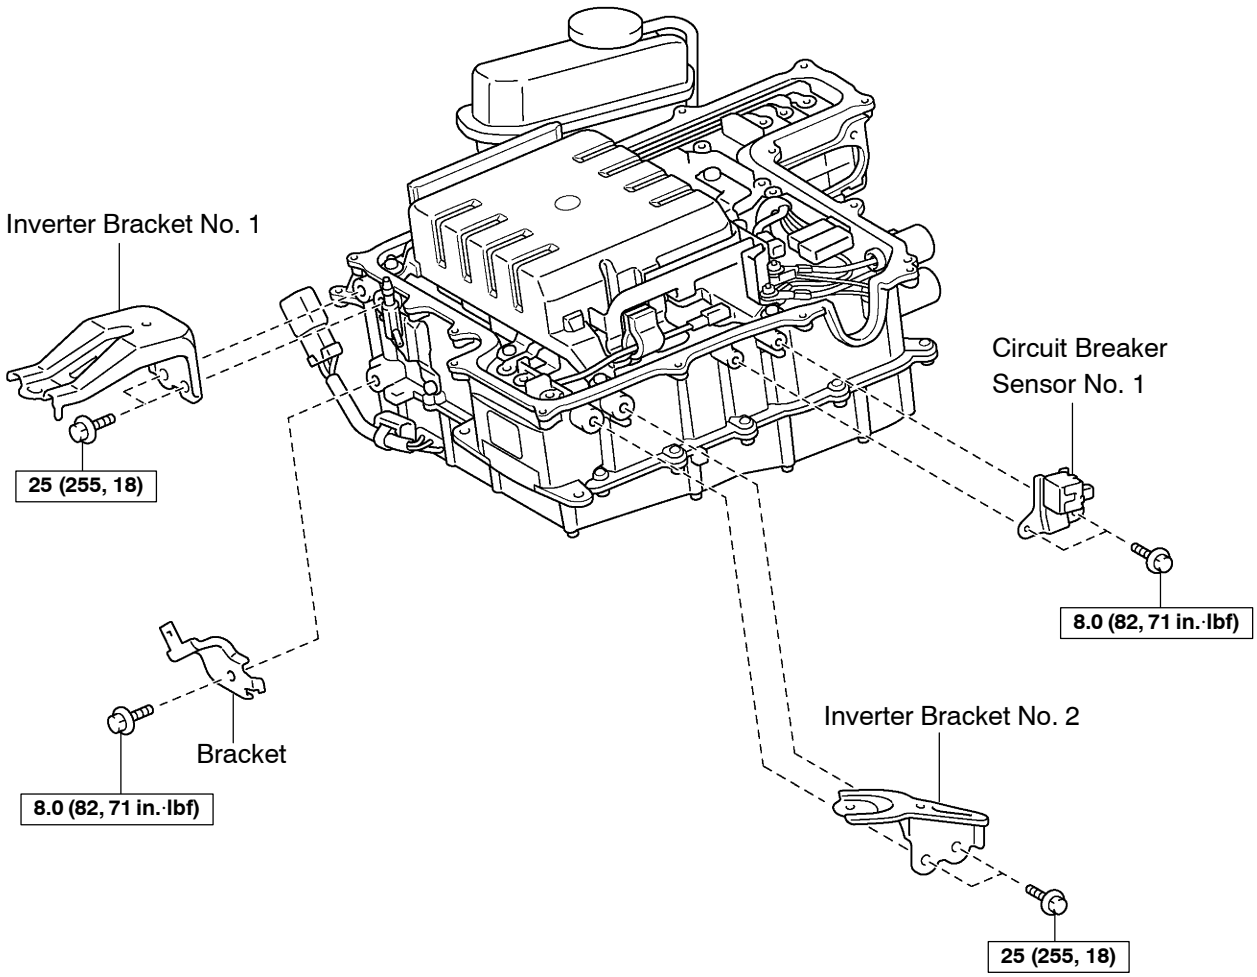


H N·m (kgf·cm, ft·lbf) : Specified torque

A83630