
HV BATTERY


COMPONENTS


2102R–01

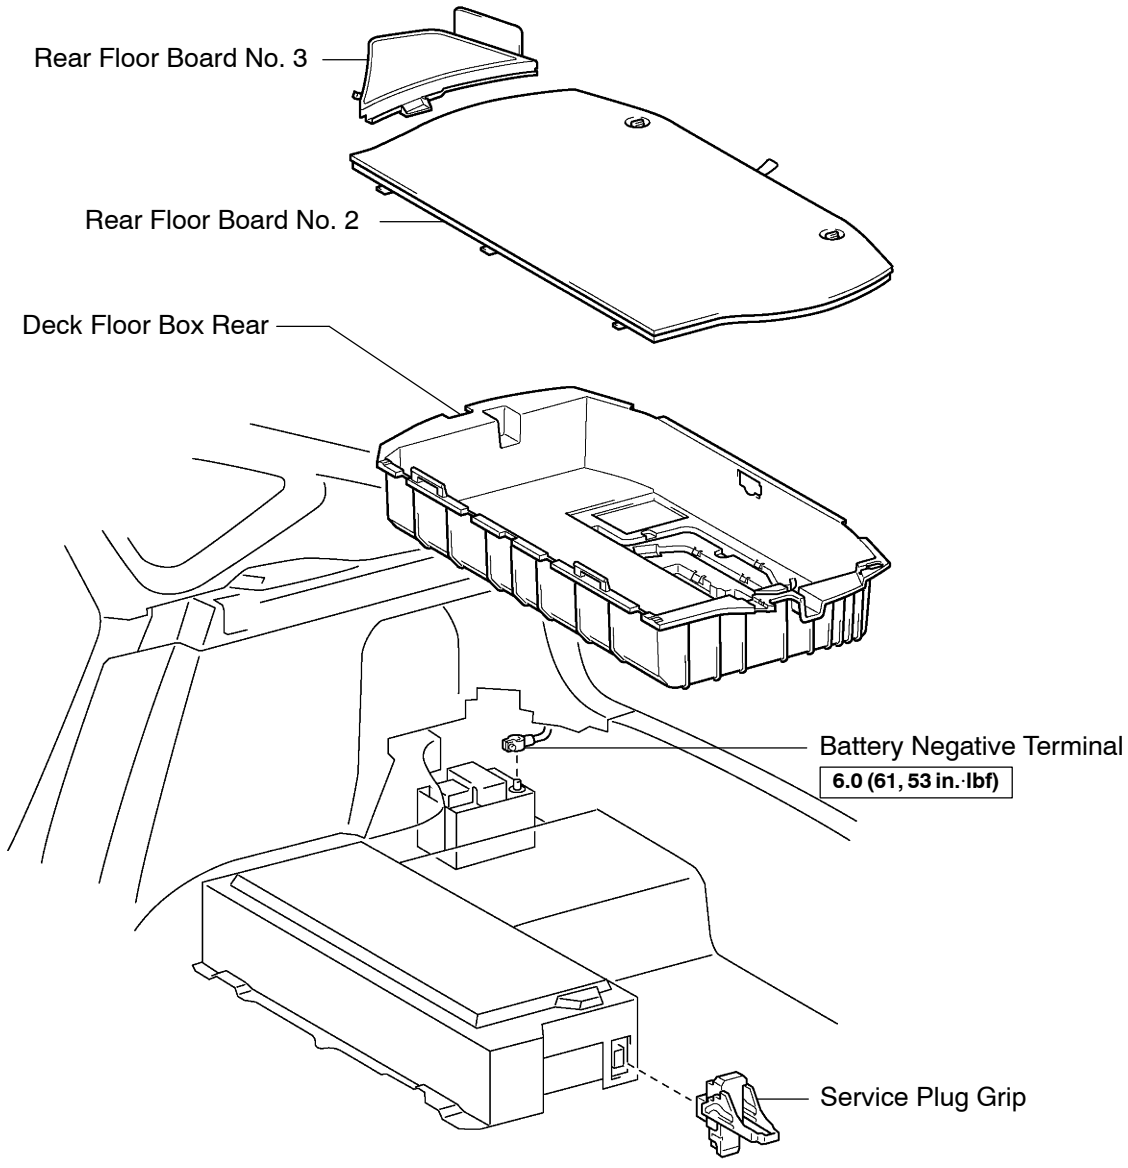

o N·m (kgf·cm, ft·lbf) : Specified torque


A83616

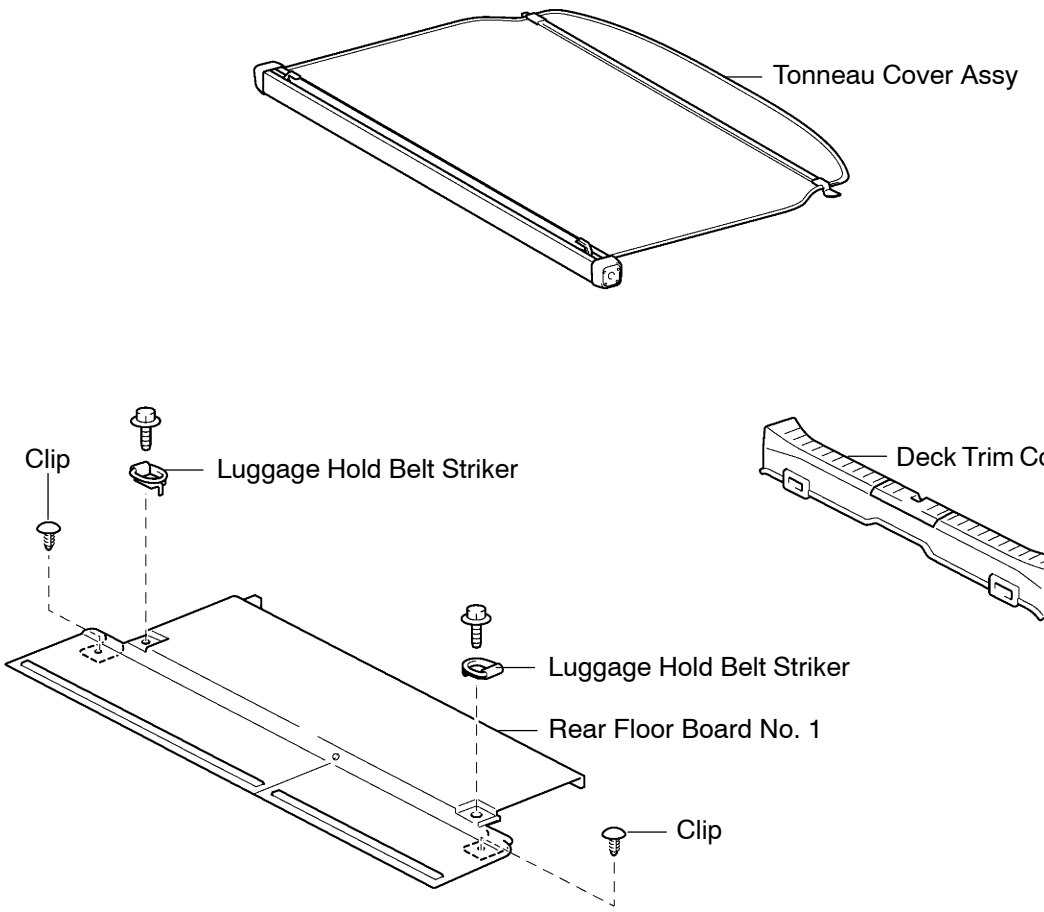

Tonneau Cover Assy
Clip
Luggage Hold Belt Striker
Deck Trim Cover Rear
Luggage Hold Belt Striker
Rear Floor Board No. 1
Clip
Rear Seat Cushion Assy
H
A83621

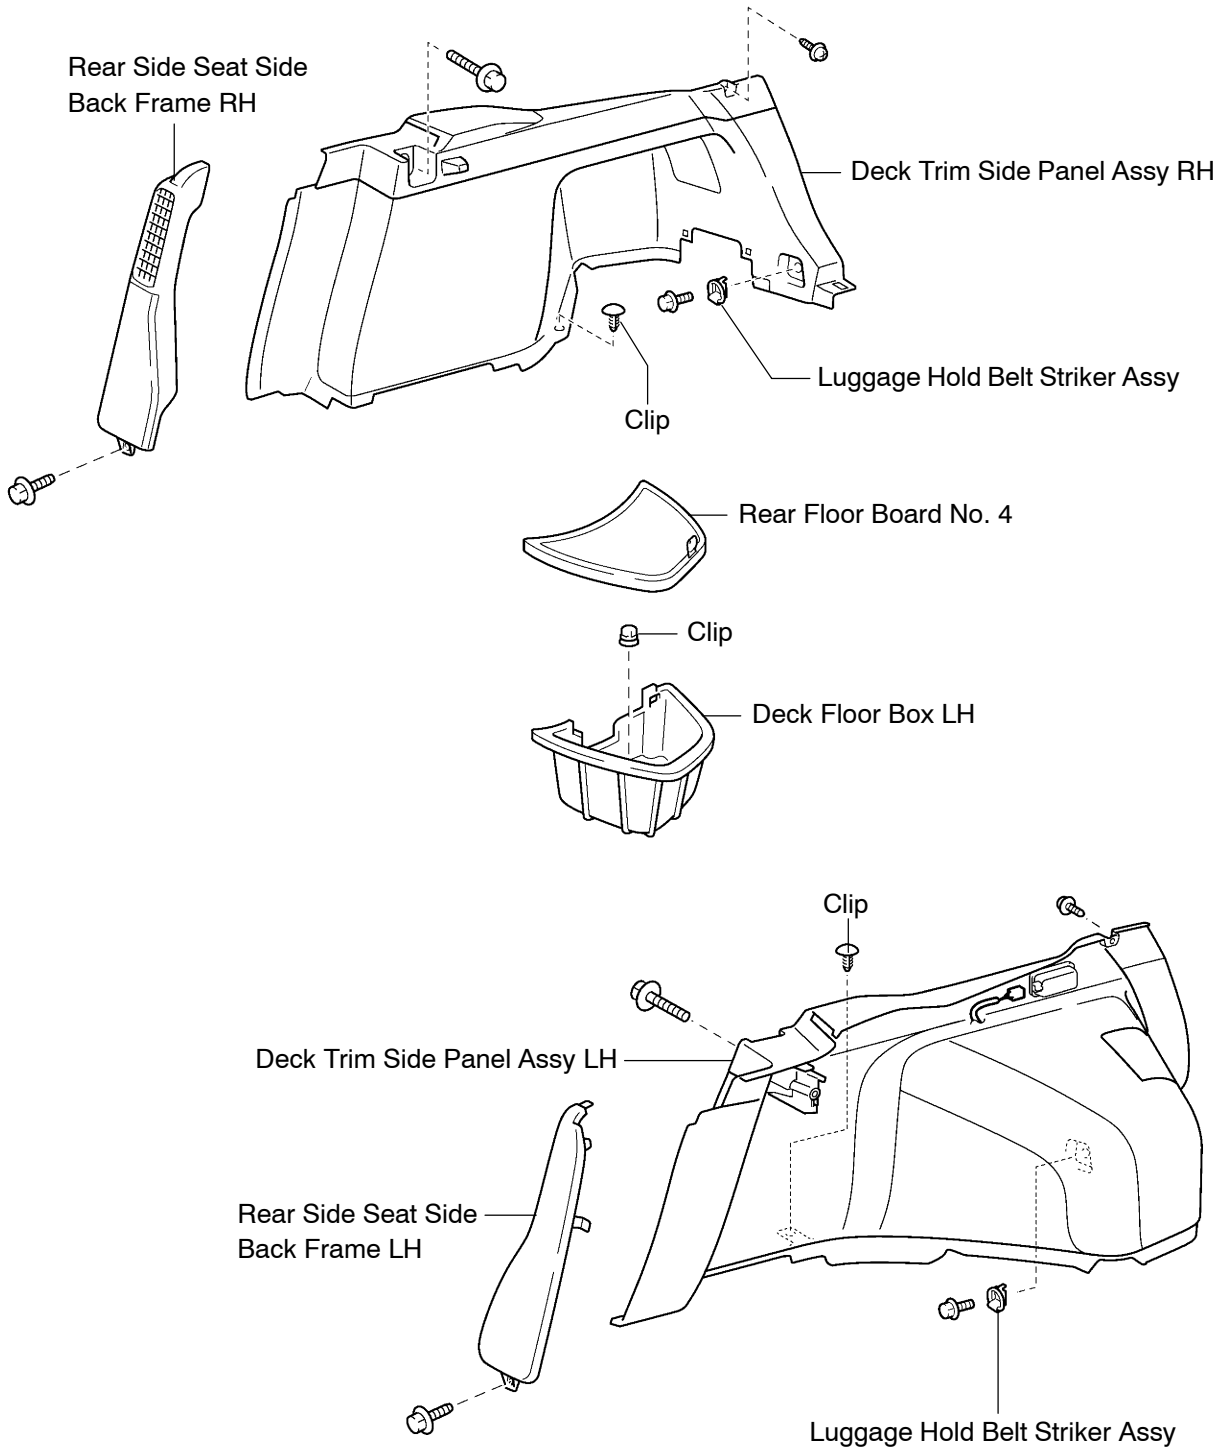

Rear Side Seat Side
Back Frame RH
Deck Trim Side Panel Assy RH
Luggage Hold Belt Striker Assy
Clip
Rear Floor Board No. 4
Clip
Deck Floor Box LH
Clip
Deck Trim Side Panel Assy LH
Rear Side Seat Side
Back Frame LH
Luggage Hold Belt Striker Assy

H

A83620

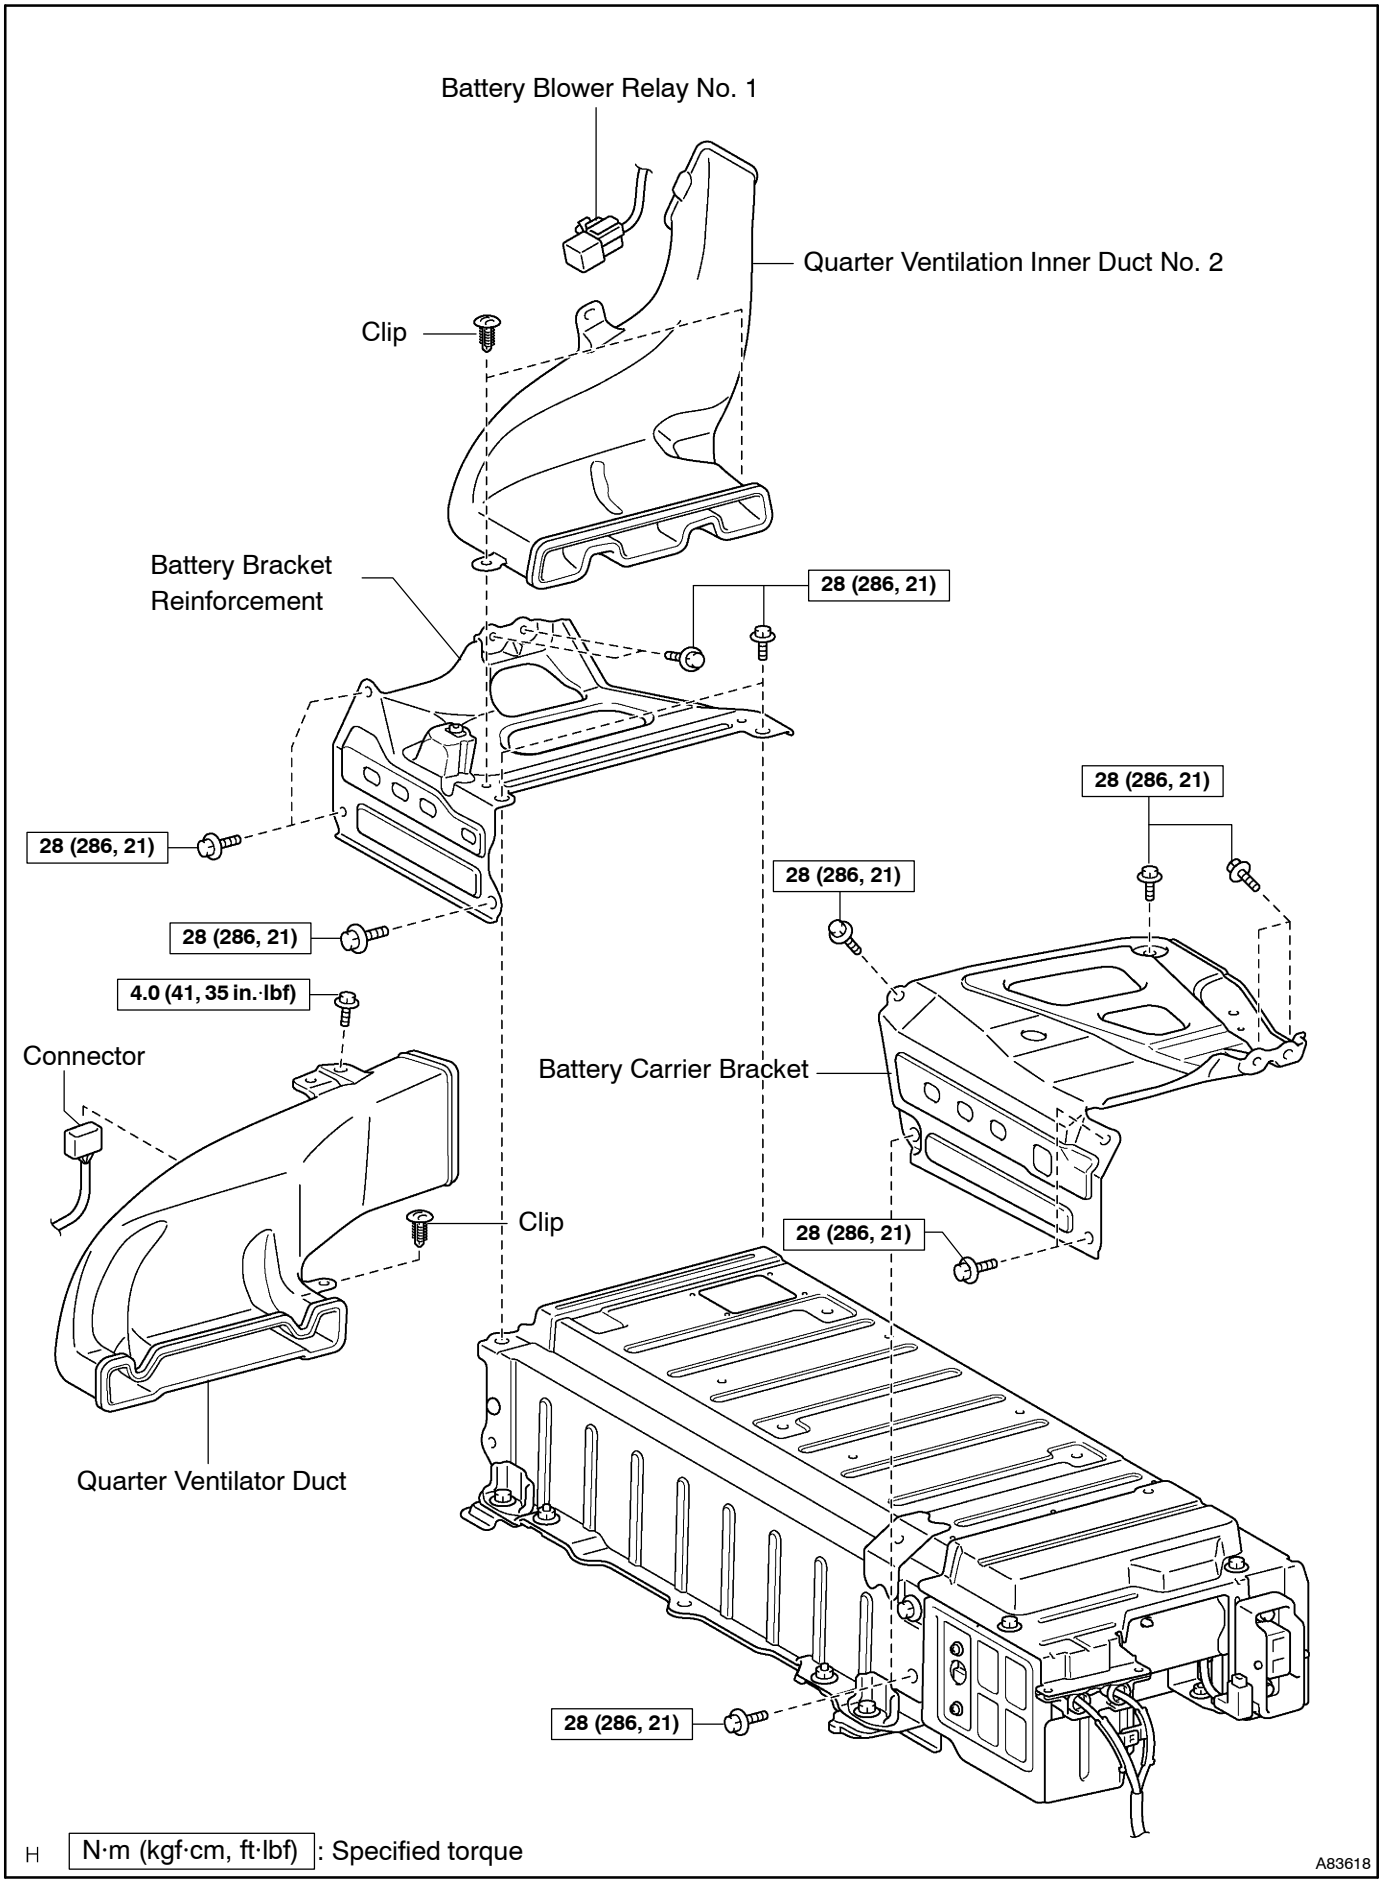
Battery Blower Relay No. 1
Quarter Ventilation Inner Duct No. 2
Clip
Battery Bracket Reinforcement
28 (286, 21)
28 (286, 21)
28 (286, 21)
28 (286, 21)
28 (286, 21)
4.0 (41, 35 in.·lbf)
Connector
Battery Carrier Bracket
Clip
28 (286, 21)
Quarter Ventilator Duct
28 (286, 21)
H N·m (kgf·cm, ft·lbf) : Specified torque
A83618

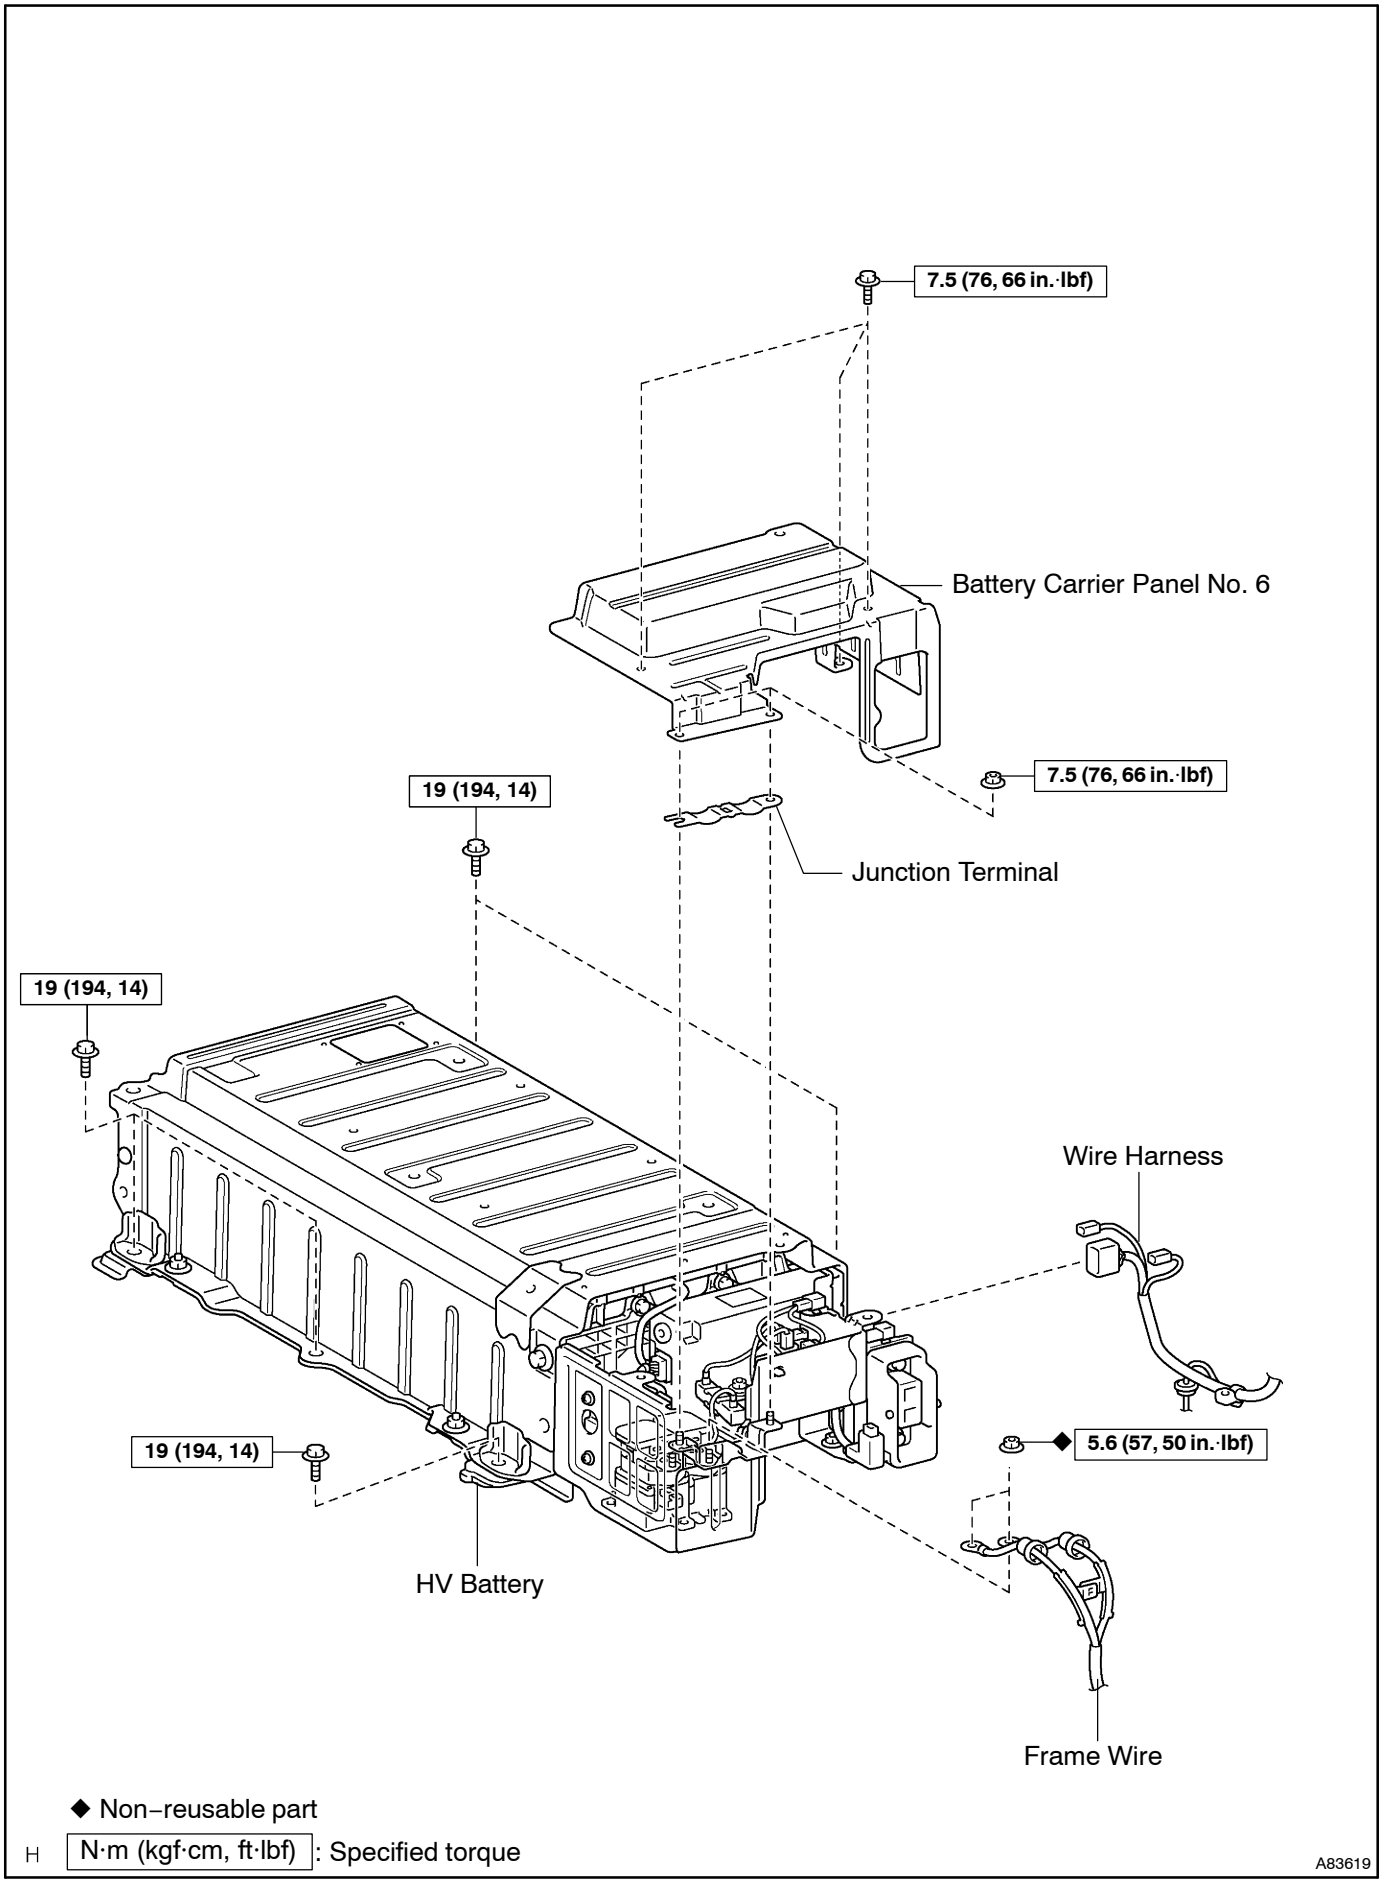

7.5 (76, 66 in.·lbf)
Battery Carrier Panel No. 6
7.5 (76, 66 in.·lbf)
19 (194, 14)
Junction Terminal
19 (194, 14)
Wire Harness
19 (194, 14)
◆ 5.6 (57, 50 in.·lbf)
HV Battery
Frame Wire
◆ Non−reusable part
H N·m (kgf·cm, ft·lbf) : Specified torque
A83619

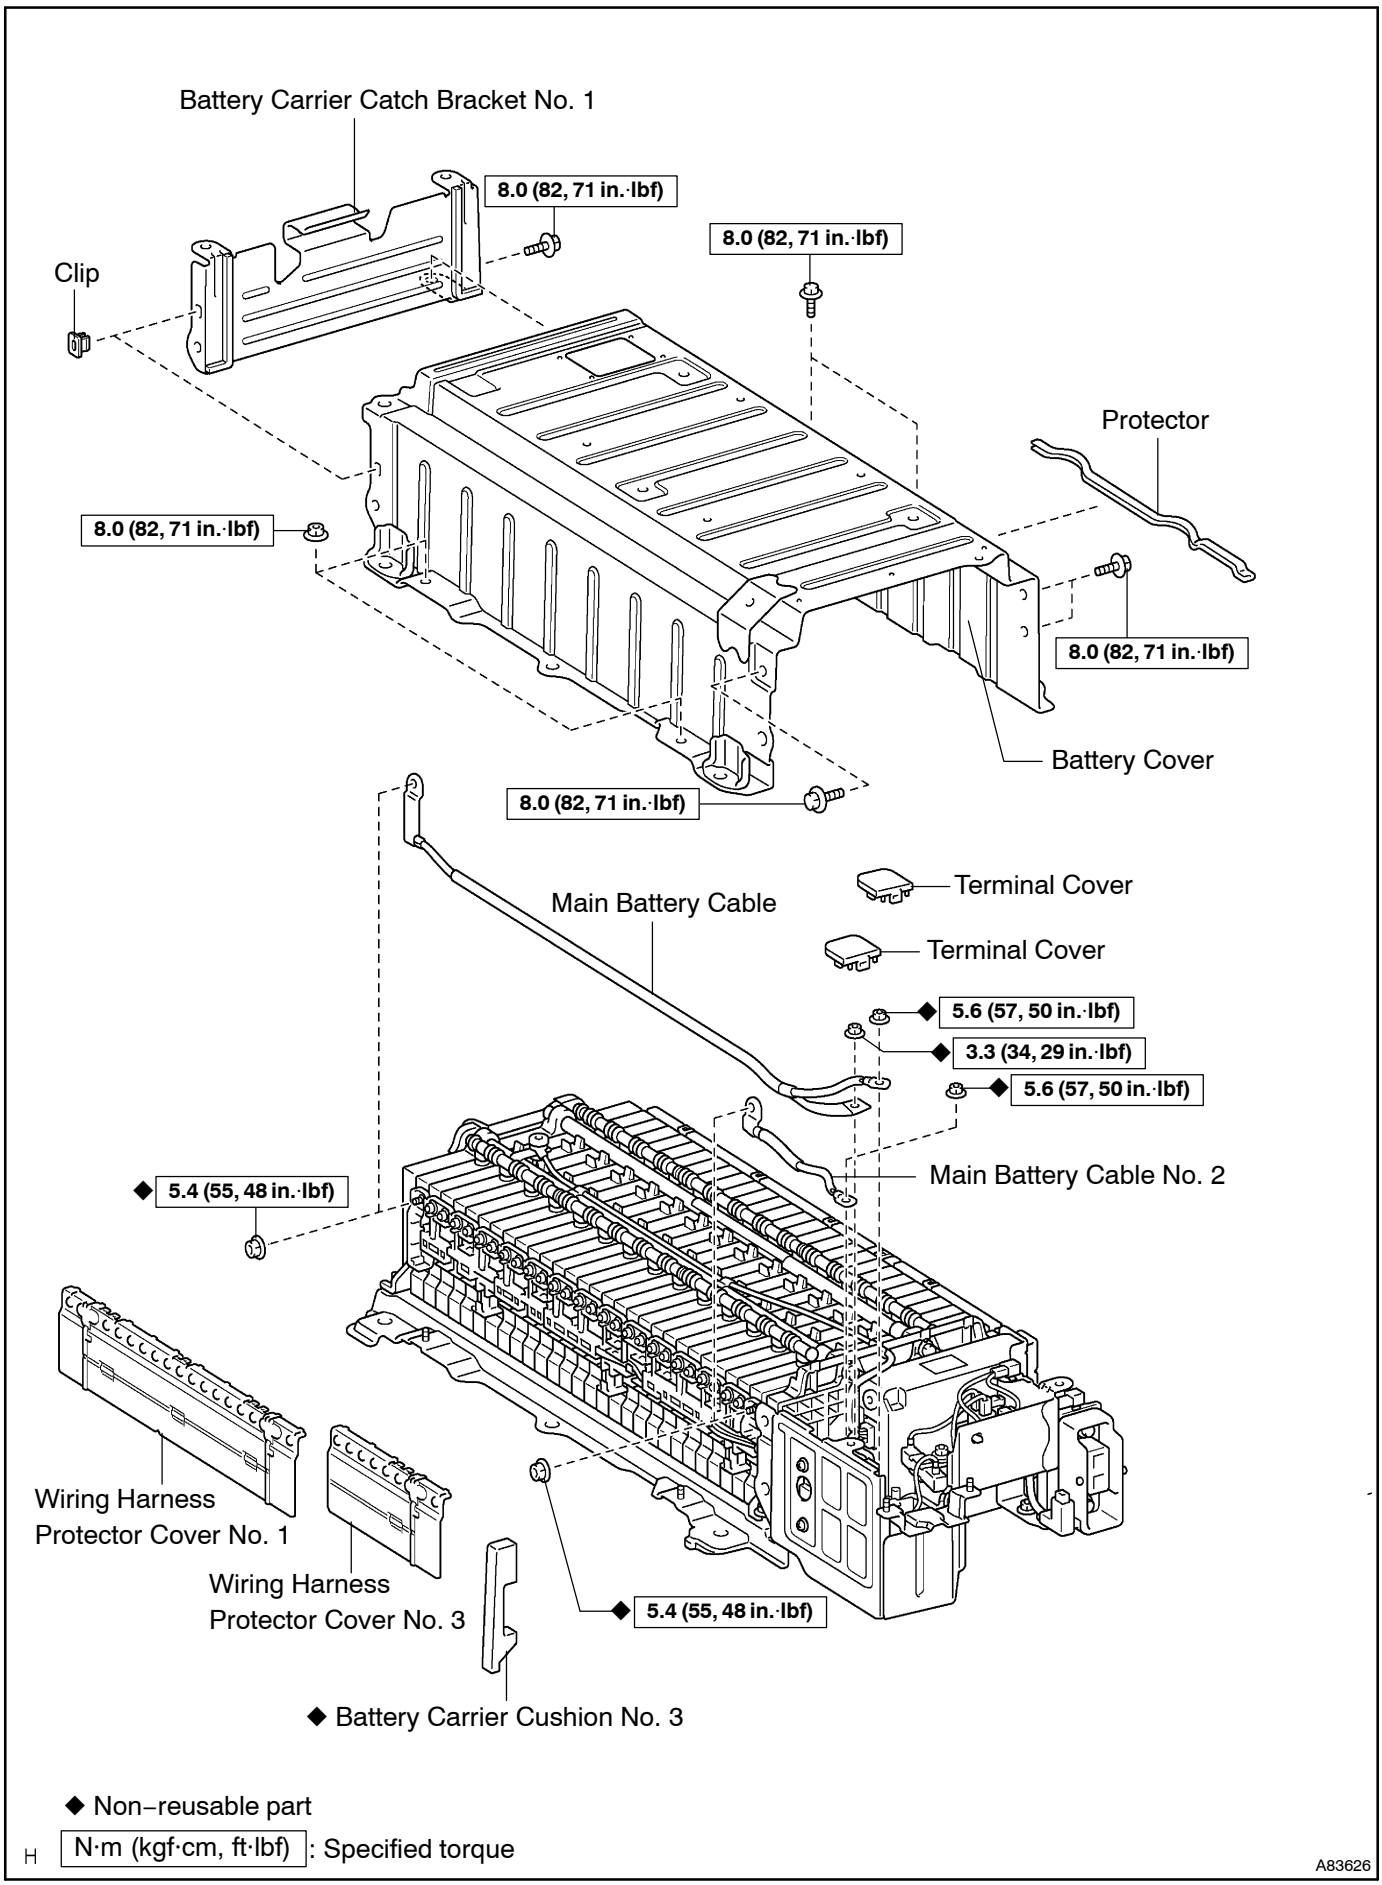

◆ Non–reusable part

H N·m (kgf·cm, ft·lbf) : Specified torque


A83626

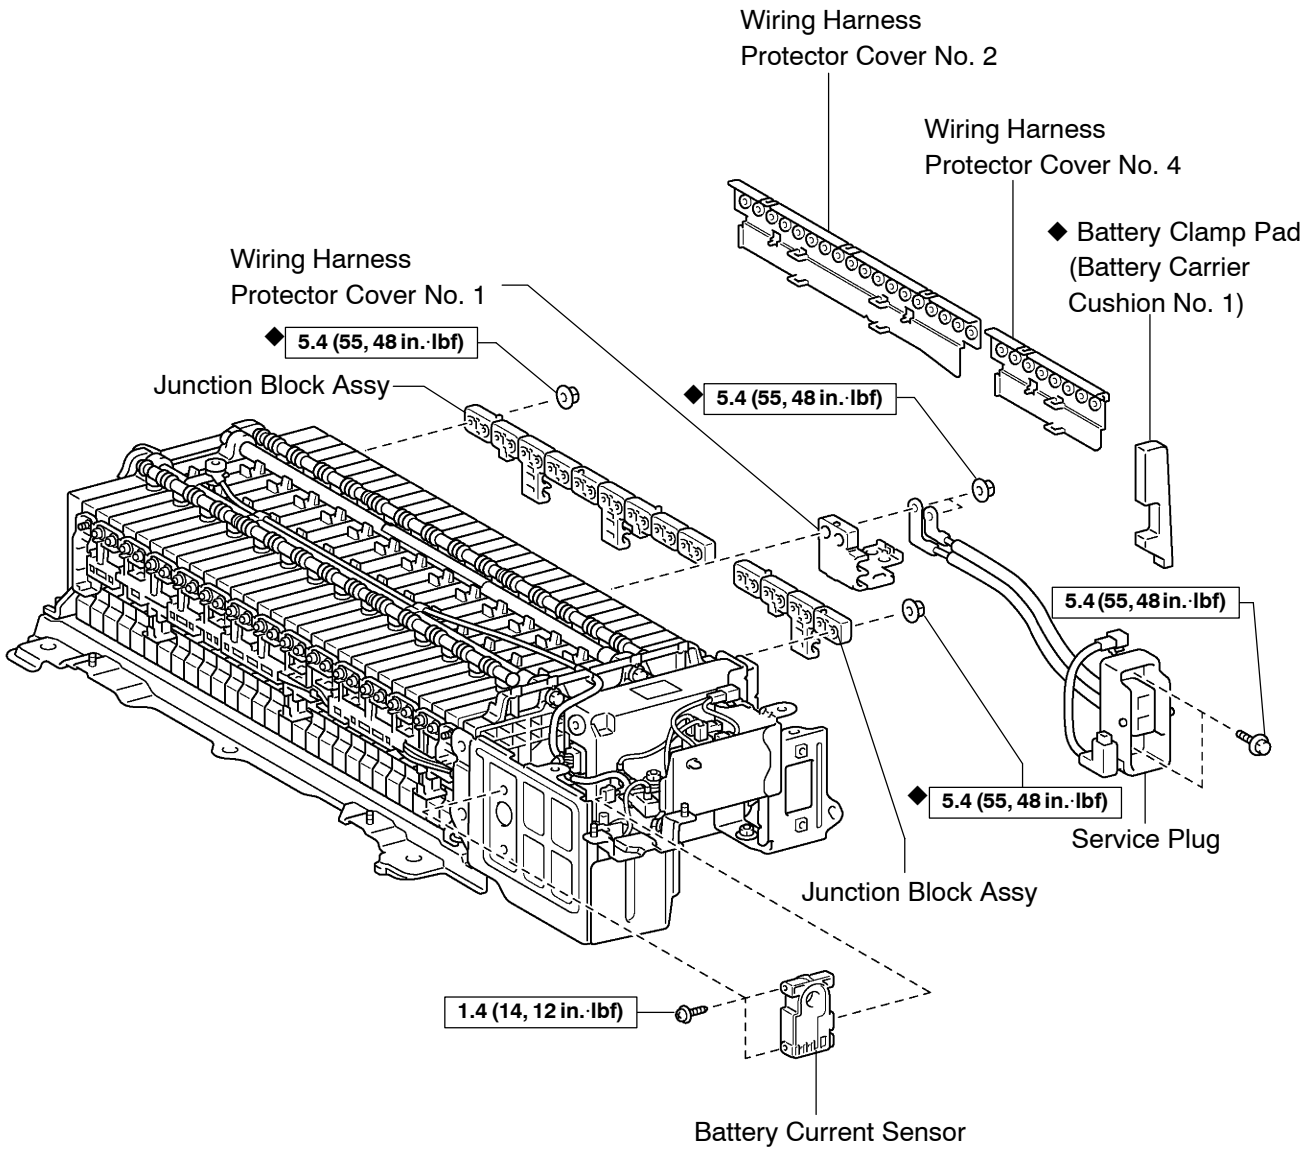

◆ Non–reusable part


H N·m (kgf·cm, ft·lbf) : Specified torque

A83627

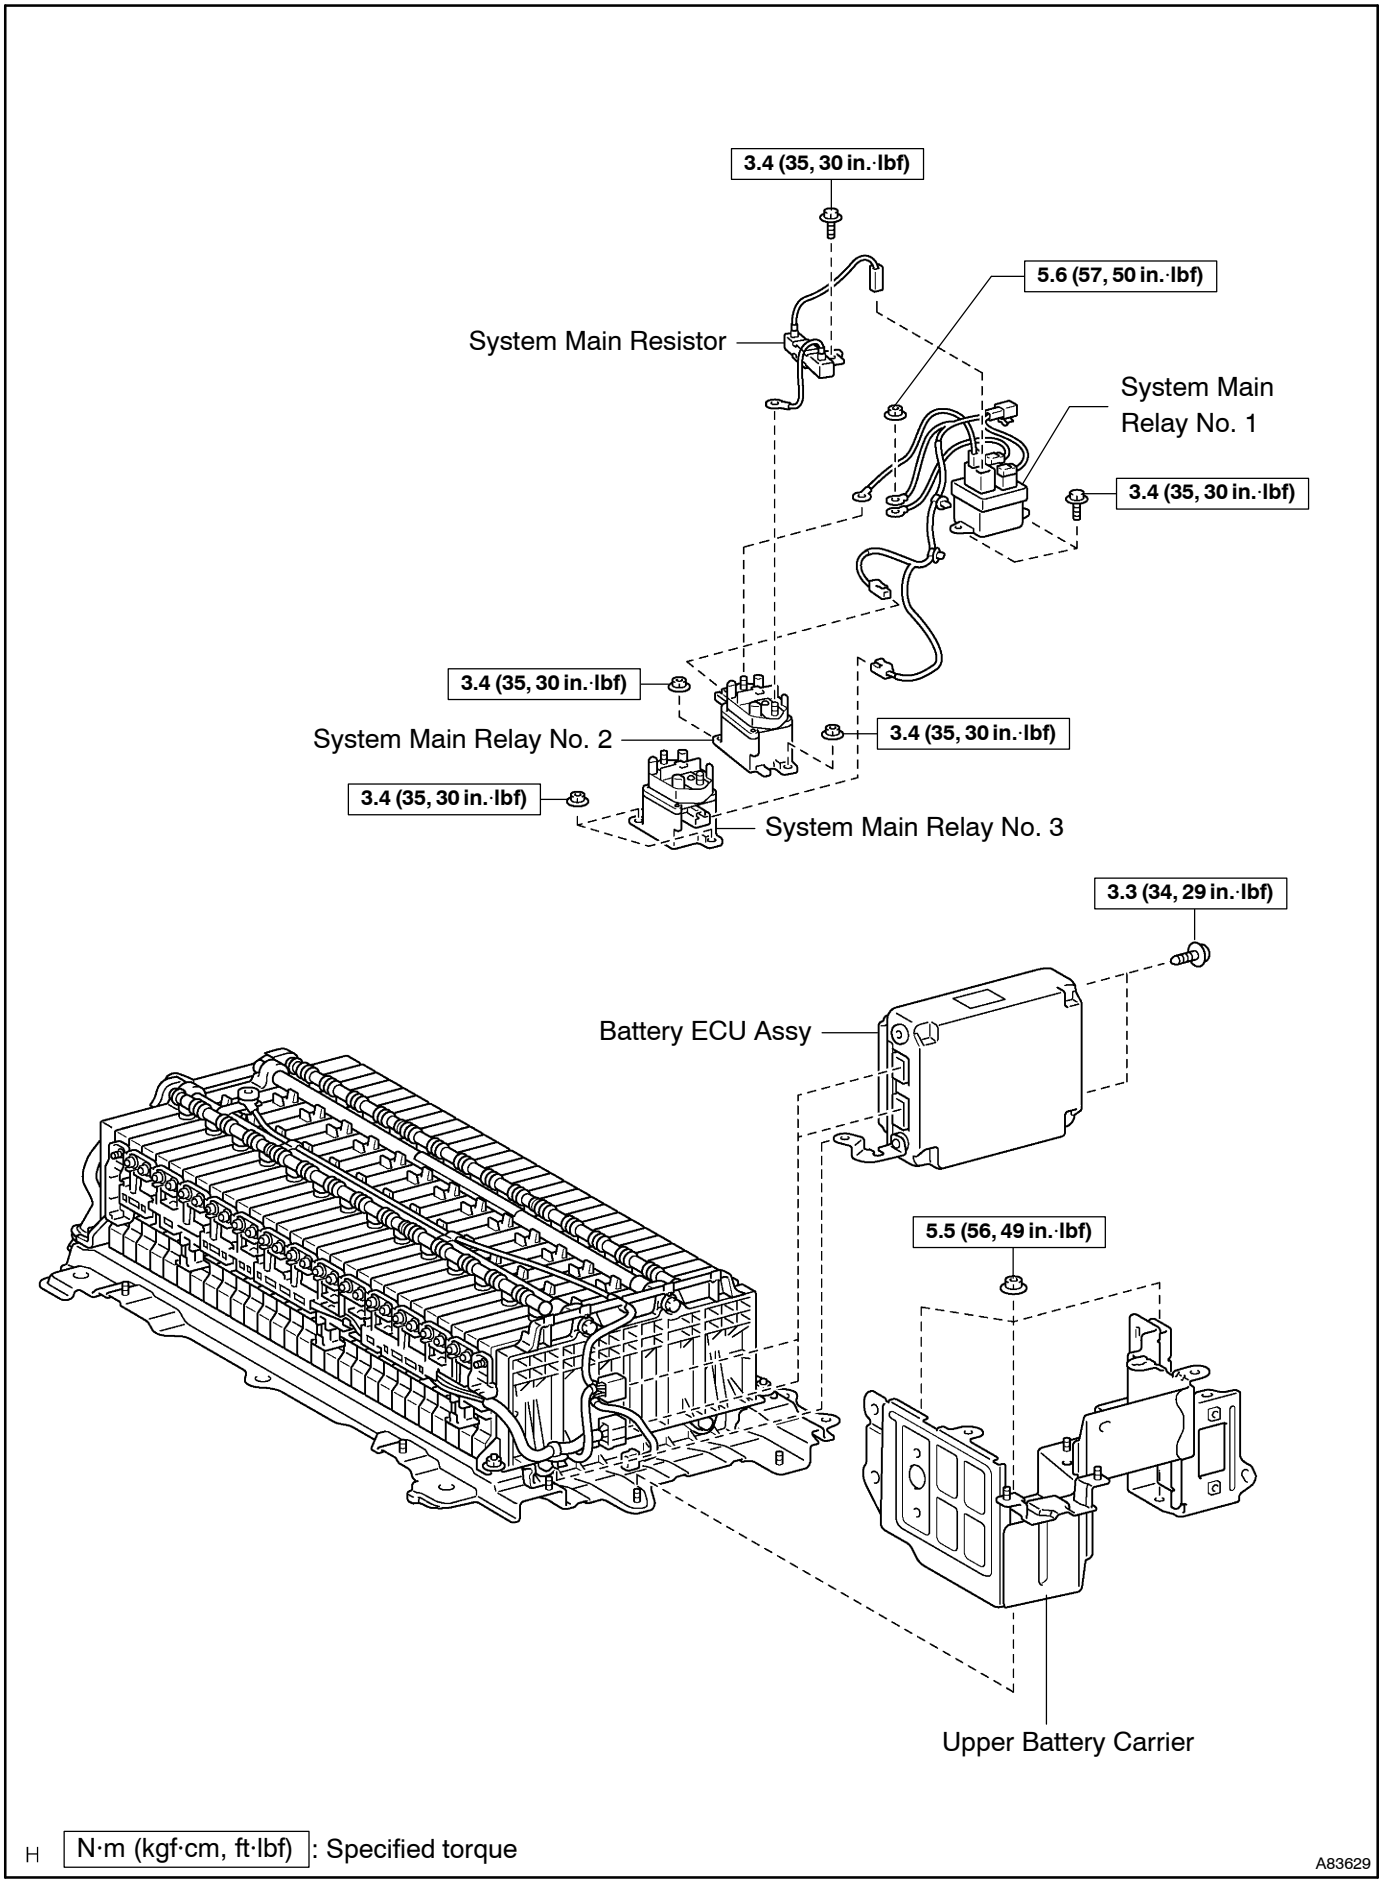

H N·m (kgf·cm, ft·lbf) : Specified torque

A83629

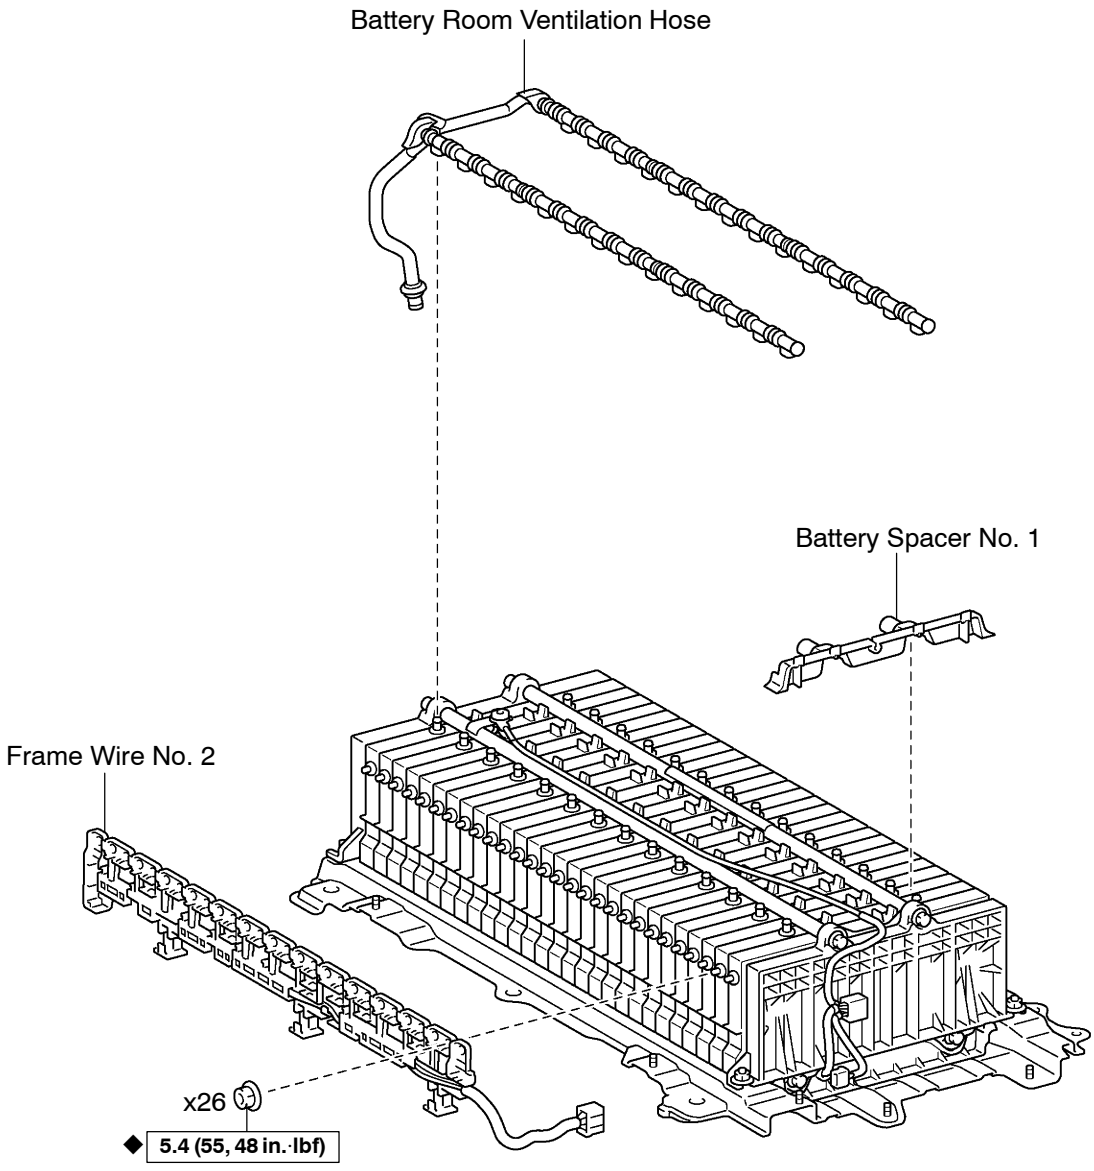

H N·m (kgf·cm, ft·lbf) : Specified torque

A83628