JUNCTION BLOCK ASSY

REPLACEMENT

2102X–01

NOTICE:

- **When working on the high voltage systems, always wear insulating gloves.**
- **After removing the service plug grip, do not operate the power switch as it may damage the hybrid vehicle control ECU.**
- **Keep the removed service plug in your pocket to prevent other technicians from reconnecting it while you are servicing the vehicle.**
- **After removing the service plug grip, do not touch the high voltage connectors and terminals for 5 minutes.**

1. **PRECAUTION (See page 21–8)**
2. **REMOVE REAR FLOOR BOARD NO.2 (See page 21–120)**
3. **REMOVE DECK FLOOR BOX REAR (See page 21–120)**
4. **REMOVE REAR FLOOR BOARD NO.3 (See page 21–120)**
5. **DISCONNECT BATTERY NEGATIVE TERMINAL (See page 21–120)**
6. **REMOVE SERVICE PLUG GRIP (See page 21–120)**
7. **REMOVE DECK TRIM COVER REAR (See page 21–56)**
8. **REMOVE TONNEAU COVER ASSY (See page 21–56)**
9. **REMOVE REAR SEAT CUSHION ASSY (See page 21–56)**
10. **REMOVE REAR FLOOR BOARD NO.1 (See page 21–56)**
11. **REMOVE REAR SIDE SEAT BACK FRAME LH (See page 21–56)**
12. **REMOVE REAR SIDE SEAT BACK FRAME RH (See page 21–56)**
13. **REMOVE REAR FLOOR BOARD NO.4 (See page 21–56)**
14. **REMOVE DECK FLOOR BOX LH (See page 21–56)**
15. **REMOVE DECK TRIM SIDE PANEL ASSY LH (See page 21–56)**
16. **REMOVE DECK TRIM SIDE PANEL ASSY RH (See page 21–56)**
17. **REMOVE BATTERY CARRIER BRACKET (See page 21–56)**
18. **REMOVE QUARTER VENT DUCT INNER NO.2 (See page 21–56)**
19. **REMOVE BATTERY BRACKET REINFORCEMENT (See page 21–56)**
20. **REMOVE QUARTER VENT DUCT (See page 21–56)**
21. **REMOVE BATTERY CARRIER PANEL NO.6 (See page 21–56)**
22. **REMOVE JUNCTION TERMINAL (See page 21–56)**

NOTICE:


Wear insulating gloves.

23. **REMOVE FRAME WIRE (See page 21–56)**

NOTICE:

Wear insulating gloves.

24. **REMOVE HV BATTERY ASSY (See page 21–56)**
25. **REMOVE BATTERY COVER SUB–ASSY (See page 21–56)**

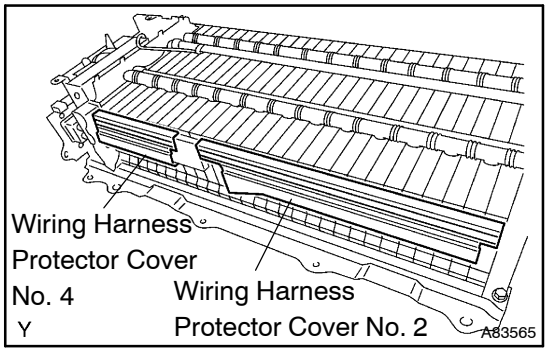

26. REMOVE WIRING HARNESS PROTECTOR COVER NO.2


NOTICE:

Wear insulating gloves.

27. REMOVE WIRING HARNESS PROTECTOR COVER NO.4

NOTICE:

Wear insulating gloves.

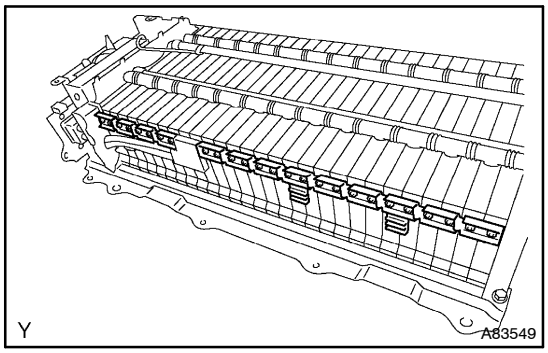


28. REMOVE JUNCTION BLOCK ASSY

NOTICE:

Wear insulating gloves.

(a) Remove the 26 nuts and junction block assembly.

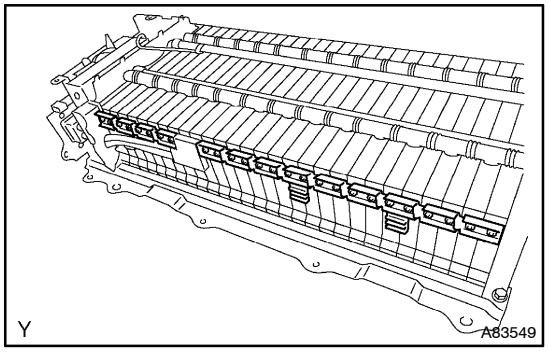


29. INSTALL JUNCTION BLOCK ASSY

NOTICE:

Wear insulating gloves.

(a) Install the junction block assembly with 26 new nuts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

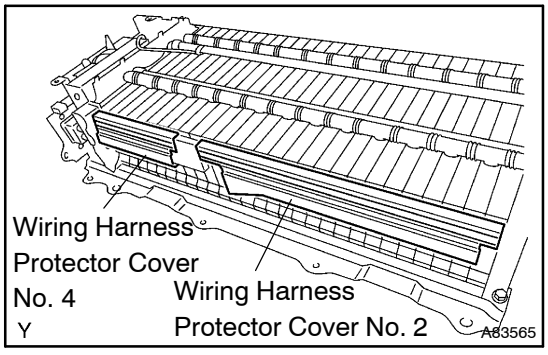

30. INSTALL WIRING HARNESS PROTECTOR COVER NO.2

NOTICE:

Wear insulating gloves.

31. INSTALL WIRING HARNESS PROTECTOR COVER NO.4

NOTICE:

Wear insulating gloves.

32. INSTALL BATTERY COVER SUB–ASSY (See page 21–56)
33. INSTALL HV BATTERY ASSY (See page 21–56)
34. INSTALL FRAME WIRE (See page 21–56)

NOTICE:
Wear insulating gloves.

35. INSTALL JUNCTION TERMINAL (See page 21–56)

NOTICE:
Wear insulating gloves.

36. INSTALL BATTERY CARRIER PANEL NO.6 (See page 21–56)
37. INSTALL QUARTER VENT DUCT (See page 21–56)
38. INSTALL BATTERY BRACKET REINFORCEMENT (See page 21–56)
39. INSTALL QUARTER VENT DUCT INNER NO.2 (See page 21–56)
40. INSTALL BATTERY CARRIER BRACKET (See page 21–56)
41. INSTALL DECK TRIM SIDE PANEL ASSY RH
42. INSTALL DECK TRIM SIDE PANEL ASSY LH
43. INSTALL DECK FLOOR BOX LH
44. INSTALL REAR FLOOR BOARD NO.4
45. INSTALL REAR SIDE SEAT BACK FRAME RH
46. INSTALL REAR SIDE SEAT BACK FRAME LH
47. INSTALL REAR FLOOR BOARD NO.1
48. INSTALL REAR SEAT CUSHION ASSY
49. INSTALL TONNEAU COVER ASSY
50. INSTALL DECK TRIM COVER REAR
51. INSTALL SERVICE PLUG GRIP (See page 21–120)

NOTICE:
Wear insulating gloves.

52. CONNECT BATTERY NEGATIVE TERMINAL
    Torque: 6.0 N·m (61 kgf·cm, 53 in.·lbf)
53. INSTALL REAR FLOOR BOARD NO.3
54. INSTALL DECK FLOOR BOX REAR
55. INSTALL REAR FLOOR BOARD NO.2
56. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01–29)