
FRAME WIRE


COMPONENTS


21034–01

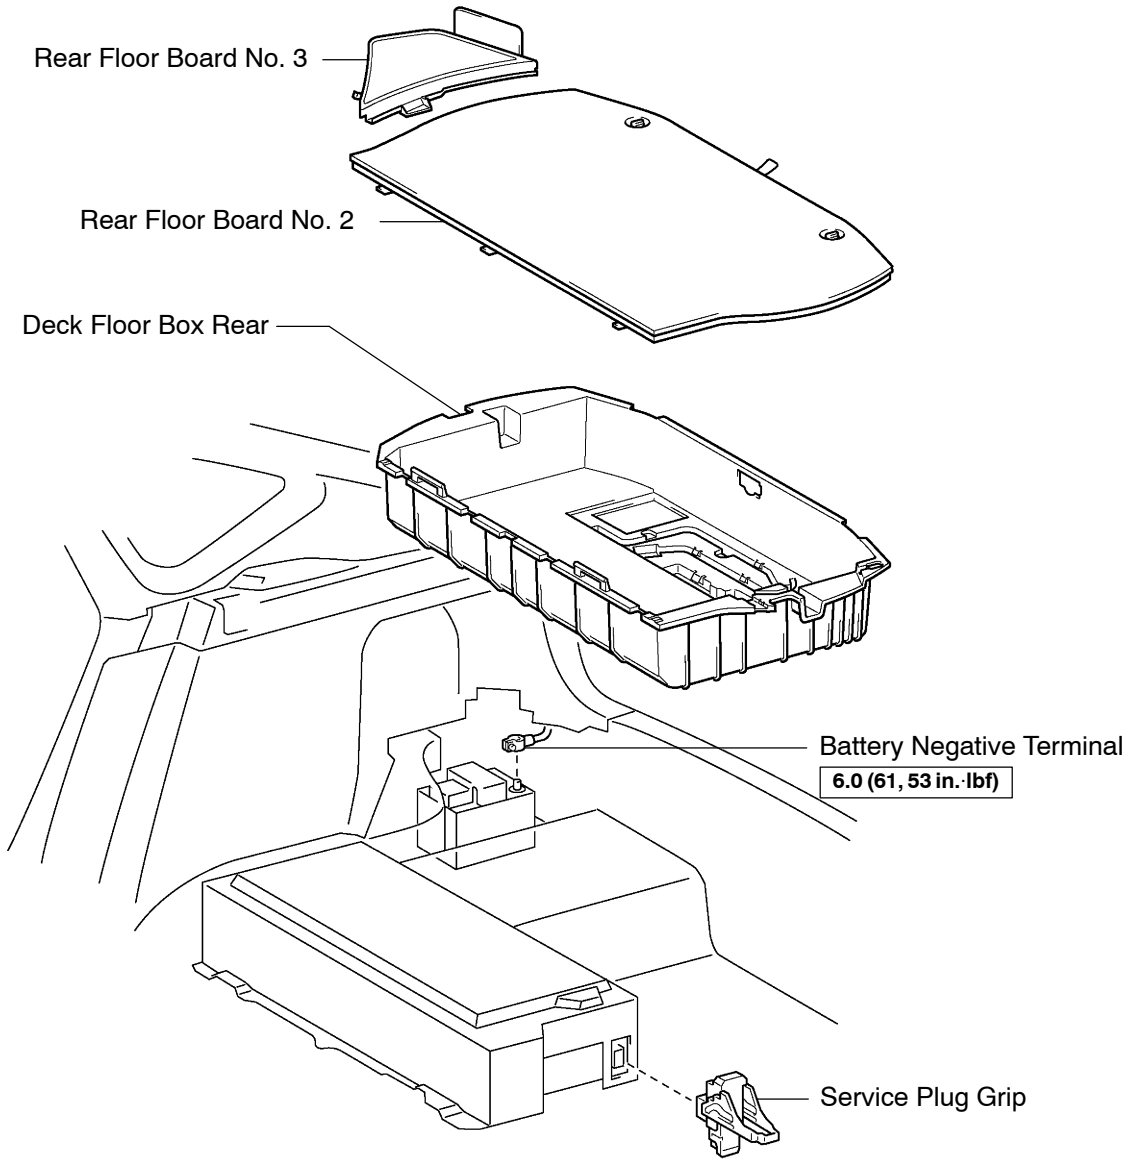


o N·m (kgf·cm, ft·lbf) : Specified torque

A83616

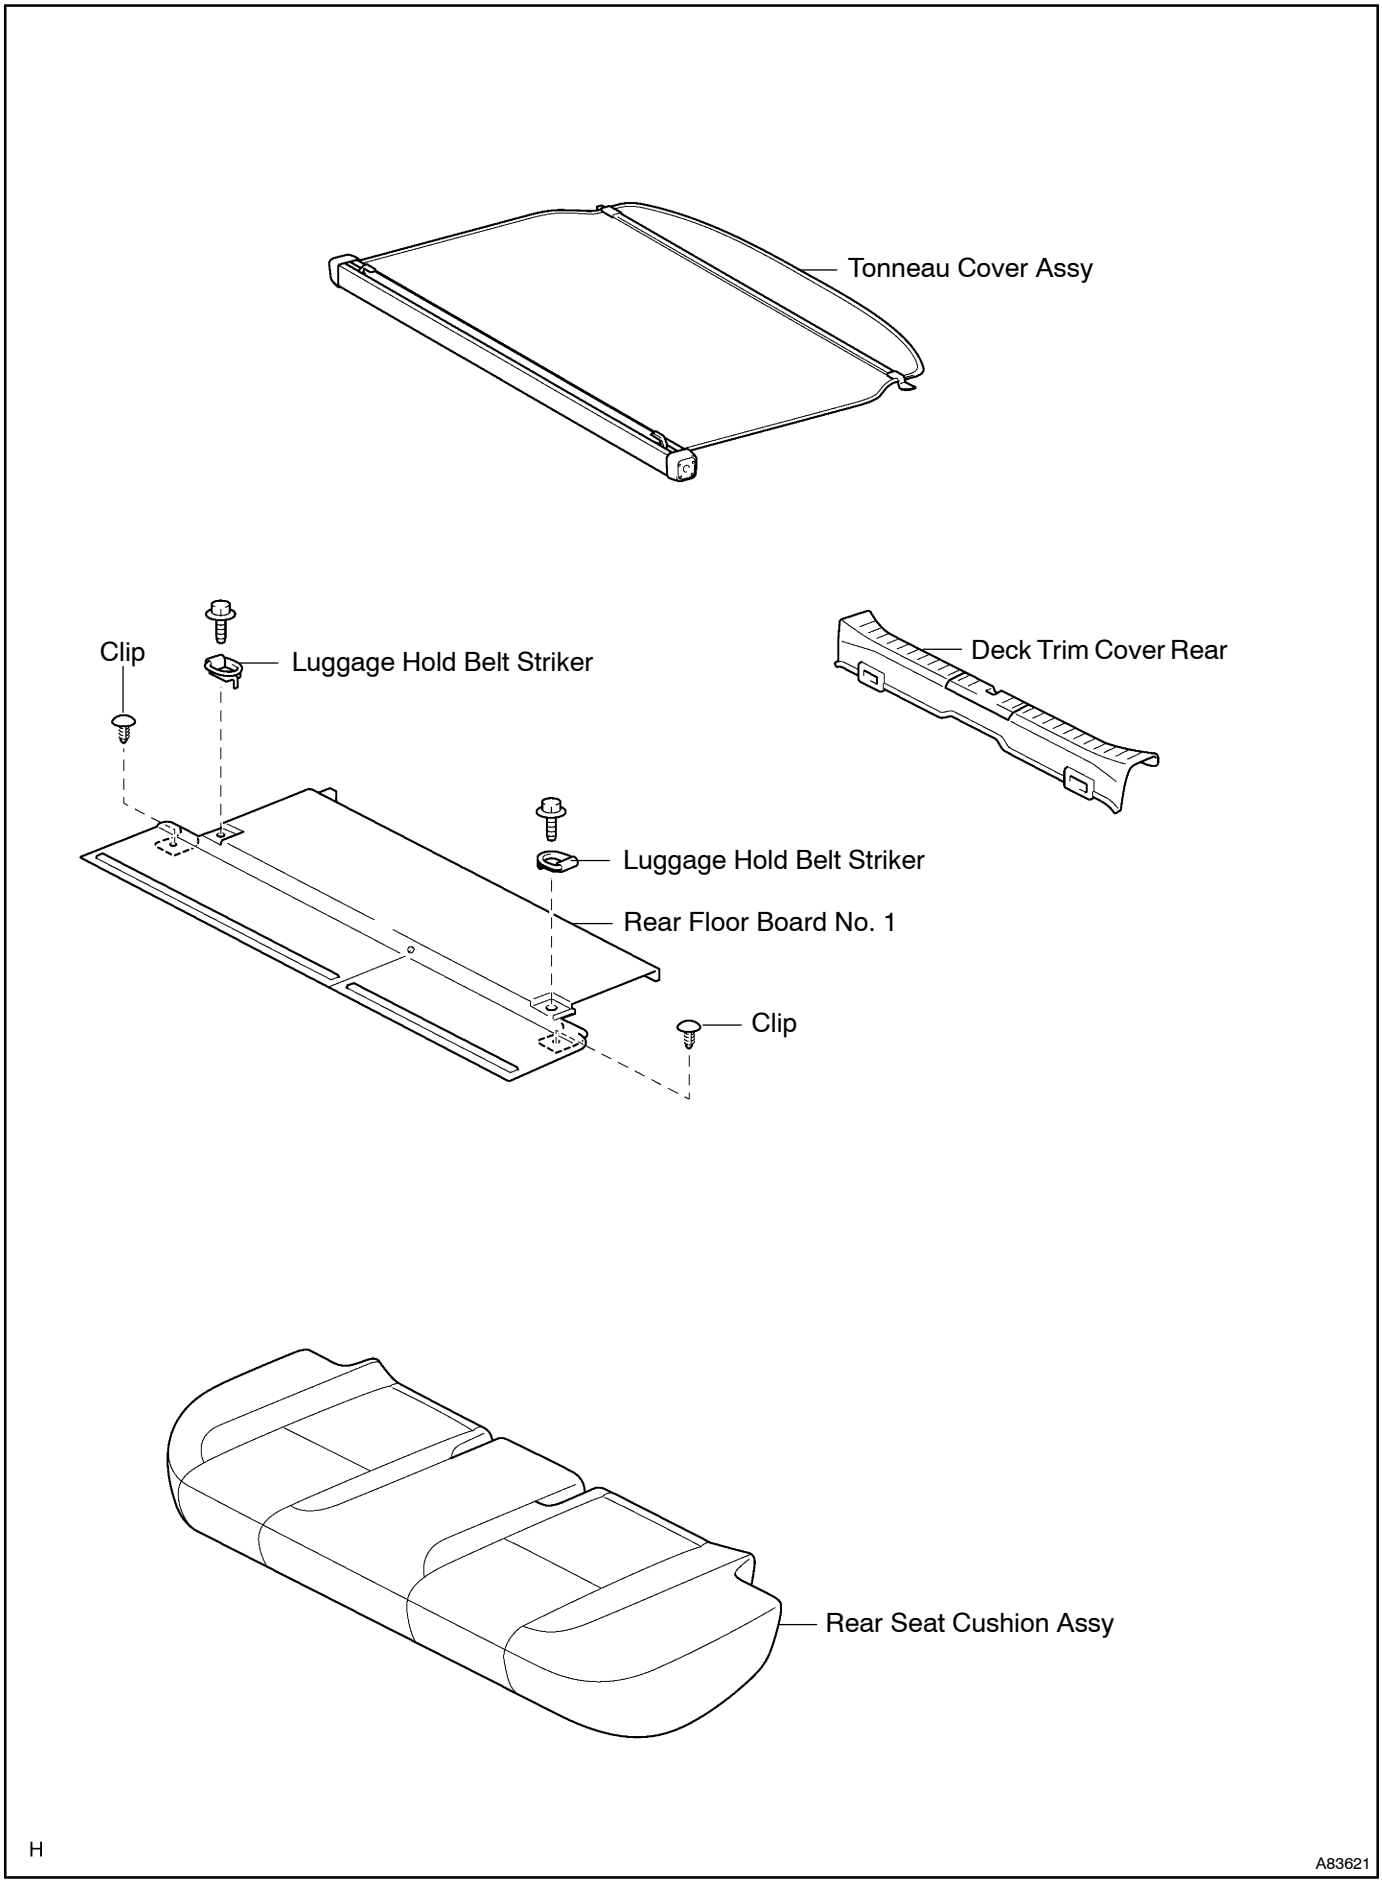
Tonneau Cover Assy
Clip
Luggage Hold Belt Striker
Deck Trim Cover Rear
Luggage Hold Belt Striker
Rear Floor Board No. 1
Clip
Rear Seat Cushion Assy
H
A83621

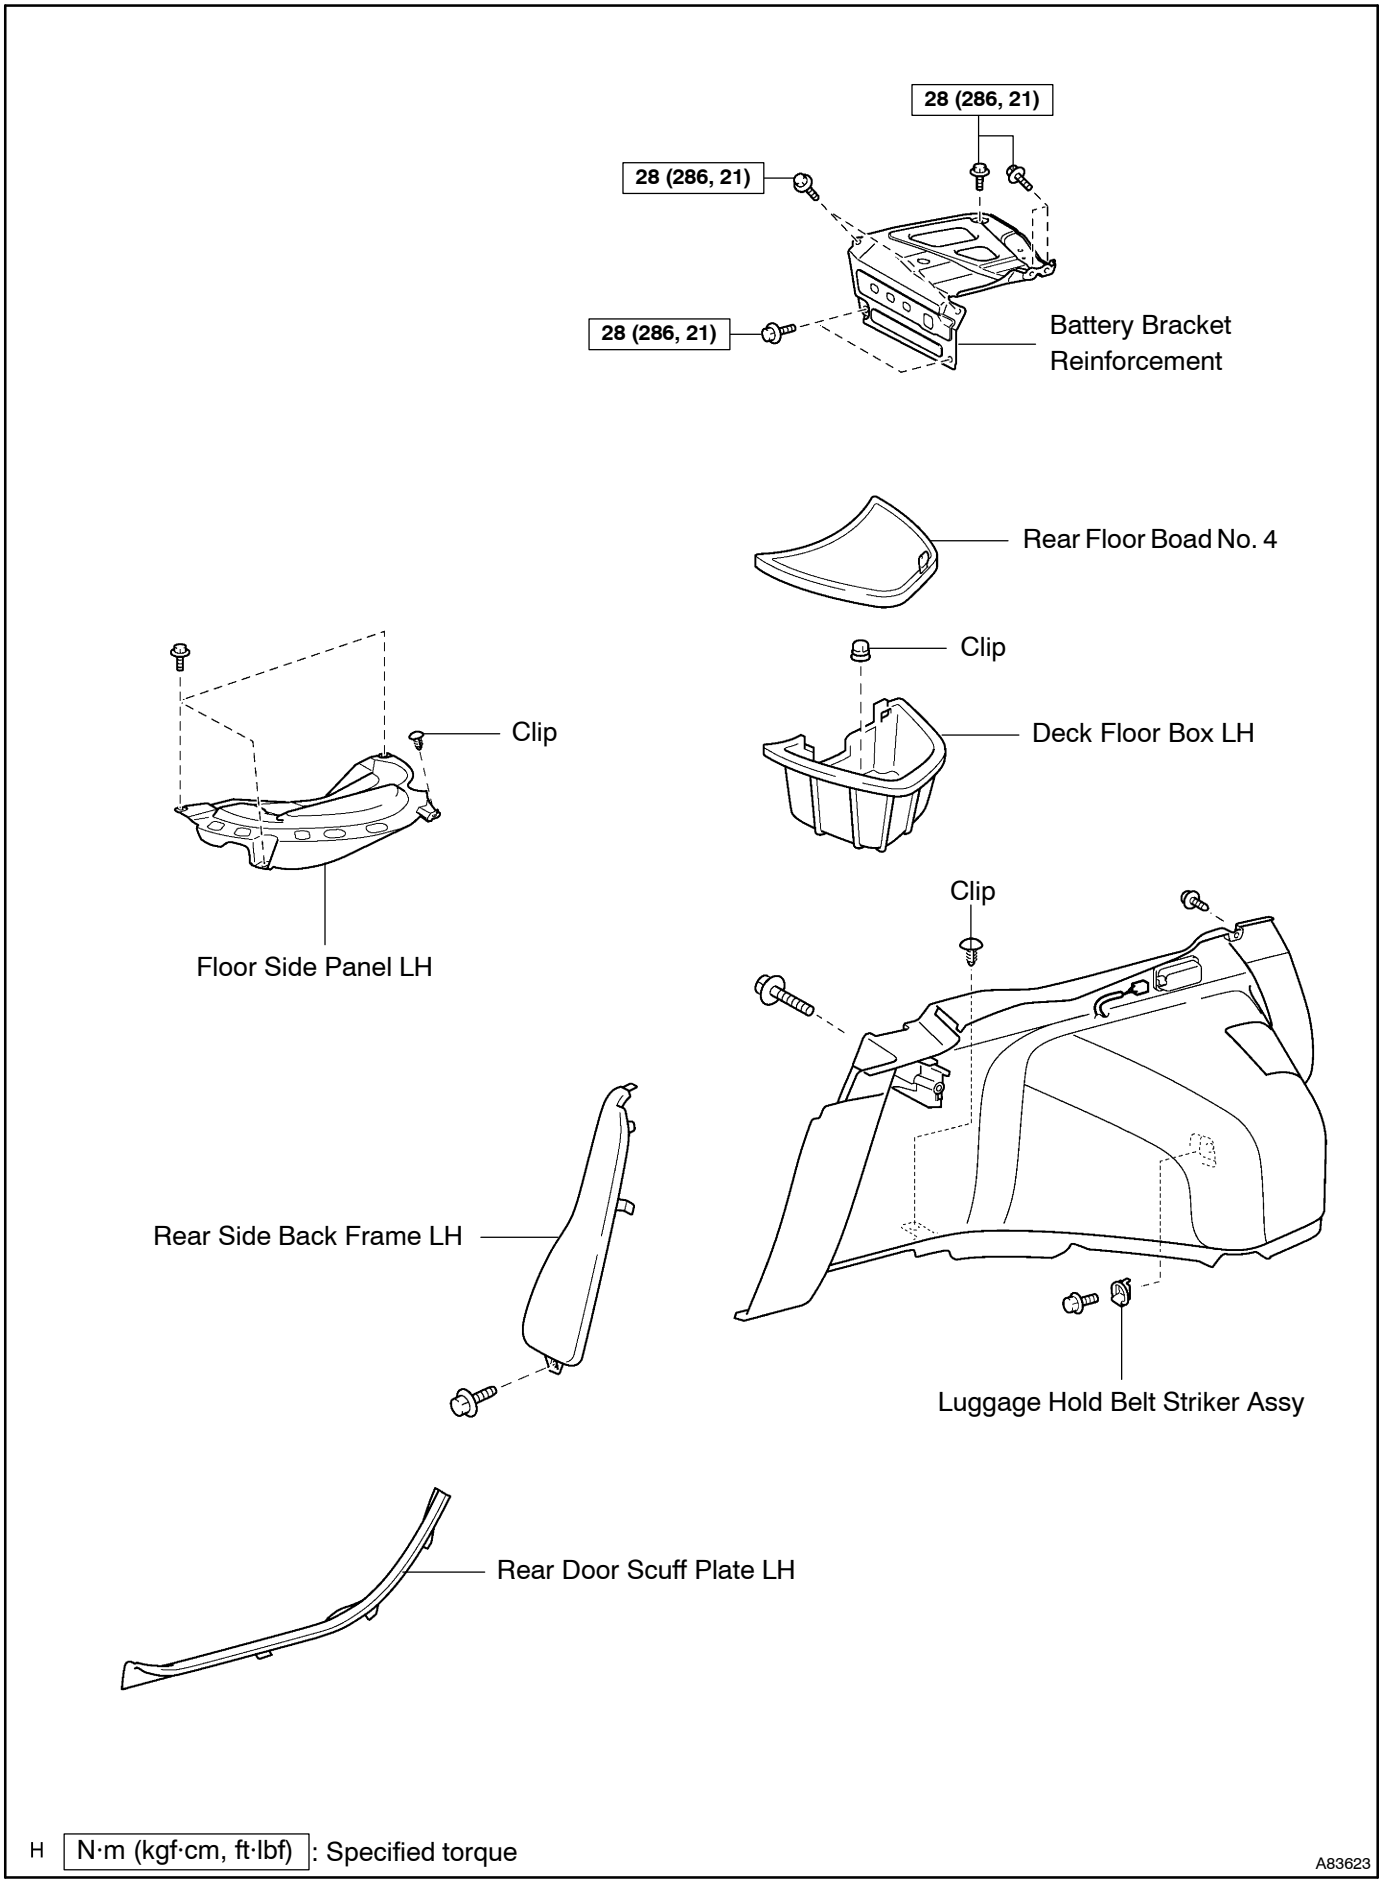
28 (286, 21)
28 (286, 21)
28 (286, 21)
Battery Bracket Reinforcement
Rear Floor Boad No. 4
Clip
Clip
Deck Floor Box LH
Clip
Floor Side Panel LH
Rear Side Back Frame LH
Luggage Hold Belt Striker Assy
Rear Door Scuff Plate LH
H N·m (kgf·cm, ft·lbf): Specified torque
A83623

LHD Steering Position Type:

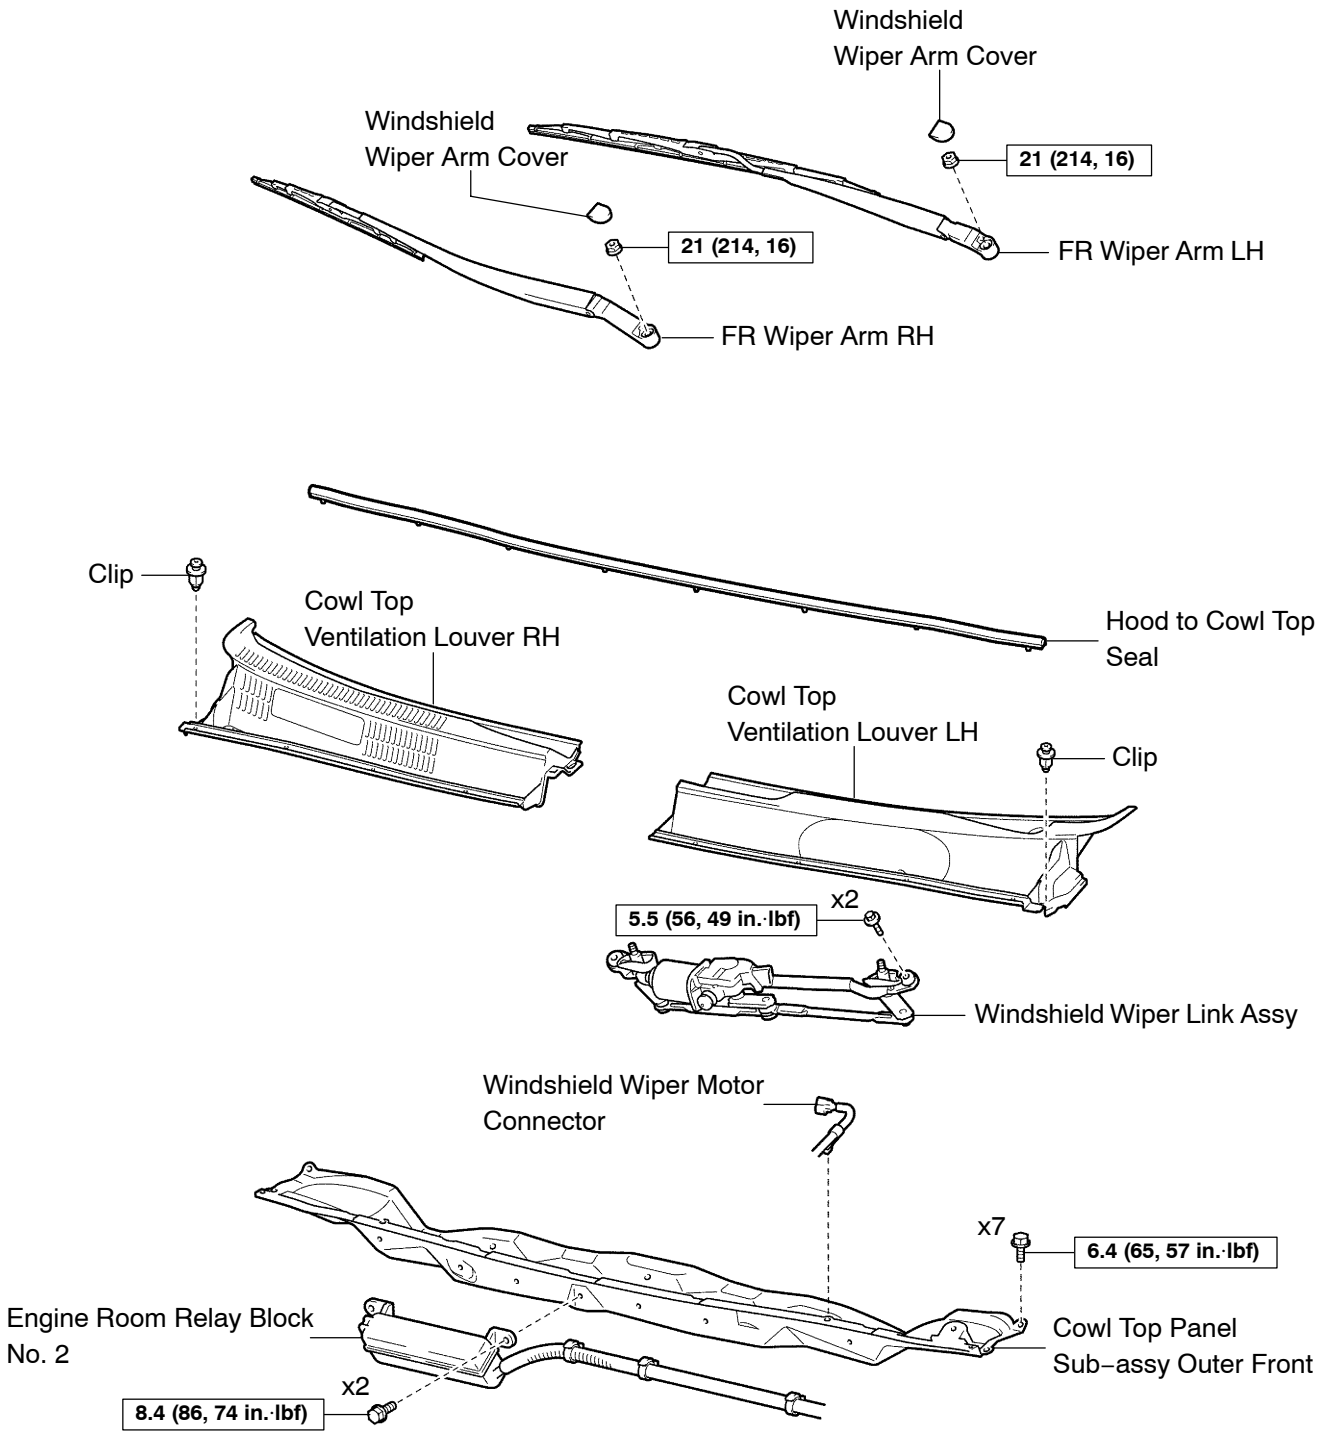


N·m (kgf·cm, ft·lbf) : Specified torque

P

A86311


RHD Steering Position Type:

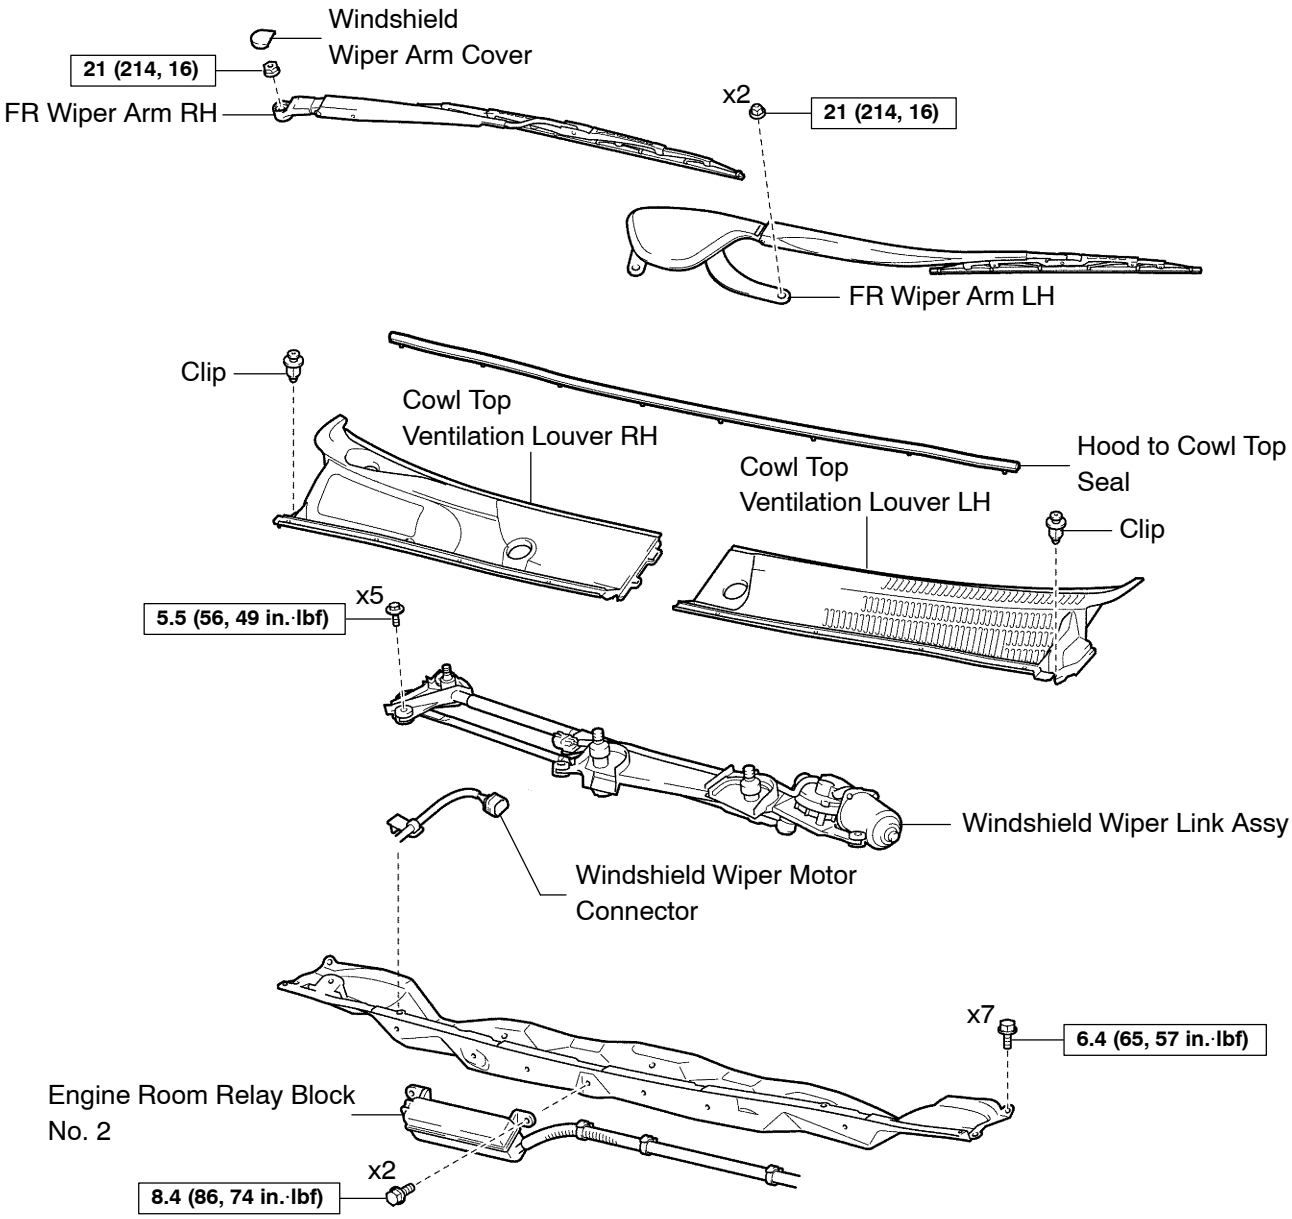

N·m (kgf·cm, ft·lbf) : Specified torque

A86312


LHD Steering Position Type:

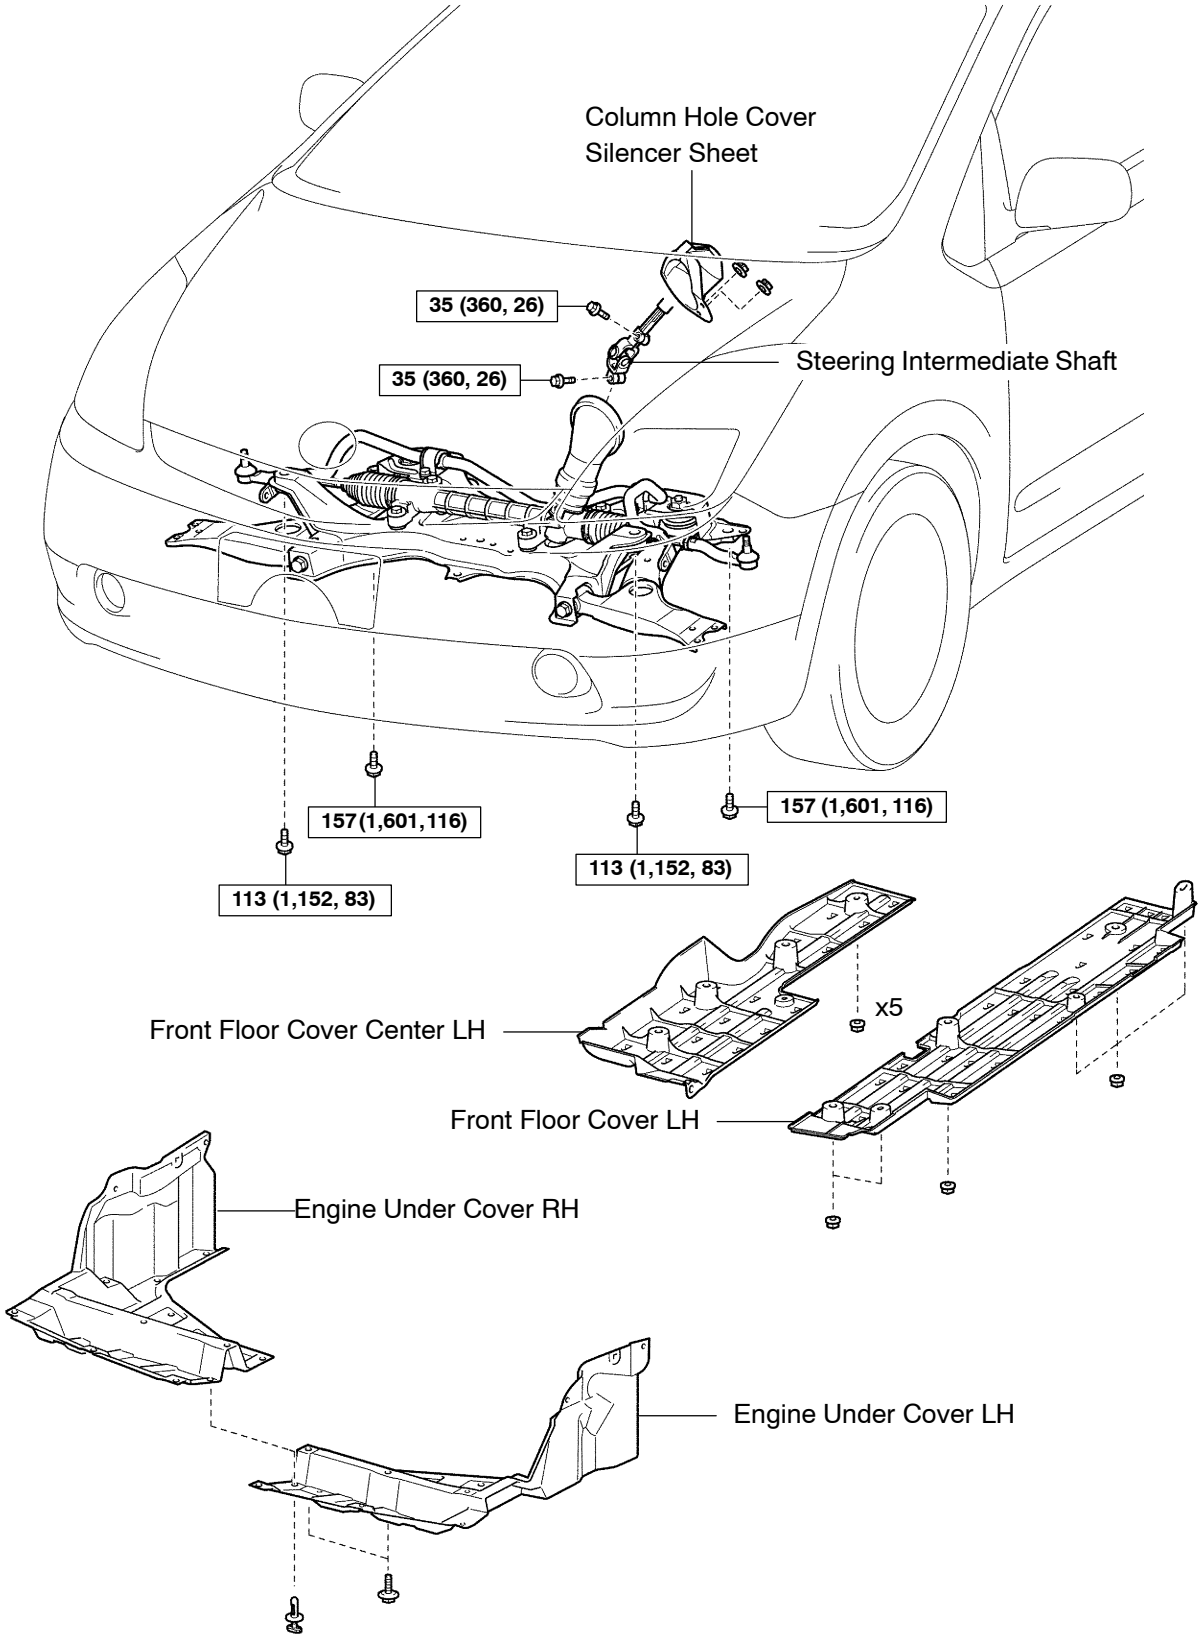

P N·m (kgf·cm, ft·lbf) : Specified torque


A83624

RHD Steering Position Type:

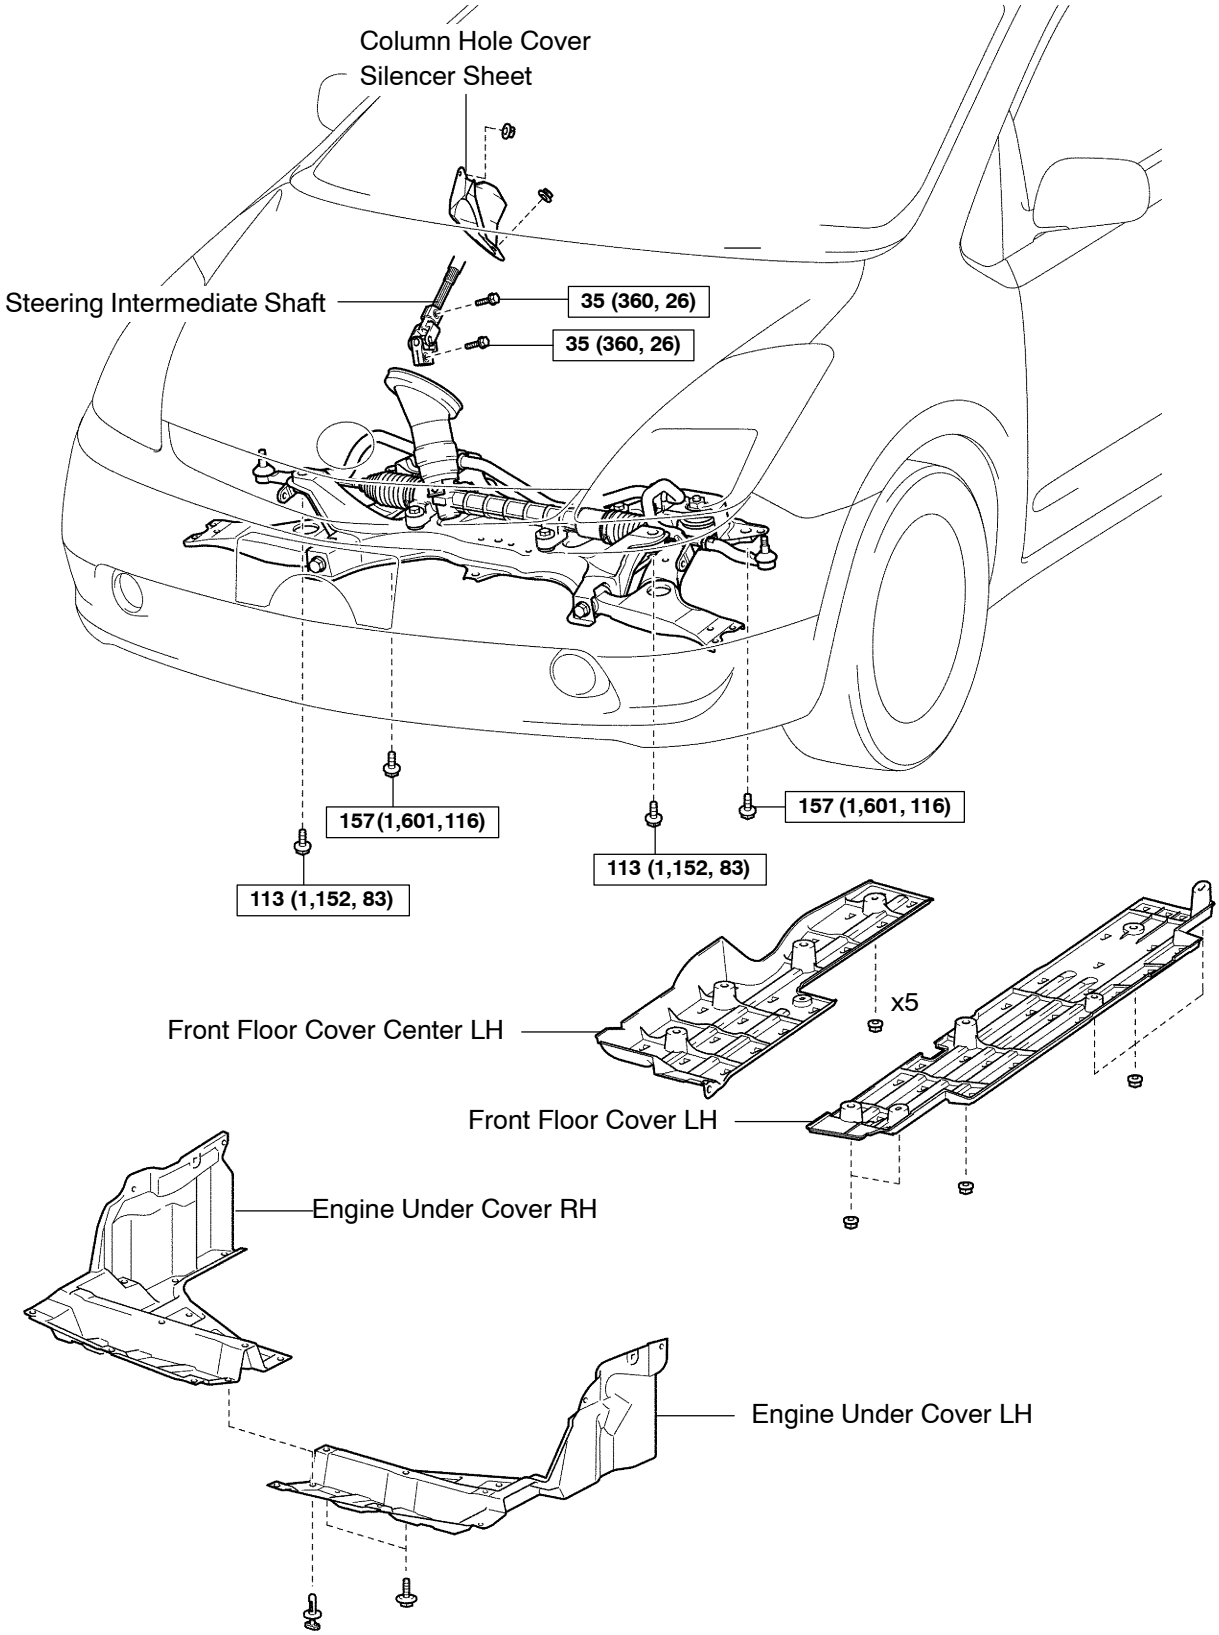

P N·m (kgf·cm, ft·lbf) : Specified torque

A92006

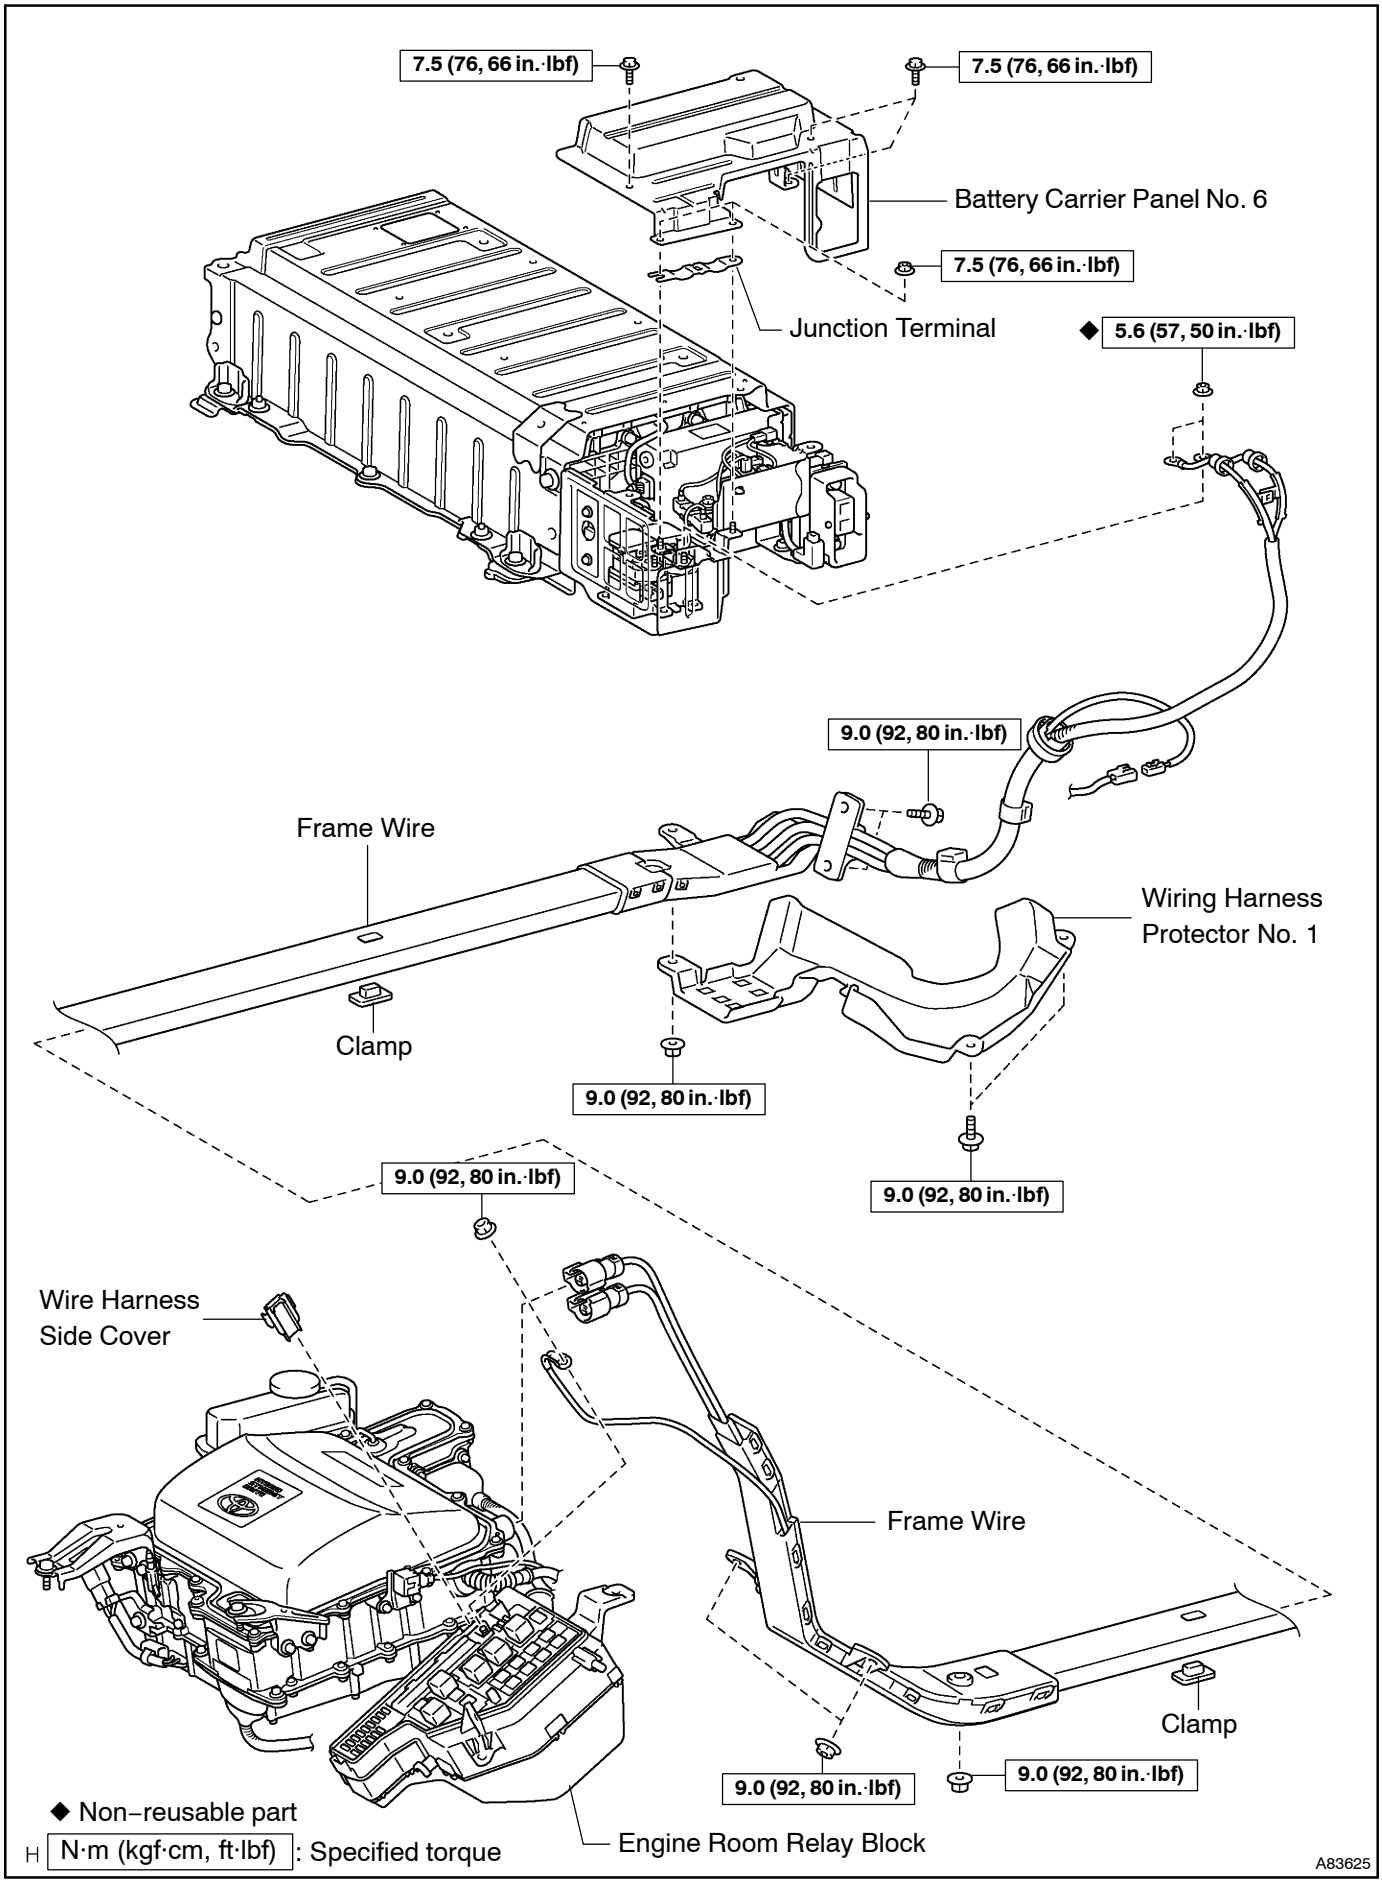
7.5 (76, 66 in.·lbf)
7.5 (76, 66 in.·lbf)
Battery Carrier Panel No. 6
7.5 (76, 66 in.·lbf)
Junction Terminal
◆ 5.6 (57, 50 in.·lbf)
9.0 (92, 80 in.·lbf)
Frame Wire
Wiring Harness Protector No. 1
Clamp
9.0 (92, 80 in.·lbf)
9.0 (92, 80 in.·lbf)
9.0 (92, 80 in.·lbf)
Wire Harness Side Cover
Frame Wire
Clamp
9.0 (92, 80 in.·lbf)
9.0 (92, 80 in.·lbf)
◆ Non–reusable part
H N·m (kgf·cm, ft·lbf) : Specified torque
Engine Room Relay Block
A83625