
WATER W/MOTOR & BRACKET PUMP ASSY

21039–01


REPLACEMENT

1. REMOVE RADIATOR SUPPORT OPENING COVER
2. REMOVE ENGINE UNDER COVER LH
3. REMOVE ENGINE UNDER COVER RH
4. DRAIN HV COOLANT (See page 22–4)

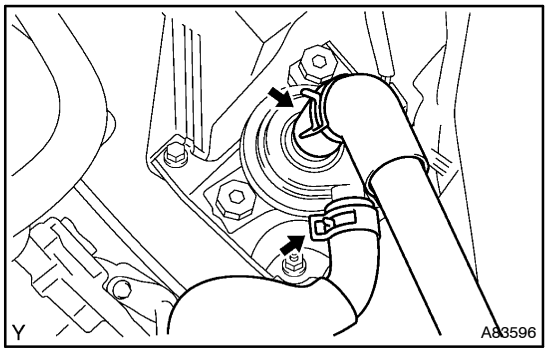

5. REMOVE WATER W/MOTOR & BRACKET PUMP ASSY

(a) Disconnect the 2 inverter cooling hoses shown in the illustration.

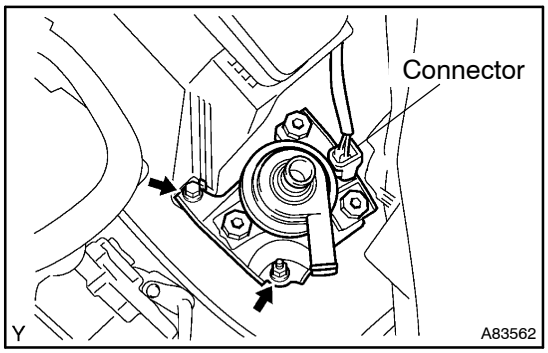

(b) Remove the bolt and nut, then disconnect the water with motor and bracket pump from the vehicle.

(c) Disconnect the connector, then remove the water pump with motor and bracket pump.

6. INSTALL WATER W/MOTOR & BRACKET PUMP ASSY

(a) Connect the connector.

(b) Install the water with motor and bracket pump with the bolt and nut.

Torque: 7.0 N·m (71 kgf·cm, 62 in.·lbf)

(c) Connect the 2 inverter cooling hoses.

7. ADD HV COOLANT (See page 22–4)
8. CHECK FOR ENGINE COOLANT LEAKS (See page 16–2)
9. INSTALL ENGINE UNDER COVER RH
10. INSTALL ENGINE UNDER COVER LH
11. INSTALL RADIATOR SUPPORT OPENING COVER