
22020–01

OVERHAUL


1. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 (SEE PAGE 71–7)
2. REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY LOWER (SEE PAGE 71–7)
3. REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY UPPER (SEE PAGE 71–7)
4. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3 (SEE PAGE 71–7)

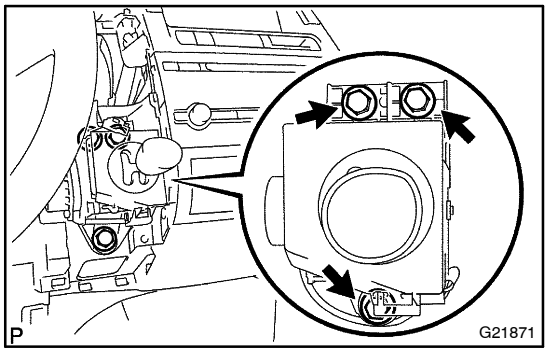

5. REMOVE SHIFT LEVER ASSY


(a) Remove the 3 bolts.

(b) Disconnect the 2 connectors and remove the shift lever assy.

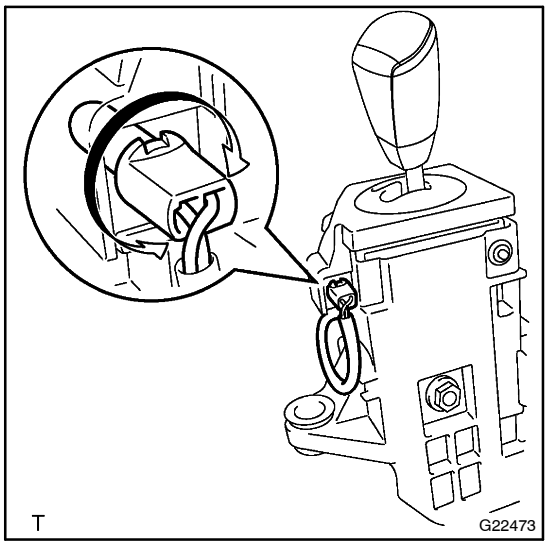


6. REMOVE INDICATOR LAMP WIRE SUB–ASSY

(a) Remove the position indicator lamp wire from the position indicator housing.

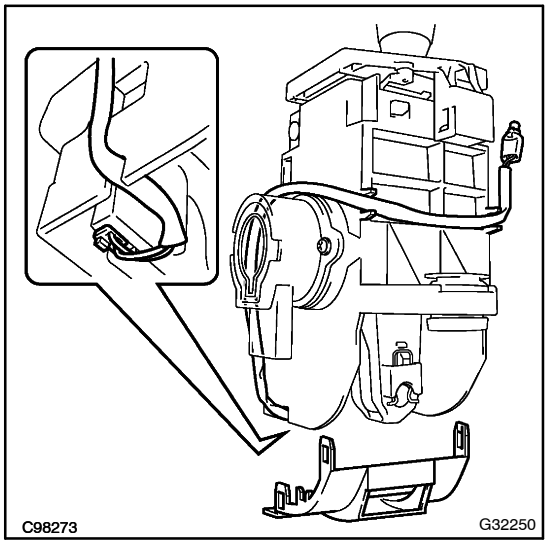


(b) Separate the connector from the 3 clamps and remove the position indicator lamp wire.

(c) Remove the cover.

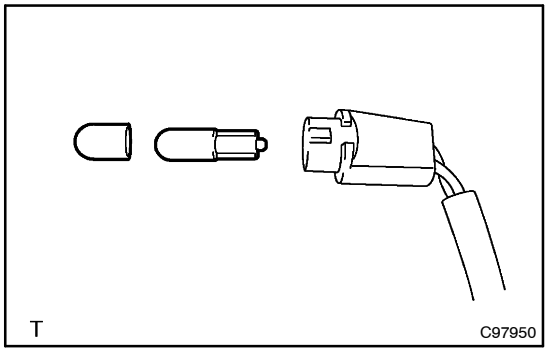


(d) Remove the bulb and cap from the position indicator lamp wire.

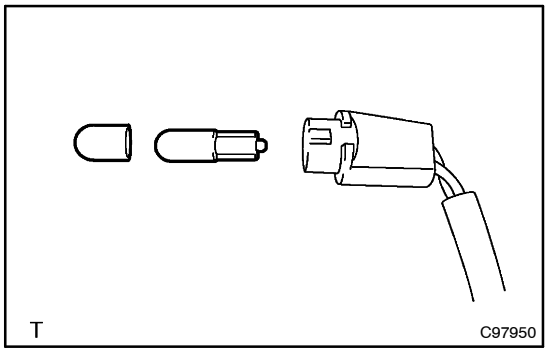


7. INSTALL INDICATOR LAMP WIRE SUB–ASSY

(a) Install the bulb and cap to the position indicator lamp wire.

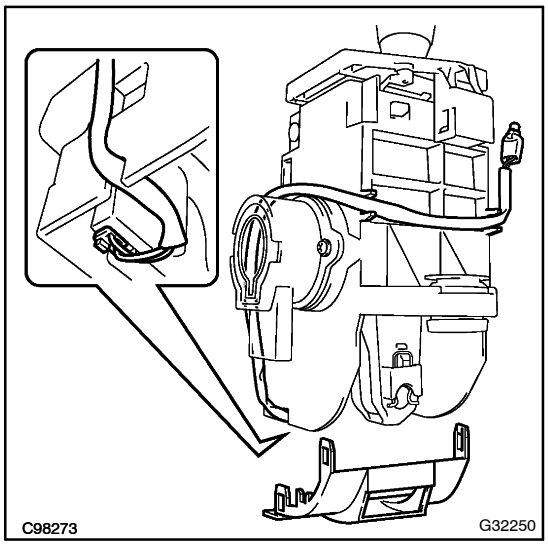

(b) Connect the connecter and 3 clamps.


(c) Install the cover.

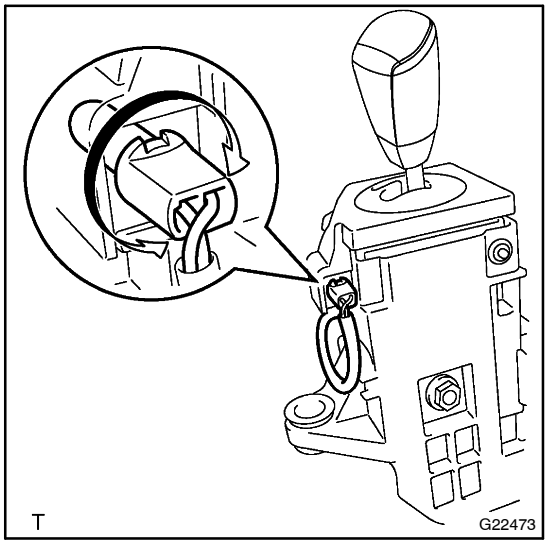

(d) Install the position indicator lamp wire to the position indicator housing.

NOTICE:

- **Securely attach by twisting to the right.**

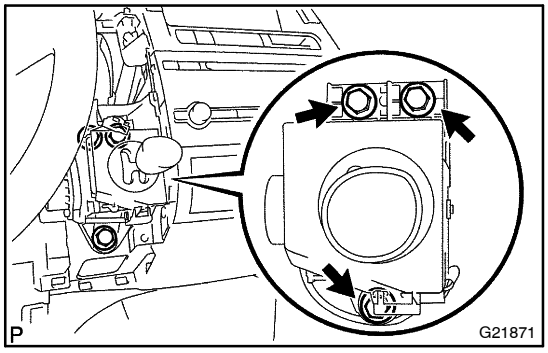

8. INSTALL SHIFT LEVER ASSY

(a) Install the 2 connectors to the shift lever assy.

(b) Install the shift lever assy with the 3 bolts.

Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

9. INSPECT SHIFT LEVER ASSY (SEE PAGE 22–1)