STABILIZER BAR REAR

REPLACEMENT


270HV–01

HINT:

COMPONENTS: See page 27–2.


1. REMOVE REAR AXLE BEAM DAMPER

(a) Remove the rear axle beam damper from the rear axle beam assy.

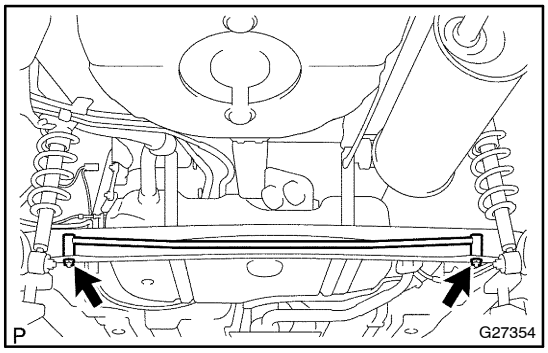

2. REMOVE STABILIZER BAR REAR


(a) Remove the 2 bolts, the 2 nuts and then the stabilizer bar.

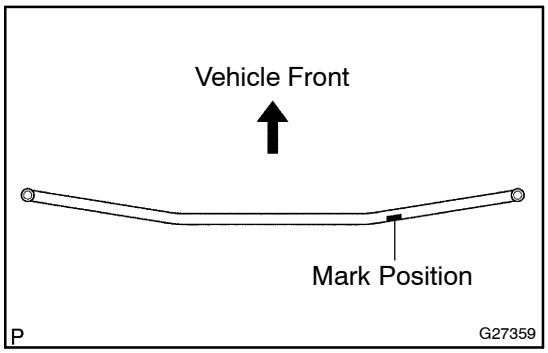

3. INSTALL STABILIZER BAR REAR

(a) Install the stabilizer bar so that the mark position faces towards the vehicle's right rear. Hold the bolts and tighten the nuts.

Torque: 149 N·m (1,520 kgf·cm, 110 ft·lbf)

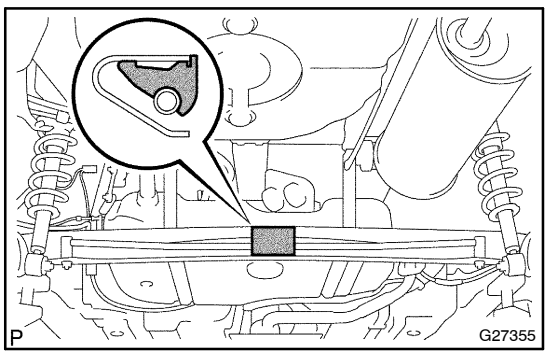

4. INSTALL REAR AXLE BEAM DAMPER

(a) Install the rear axle beam damper to the center of the rear axle beam assy.