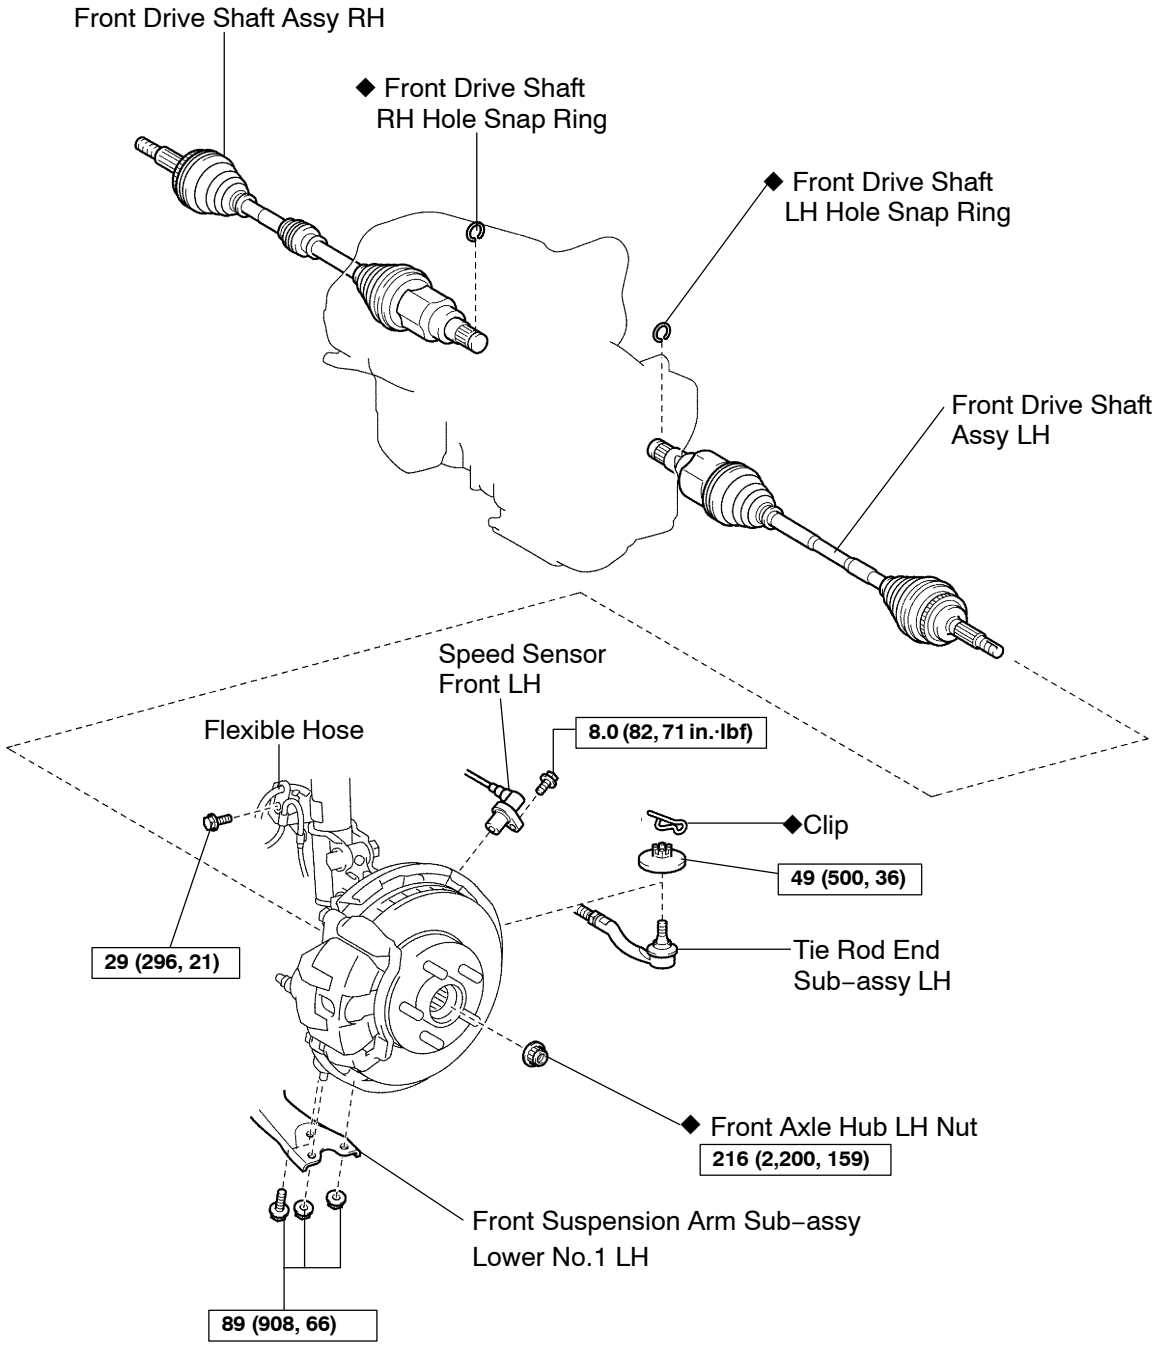
FRONT DRIVE SHAFT

COMPONENTS

300O6–01

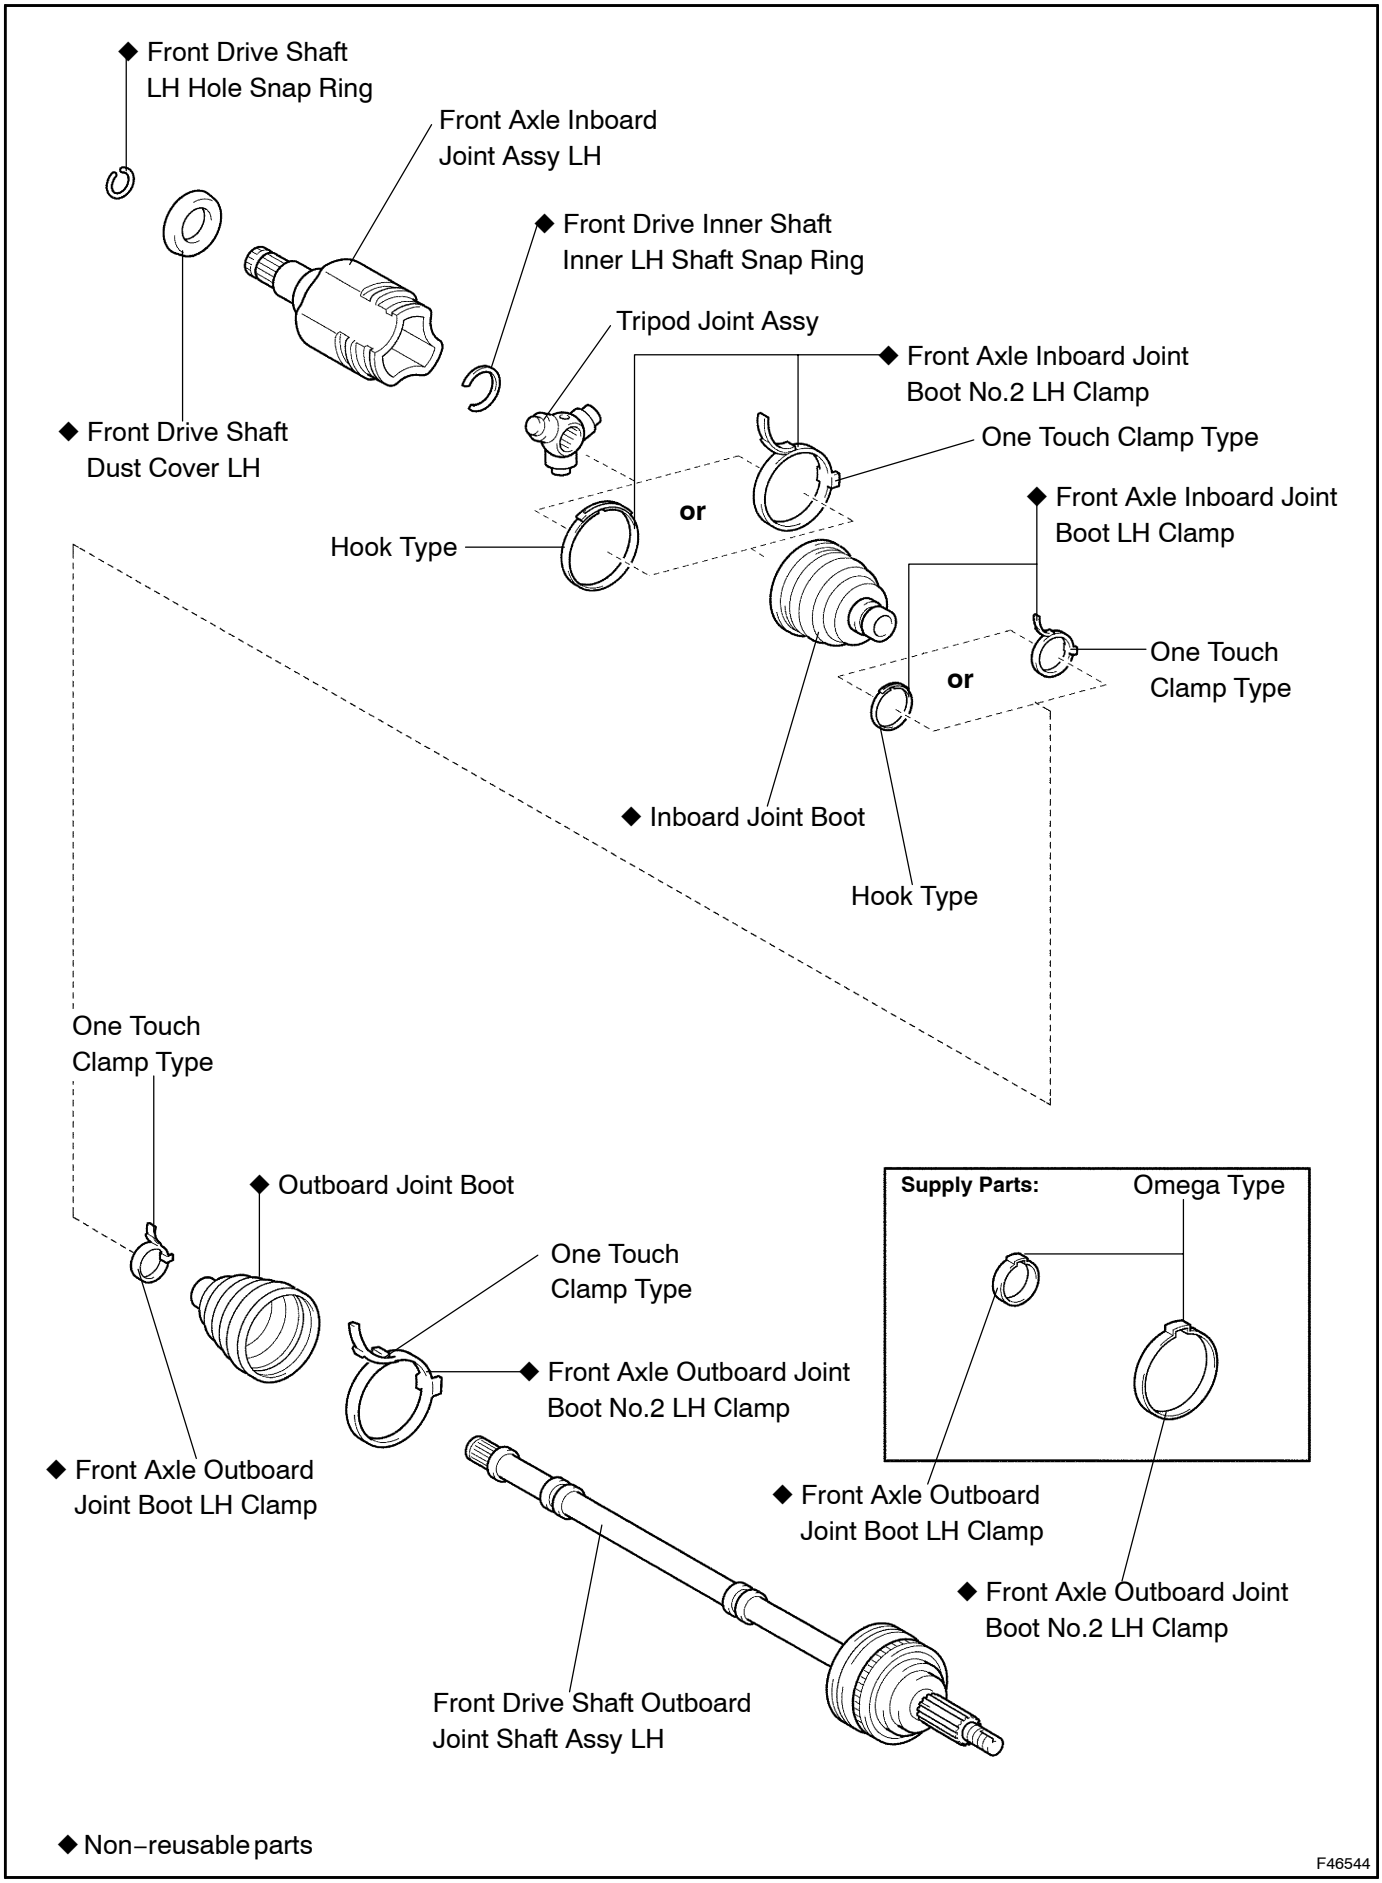


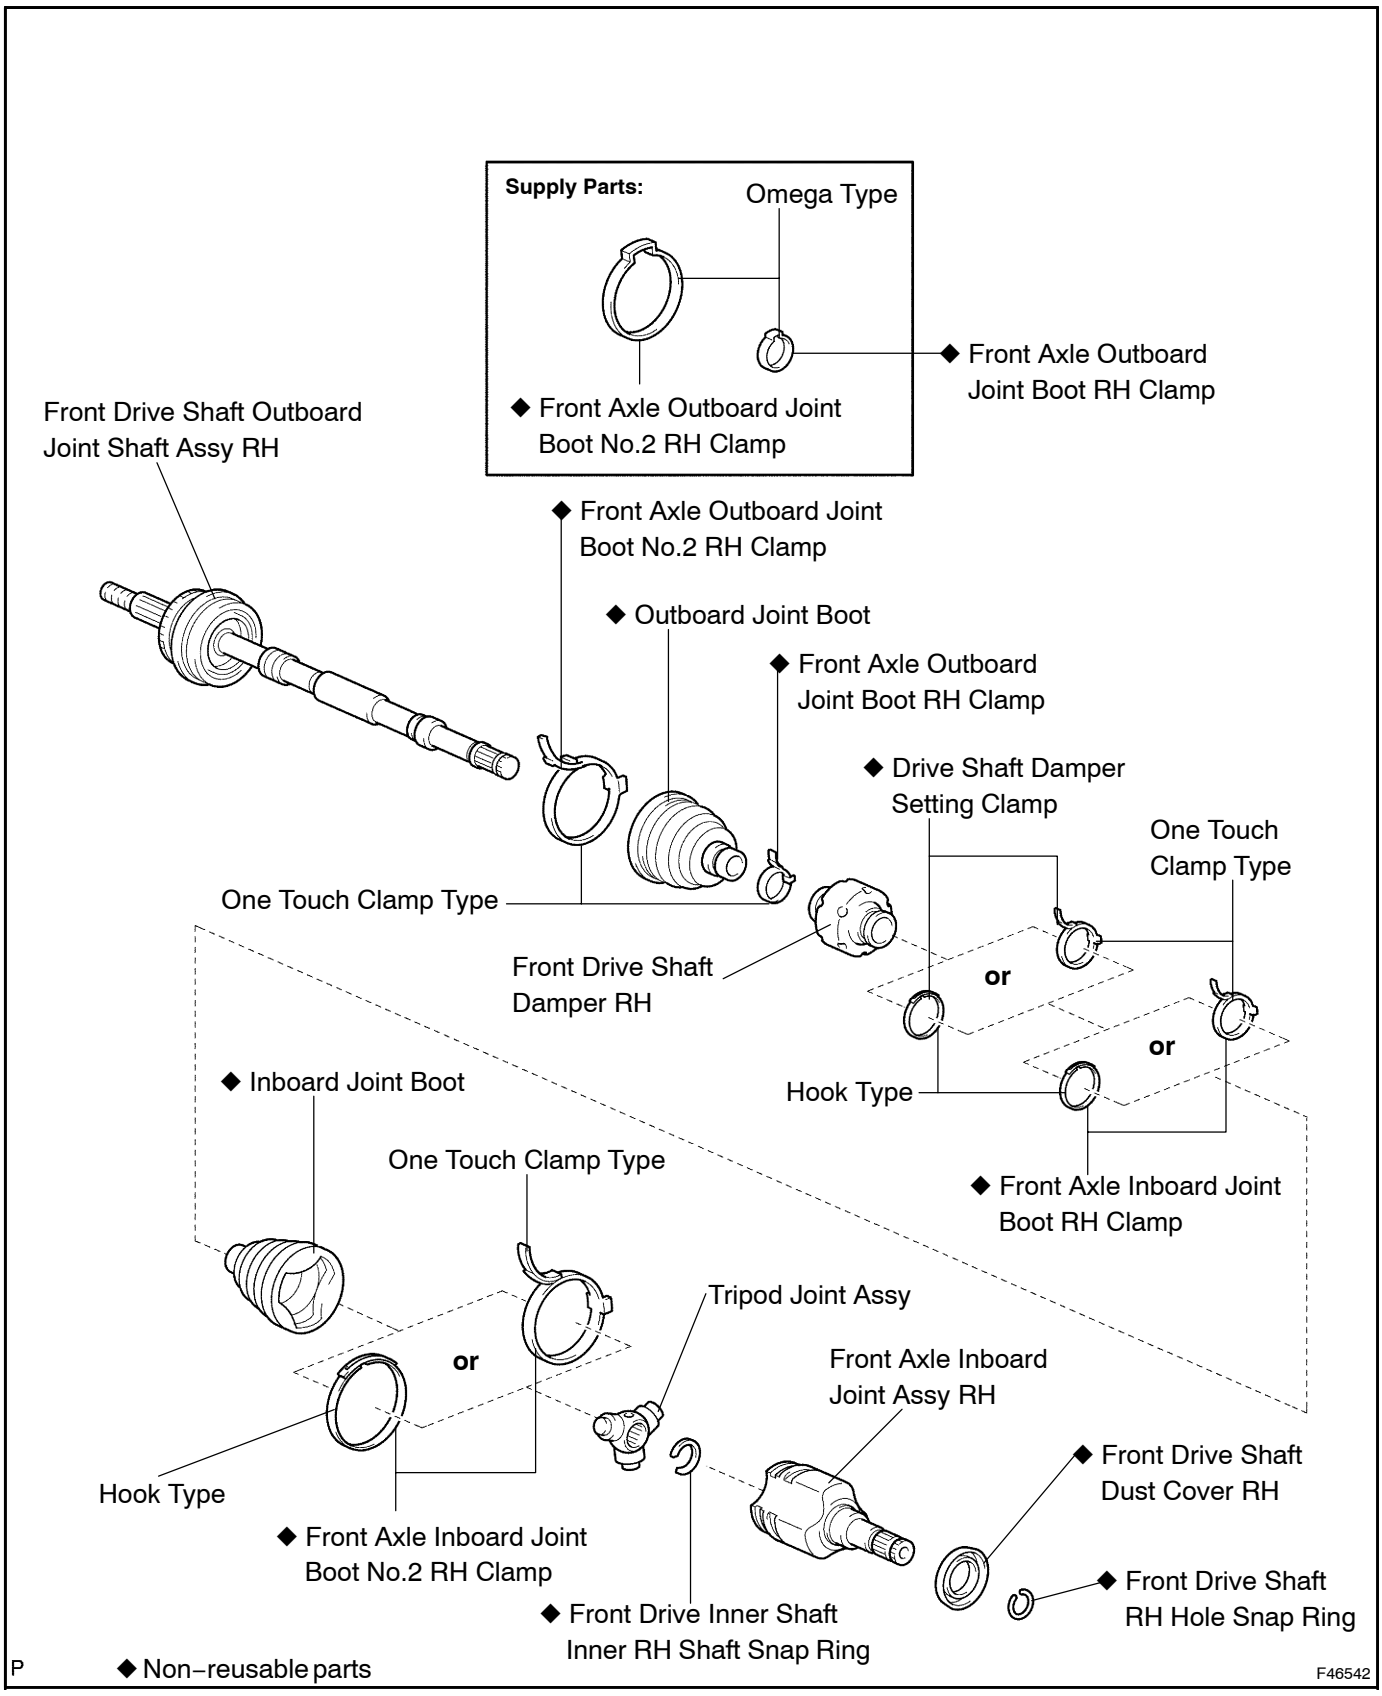
N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable parts

P

F46548


◆ Front Drive Shaft
LH Hole Snap Ring
Front Axle Inboard
Joint Assy LH
◆ Front Drive Inner Shaft
Inner LH Shaft Snap Ring
Tripod Joint Assy
◆ Front Axle Inboard Joint
Boot No.2 LH Clamp
◆ Front Drive Shaft
Dust Cover LH
One Touch Clamp Type
or
Hook Type
◆ Front Axle Inboard Joint
Boot LH Clamp
One Touch
Clamp Type
or
◆ Inboard Joint Boot
Hook Type
One Touch
Clamp Type
◆ Outboard Joint Boot
One Touch
Clamp Type
◆ Front Axle Outboard Joint
Boot No.2 LH Clamp
◆ Front Axle Outboard
Joint Boot LH Clamp
Supply Parts:
Omega Type
◆ Front Axle Outboard
Joint Boot LH Clamp
◆ Front Axle Outboard Joint
Boot No.2 LH Clamp
Front Drive Shaft Outboard
Joint Shaft Assy LH
◆ Non–reusable parts
F46544


Supply Parts:
Omega Type
◆ Front Axle Outboard Joint Boot RH Clamp
◆ Front Axle Outboard Joint Boot No.2 RH Clamp
Front Drive Shaft Outboard Joint Shaft Assy RH
◆ Front Axle Outboard Joint Boot No.2 RH Clamp
◆ Outboard Joint Boot
◆ Front Axle Outboard Joint Boot RH Clamp
◆ Drive Shaft Damper Setting Clamp
One Touch Clamp Type
One Touch Clamp Type
Front Drive Shaft Damper RH
or
or
Hook Type
◆ Inboard Joint Boot
One Touch Clamp Type
◆ Front Axle Inboard Joint Boot RH Clamp
Tripod Joint Assy
or
Front Axle Inboard Joint Assy RH
◆ Front Drive Shaft Dust Cover RH
Hook Type
◆ Front Axle Inboard Joint Boot No.2 RH Clamp
◆ Front Drive Shaft RH Hole Snap Ring
◆ Front Drive Inner Shaft Inner RH Shaft Snap Ring
P
◆ Non–reusable parts
F46542