REAR AXLE LH HUB BOLT

300OD–01

REPLACEMENT

HINT:

Refer to components: See page 30–26

Use the same procedures for the RH side and LH side.

The procedures listed below are for the LH side.


1. REMOVE REAR WHEEL

2. SEPARATE REAR DISC BRAKE CALIPER ASSY LH (SEE PAGE 30–27)

3. REMOVE REAR DISC

HINT:


Put matchmarks on the rear disc and rear axle hub.

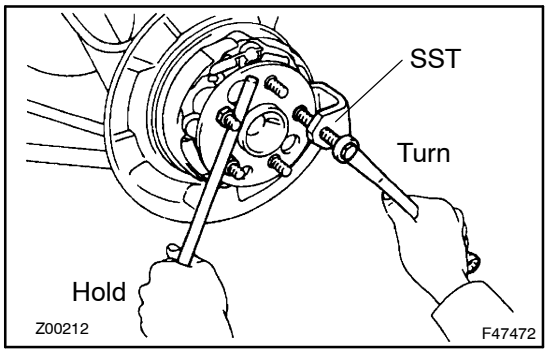

4. REMOVE REAR AXLE LH HUB BOLT

(a) Using SST, remove the rear axle hub bolt LH.

SST 09628–10011

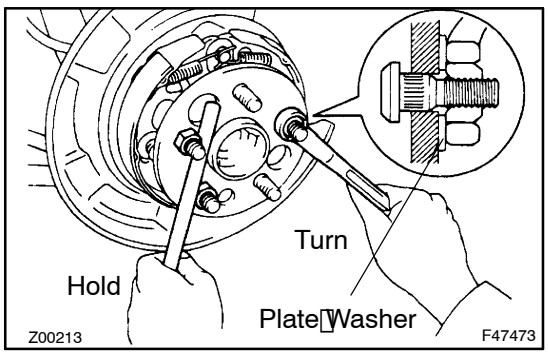

5. INSTALL REAR AXLE LH HUB BOLT

(a) Pass the plate washer as shown in the illustration through the rear axle hub nut LH and install the rear axle hub bolt LH while tightening the nut (M12 x P1.5 mm).

HINT:

A plate washer of 5 mm or more in thickness is preferable.

6. INSTALL REAR DISC

HINT:

Align the matchmarks of the rear disc and rear axle hub before installing them.

7. INSTALL REAR DISC BRAKE CALIPER ASSY LH (SEE PAGE 30–27)

8. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)