# SKID CONTROL ECU ASSY (LHD)

3214U–01


## REPLACEMENT

1. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 01–5)**
2. **REMOVE INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71–7)**


HINT:

Refer to the procedures from the removal of the instrument panel register assy No.1 up until removal of the instrument panel sub–assy w/ passenger airbag assy.

3. **REMOVE STEERING COLUMN ASSY (SEE PAGE 50–8)**

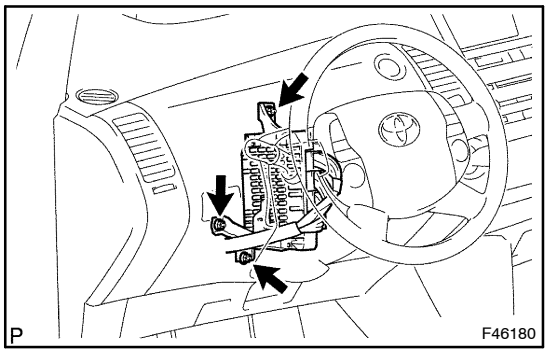


4. **REMOVE SKID CONTROL ECU ASSY**
   (a) Disconnect the clamp of wire harness and the skid control buzzer from the skid control computer bracket.
   (b) Disconnect the connector from the skid control computer.
   (c) Remove the 3 nuts and the skid control computer assy.

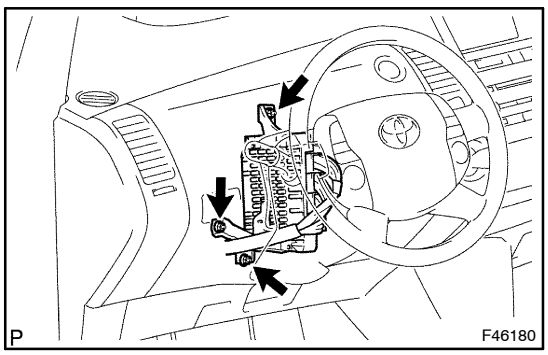


5. **INSTALL SKID CONTROL ECU ASSY**
   (a) Install the skid control computer assy with the 3 nuts.
   **Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)**
   (b) Connect the connector to the skid control computer assy.
   (c) Install the clamp of wire harness and the skid control buzzer to the skid control computer bracket.

6. **INSTALL STEERING COLUMN ASSY (SEE PAGE 50–8)**
7. **INSTALL INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY**
8. **CONNECT BATTERY NEGATIVE TERMINAL**
9. **PERFORM INITIALIZATION (SEE PAGE 01–5)**
10. **SYSTEM INITIALIZATION (SEE PAGE 05–721)**
11. **PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (SEE PAGE 05–723)**
12. **CHECK AND CLEAR DTC (SEE PAGE 05–738)**