
YAWRATE SENSOR

3214W–01

REPLACEMENT

1. REMOVE CONSOLE PANEL SUB–ASSY UPPER (SEE PAGE 71–17)
2. REMOVE CONSOLE BOX POCKET (SEE PAGE 71–17)
3. REMOVE CONSOLE BOX CARPET (SEE PAGE 71–17)
4. REMOVE CONSOLE BOX ASSY RR (SEE PAGE 71–17)

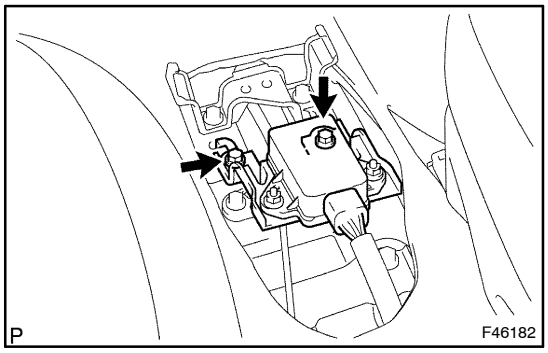

5. REMOVE YAWRATE SENSOR
(a) Disconnect the connector and remove the 2 bolts and the yawrate sensor assy.

6. INSTALL YAWRATE SENSOR
(a) Install the yawrate sensor assy with 2 bolts.
Torque: 19 N·m (194 kgf·cm, 14 ft·lbf)
(b) Connect the connector of yawrate sensor assy.
7. INSTALL CONSOLE BOX ASSY RR
8. INSTALL CONSOLE BOX CARPET
9. INSTALL CONSOLE BOX POCKET
10. INSTALL CONSOLE PANEL SUB–ASSY UPPER
11. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (SEE PAGE 05–723)
12. CHECK AND CLEAR DTC (SEE PAGE 05–738)