
STEERING SENSOR

3214X–01

REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)
2. REMOVE STEERING WHEEL COVER LOWER NO.2
3. REMOVE STEERING WHEEL COVER LOWER NO.3
4. REMOVE HORN BUTTON ASSY (SEE PAGE 60–20)
5. REMOVE STEERING WHEEL ASSY (SEE PAGE 50–8)
   SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)
6. REMOVE TILT LEVER BRACKET (SEE PAGE 50–8)
7. REMOVE STEERING COLUMN COVER (SEE PAGE 50–8)
8. REMOVE SPIRAL CABLE SUB–ASSY (SEE PAGE 60–29)
9. REMOVE STEERING SENSOR

(a) Unclamp the 6 claws and remove the steering sensor from the spiral cable.

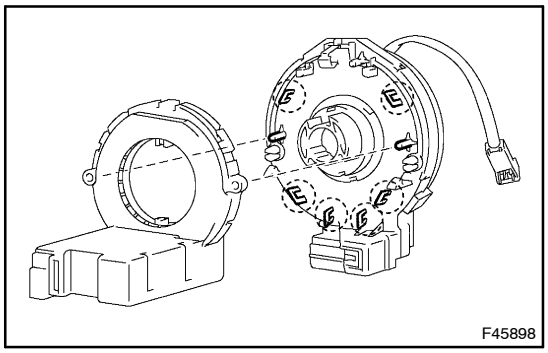

10. INSTALL STEERING SENSOR

(a) Aligning the 2 locating pins as shown in the illustration, engage the 6 claws and install the steering sensor to the spiral cable.

11. INSPECT SPIRAL CABLE SUB–ASSY (SEE PAGE 60–29)
12. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
13. INSTALL SPIRAL CABLE SUB–ASSY (SEE PAGE 60–29)
14. CENTER SPIRAL CABLE (SEE PAGE 60–29)
15. INSTALL STEERING COLUMN COVER (SEE PAGE 50–8)
16. INSTALL TILT LEVER BRACKET (SEE PAGE 50–8)
17. INSTALL STEERING WHEEL ASSY (SEE PAGE 50–8)
18. INSTALL HORN BUTTON ASSY (SEE PAGE 60–20)
19. INSPECT HORN BUTTON ASSY (SEE PAGE 60–14)
20. CONNECT BATTERY NEGATIVE TERMINAL
21. PERFORM INITIALIZATION (SEE PAGE 01–5)
22. INSPECT SRS WARNING LIGHT (SEE PAGE 05–1171)