330FN–01

ADJUSTMENT

1. REMOVE REAR WHEEL

2. ADJUST PARKING BRAKE SHOE CLEARANCE (SEE PAGE 33–33)

3. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)


4. CHECK PARKING BRAKE PEDAL TRAVEL

(a) Strongly step on the parking brake pedal.

(b) Release the parking brake.

(c) Slowly depress the parking brake pedal all the way again and count the number of clicks.

Parking brake pedal travel: 6 to 9 clicks at 300 N (31 kgf)

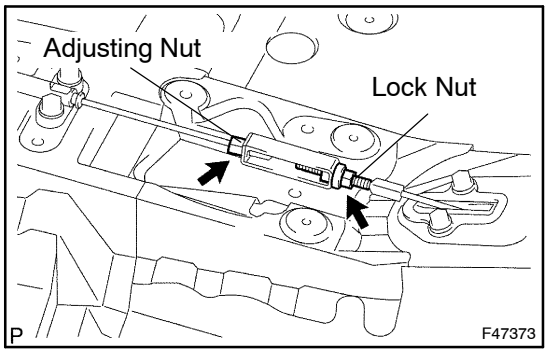

5. ADJUST PARKING BRAKE PEDAL TRAVEL

(a) LHD:

(1) Remove the console panel sub–assy upper (see page 71–17).

(2) Remove the console box carpet (see page 71–17).

(3) Remove the console box assy RR (see page 71–17).

(4) Remove the front floor footrest (see page 50–8).

(5) Depress the parking brake pedal until it clicks 5 times. Hold the parking brake cable assy No.1 turnbuckle using a wrench and loosen the parking brake cable assy No.4 lock nut.

(6) Release the parking brake pedal.

(7) Turn the parking brake cable No.1 turnbuckle until parking brake travel falls within the specified range.

(8) Hold the parking brake cable assy No.1 turnbuckle using a wrench and tighten the parking brake cable assy No.4 lock nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

NOTICE:


- **Do not twist the parking brake cable assy No.4.**
- **Install the parking brake cable assy No.4 with the red surface facing up.**

(9) Count the number of clicks after depressing and releasing the parking brake pedal 3 to 4 times.

(10) Check whether the parking brake drags or not.

(11) When operating the parking brake pedal, check that the parking brake pedal indicator light comes on.

(12) Install the front floor footrest (see page 50–8).

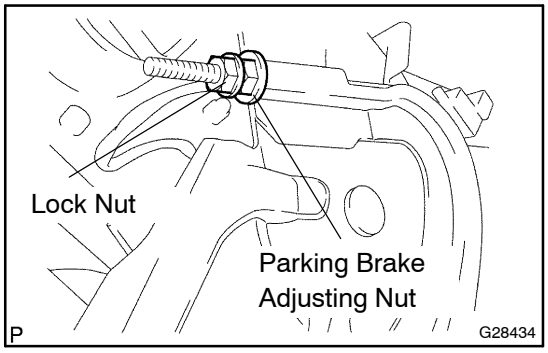

(b) RHD:

(1) Remove the instrument panel finish panel LWR (see page 71–7).

(2) Depress the parking brake pedal until it clicks 5 times. Hold the adjusting nut using a wrench and loosen the lock nut.

(3) Release the parking brake pedal.

(4) Turn the parking brake wire adjusting nut until the parking brake pedal travel is correct.

(5) Hold the parking brake adjusting nut using a spanner or equivalent tool and tighten the lock nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

(6) Count the number of clicks after depressing and releasing the parking brake pedal 3 to 4 times.

(7) Check whether the parking brake drags or not.

(8) When operating the parking brake pedal, check that the parking brake pedal indicator light comes on.