
330FR–01

OVERHAUL


1. REMOVE REAR FLOOR BOARD NO.2 (SEE PAGE 21–120)
2. REMOVE DECK FLOOR BOX REAR (SEE PAGE 21–120)
3. REMOVE REAR FLOOR BOARD NO.3 (SEE PAGE 21–120)
4. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)
5. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 (SEE PAGE 71–7)
6. REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY LOWER (SEE PAGE 71–7)
7. REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY UPPER (SEE PAGE 71–7)
8. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3 (SEE PAGE 71–7)
9. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.4 (SEE PAGE 71–7)
10. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.2 (SEE PAGE 71–7)
11. REMOVE MULTI–DISPLAY ASSY (SEE PAGE 71–7)
12. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB–ASSY (SEE PAGE 71–7)
13. REMOVE GLOVE COMPARTMENT DOOR ASSY (SEE PAGE 71–7)
14. REMOVE GLOVE COMPARTMENT DOOR (SEE PAGE 71–7)
15. REMOVE INSTR PANEL SPEAKER PANEL SUB–ASSY NO.1 W/CTR SPEAKER (SEE PAGE 71–7)
16. REMOVE FRONT PILLAR GARNISH CORNER PIECE RH (SEE PAGE 71–7)
17. REMOVE FRONT PILLAR GARNISH CORNER PIECE LH (SEE PAGE 71–7)
18. REMOVE FRONT PILLAR GARNISH RH (SEE PAGE 71–7)
19. REMOVE FRONT PILLAR GARNISH LH (SEE PAGE 71–7)
20. DISCONNECT PASSENGER AIRBAG CONNECTOR (SEE PAGE 71–7)
21. REMOVE INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71–7)
22. REMOVE FRONT SEAT ASSY LH (SEE PAGE 72–2)
23. REMOVE FRONT SEAT ASSY RH
24. REMOVE FRONT DOOR SCUFF PLATE RH (SEE PAGE 76–29)
25. REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 76–29)
26. REMOVE COWL SIDE TRIM BOARD RH (SEE PAGE 76–29)
27. REMOVE COWL SIDE TRIM BOARD LH (SEE PAGE 76–29)
28. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (SEE PAGE 71–13)
29. REMOVE CONSOLE PANEL SUB–ASSY UPPER (SEE PAGE 71–17)
30. REMOVE CONSOLE BOX POCKET (SEE PAGE 71–17)
31. REMOVE CONSOLE BOX CARPET (SEE PAGE 71–17)
32. REMOVE CONSOLE BOX ASSY RR (SEE PAGE 71–17)
33. REMOVE AIR DUCT REAR NO.3 (SEE PAGE 55–18)
34. REMOVE FRONT FLOOR FOOTREST (SEE PAGE 50–8)
35. REMOVE AIR BAG ECU ASSY (SEE PAGE 60–54)
36. REMOVE YAWRATE SENSOR (W/ VSC) (SEE PAGE 32–84)

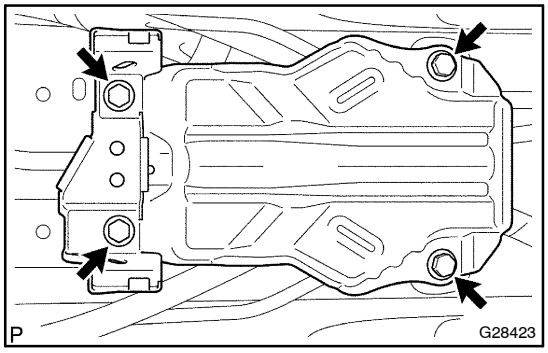

37. REMOVE CONSOLE BOX MOUNTING BRACKET NO.1

(a) Remove the 2 bolts and separate the console box mounting bracket No.1.


(b) Remove the 2 bolts and separate the front floor side reinforcement No.1.

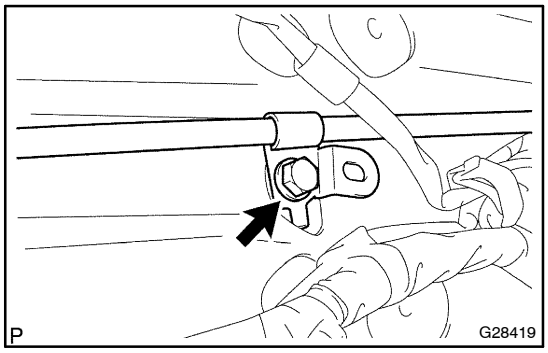

38. REMOVE PARKING BRAKE CONTROL PEDAL ASSY

(a) Release the parking brake.


(b) Remove the clamp bolt from the parking brake cable assy No.1.

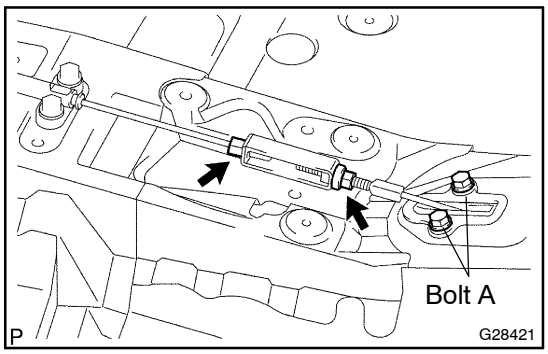

(c) Hold the nut on the parking brake cable assy No.4 using a wrench. Loosen and disconnect the turnbuckle of the parking brake cable assy No.1.

(d) Remove the 2 bolts A as shown in the illustration and separate the parking brake cable assy No.1 from the floor.

(e) Disconnect the parking brake switch assy connector and remove the harness clamp from the pedal bracket.

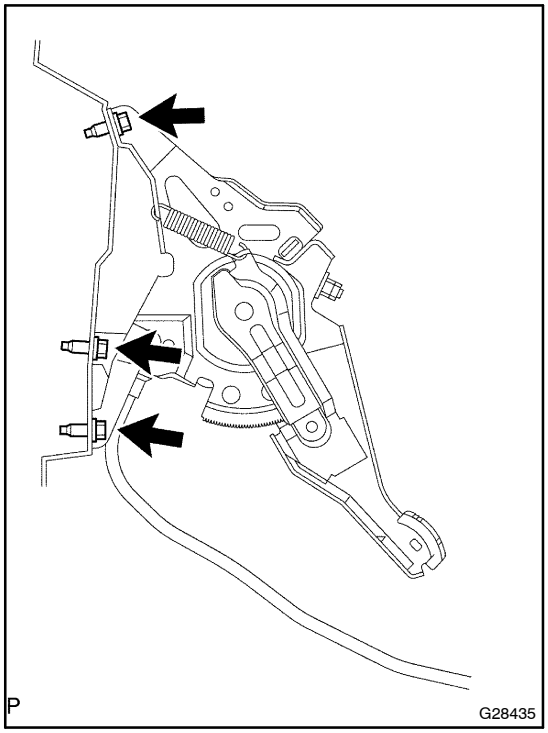

(f) Remove the 3 bolts and separate the parking brake pedal assy.

39. REMOVE PARKING BRAKE CABLE ASSY NO.1 (SEE PAGE 33–23)

40. REMOVE PARKING BRAKE SWITCH ASSY

(a) Remove the screw and separate the parking brake switch assy.


41. REMOVE PARKING PEDAL PAD

42. INSTALL PARKING PEDAL PAD

43. INSTALL PARKING BRAKE SWITCH ASSY

(a) Install the parking brake switch assy with a screw.


44. INSTALL PARKING BRAKE CABLE ASSY NO.1 (SEE PAGE 33–23)

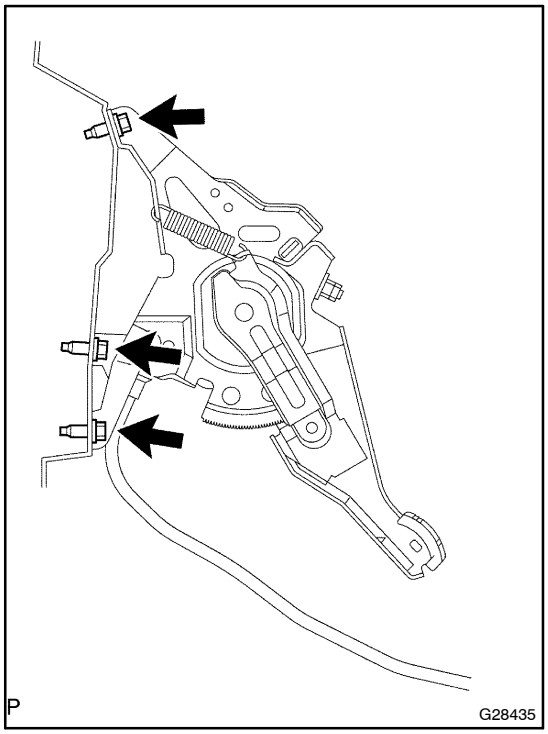

45. INSTALL PARKING BRAKE CONTROL PEDAL ASSY


(a) Install the parking brake pedal assy to the dash panel with 3 bolts.
Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)

(b) Connect the parking brake switch assy connector and install the harness clamp to the pedal bracket.

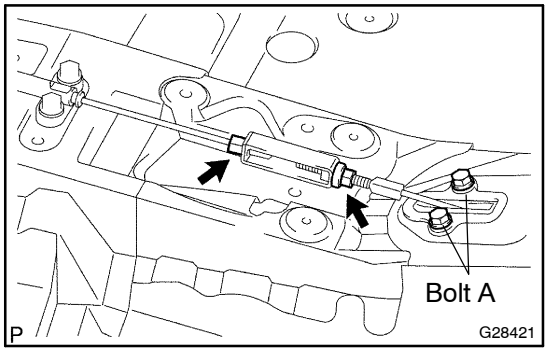

(c) Hold the nut on the parking brake cable assy No.4 using a wrench. Tighten the turnbuckle of the parking brake cable assy No.1.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

(d) Install the parking brake cable assy No.1 on the floor with the 2 bolts A as shown in the illustration.
Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)

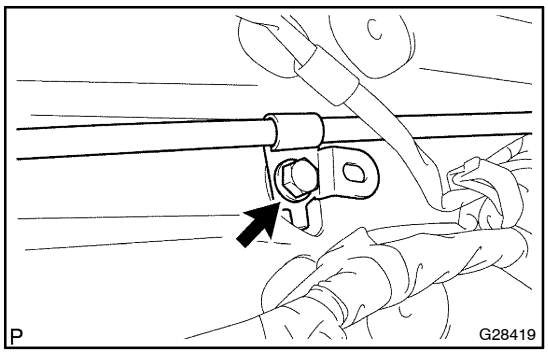

(e) Install the parking brake cable assy No.1 on the floor with the clamp bolt.
Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)

46. INSTALL CONSOLE BOX MOUNTING BRACKET NO.1

(a) Install the front floor side reinforcement No.1 with 2 bolts.

(b) Install the console box mounting bracket No.1 with 2 bolts.

47. INSTALL YAWRATE SENSOR (W/ VSC) (SEE PAGE 32–84)

48. INSTALL AIR BAG ECU ASSY (SEE PAGE 60–54)

49. INSTALL FRONT FLOOR FOOTREST (SEE PAGE 50–8)

50. INSTALL FRONT SEAT ASSY LH (SEE PAGE 72–2)

51. INSTALL FRONT SEAT ASSY RH

52. INSTALL INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71–7)

53. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33–2)

54. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 19–2)

55. INSTALL REAR FLOOR BOARD NO.3

56. INSTALL DECK FLOOR BOX REAR

57. INSTALL REAR FLOOR BOARD NO.2

58. PERFORM INITIALIZATION (SEE PAGE 01–29)