
330FV–01

REPLACEMENT

1. REMOVE REAR FLOOR BOARD NO.2 (SEE PAGE 21–120)
2. REMOVE DECK FLOOR BOX REAR (SEE PAGE 21–120)
3. REMOVE REAR FLOOR BOARD NO.3 (SEE PAGE 21–120)
4. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)
5. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 (SEE PAGE 71–7)
6. REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY LOWER (SEE PAGE 71–7)
7. REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY UPPER (SEE PAGE 71–7)
8. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3 (SEE PAGE 71–7)
9. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.4 (SEE PAGE 71–7)
10. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.2 (SEE PAGE 71–7)
11. REMOVE MULTI–DISPLAY ASSY (SEE PAGE 71–7)
12. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB–ASSY (SEE PAGE 71–7)
13. REMOVE GLOVE COMPARTMENT DOOR ASSY (SEE PAGE 71–7)
14. REMOVE GLOVE COMPARTMENT DOOR (SEE PAGE 71–7)
15. REMOVE INSTR PANEL SPEAKER PANEL SUB–ASSY NO.1 W/CTR SPEAKER (SEE PAGE 71–7)
16. REMOVE FRONT PILLAR GARNISH CORNER PIECE RH (SEE PAGE 71–7)
17. REMOVE FRONT PILLAR GARNISH CORNER PIECE LH (SEE PAGE 71–7)
18. REMOVE FRONT PILLAR GARNISH RH (SEE PAGE 71–7)
19. REMOVE FRONT PILLAR GARNISH LH (SEE PAGE 71–7)
20. DISCONNECT PASSENGER AIRBAG CONNECTOR (SEE PAGE 71–7)
21. REMOVE INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71–7)
22. REMOVE FRONT SEAT ASSY LH (SEE PAGE 72–2)
23. REMOVE FRONT SEAT ASSY RH
24. REMOVE FRONT DOOR SCUFF PLATE RH (SEE PAGE 76–29)
25. REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 76–29)
26. REMOVE COWL SIDE TRIM BOARD RH (SEE PAGE 76–29)
27. REMOVE COWL SIDE TRIM BOARD LH (SEE PAGE 76–29)
28. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (SEE PAGE 71–13)
29. REMOVE CONSOLE PANEL SUB–ASSY UPPER (SEE PAGE 71–17)
30. REMOVE CONSOLE BOX POCKET (SEE PAGE 71–17)
31. REMOVE CONSOLE BOX CARPET (SEE PAGE 71–17)
32. REMOVE CONSOLE BOX ASSY RR (SEE PAGE 71–17)
33. REMOVE AIR DUCT REAR NO.3 (SEE PAGE 55–18)
34. REMOVE FRONT FLOOR FOOTREST (SEE PAGE 50–8)
35. REMOVE AIR BAG ECU ASSY (SEE PAGE 60–54)
36. REMOVE YAWRATE SENSOR (W/ VSC) (SEE PAGE 32–84)
37. REMOVE CONSOLE BOX MOUNTING BRACKET NO.1 (SEE PAGE 33–14)
38. REMOVE PARKING BRAKE CONTROL PEDAL ASSY (SEE PAGE 33–14)

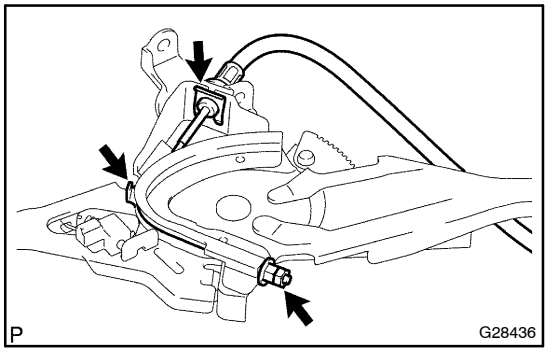


39. REMOVE PARKING BRAKE CABLE ASSY NO.1

(a) Unbend the parking brake pedal claw.

(b) Remove the lock nut and adjusting nut of the parking brake cable assy No.1 from the parking brake pedal.

(c) Disengage the clip and remove the parking brake cable assy No.1 from the parking brake pedal assy.

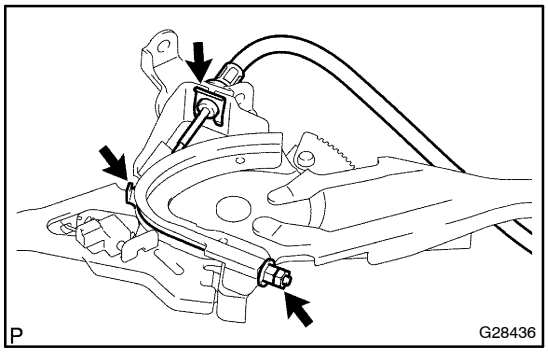

40. INSTALL PARKING BRAKE CABLE ASSY NO.1

(a) Thread the parking brake cable assy No.1 through the pedal bracket and hold with a new clip.

(b) Thread the parking brake cable through the pedal guide. Temporarily tighten the adjusting nut and lock nut.

HINT:

Fully tighten the adjusting nut and lock nut when adjusting the parking brake pedal free play.

(c) Bend the parking brake pedal claw fully.

41. INSTALL PARKING BRAKE CONTROL PEDAL ASSY (SEE PAGE 33–14)

42. INSTALL CONSOLE BOX MOUNTING BRACKET NO.1 (SEE PAGE 33–14)

43. INSTALL YAWRATE SENSOR (W/ VSC) (SEE PAGE 32–84)

44. INSTALL AIR BAG ECU ASSY (SEE PAGE 60–54)

45. INSTALL FRONT FLOOR FOOTREST (SEE PAGE 50–8)

46. INSTALL FRONT SEAT ASSY LH (SEE PAGE 72–2)

47. INSTALL FRONT SEAT ASSY RH

48. INSTALL INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71–7)

49. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33–2)

50. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 19–2)

51. INSTALL REAR FLOOR BOARD NO.3

52. INSTALL DECK FLOOR BOX REAR

53. INSTALL REAR FLOOR BOARD NO.2

54. PERFORM INITIALIZATION (SEE PAGE 01–29)