330FX–01

REPLACEMENT

HINT:

For parking brake cable No.2, employ the same procedure to the No.3 side.

1. REMOVE REAR WHEEL

2. SEPARATE REAR DISC BRAKE CALIPER ASSY LH (SEE PAGE 33–33)

3. REMOVE REAR DISC (SEE PAGE 33–33)

4. REMOVE REAR BRAKE STRUT KIT (SEE PAGE 33–33)

5. REMOVE PARKING BRAKE SHOE ADJUSTING SCREW SET (SEE PAGE 33–33)

6. REMOVE PARKING BRAKE SHOE ASSY LH NO.1 (SEE PAGE 33–33)

7. REMOVE PARKING BRAKE SHOE ASSY LH NO.2 (SEE PAGE 33–33)

8. REMOVE COWL SIDE TRIM BOARD RH (SEE PAGE 76–29)

9. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (SEE PAGE 71–13)

10. REMOVE FRONT FLOOR FOOTREST (RHD STEERING POSITION TYPE) (SEE PAGE 33–14)


11. REMOVE OXYGEN SENSOR (SEE PAGE 15–2)

12. REMOVE FLOOR PANEL BRACE FRONT (SEE PAGE 15–2)

13. REMOVE EXHAUST PIPE ASSY FRONT (SEE PAGE 15–2)

14. REMOVE PARKING BRAKE CABLE HEAT INSULATOR


(a) Remove the 2 nuts and separate the parking brake cable heat insulator.

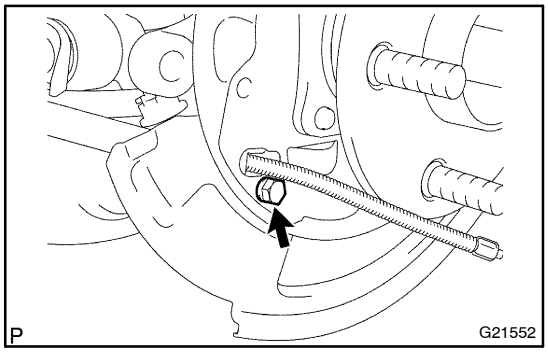

15. REMOVE PARKING BRAKE CABLE ASSY NO.3

(a) Remove the bolts and separate the parking brake cable assy No.3 from the backing plate.

(b) Remove the bolts and button as shown in the illustration. Separate the parking brake cable assy No.3.

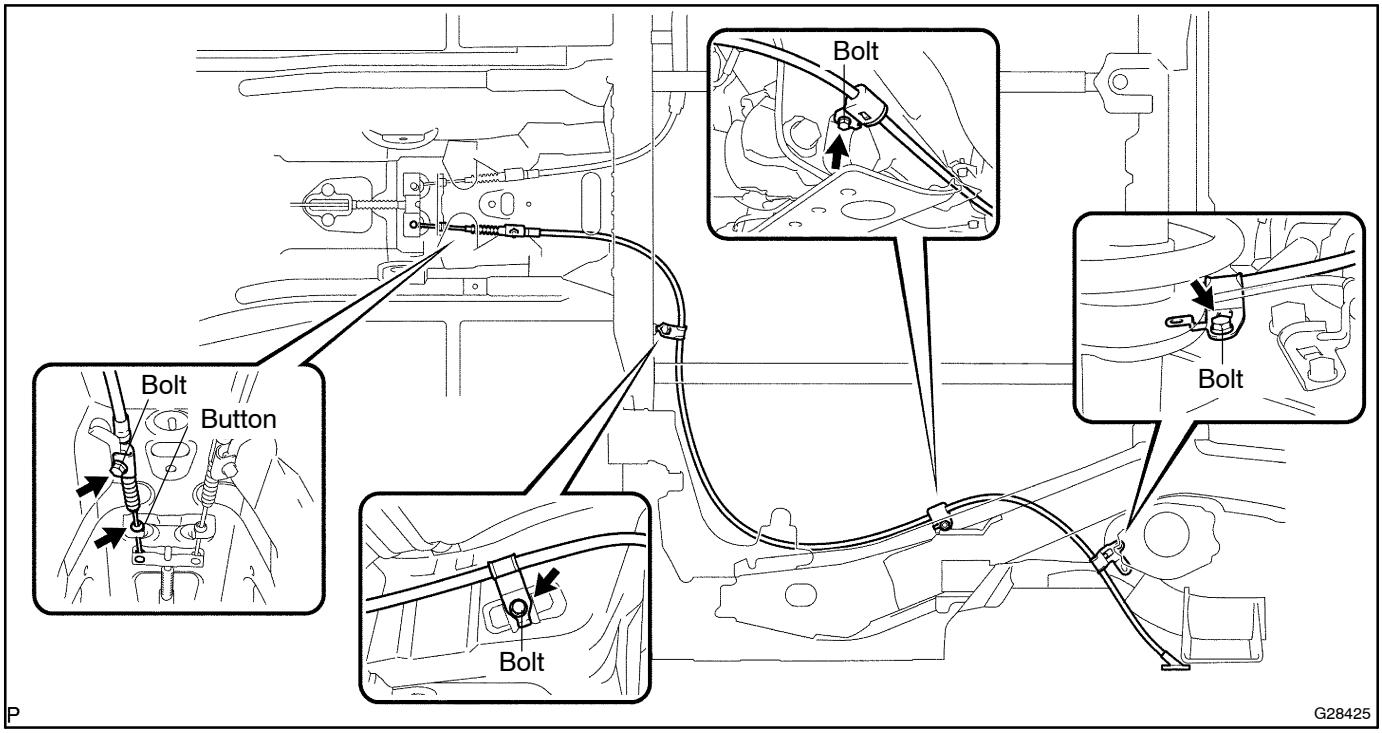


(c) Separate the parking brake cable assy No.3 from the parking brake equalizer.


16. INSTALL PARKING BRAKE CABLE ASSY NO.3

(a) Connect the parking brake cable assy No.3 to the parking brake equalizer.

(b) Install the parking brake cable assy No.3 with bolts and a button as shown in the illustration.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf) (Bolt A)
Torque: 6.0 N·m (61 kgf·cm, 53 in.·lbf) (Bolt B)

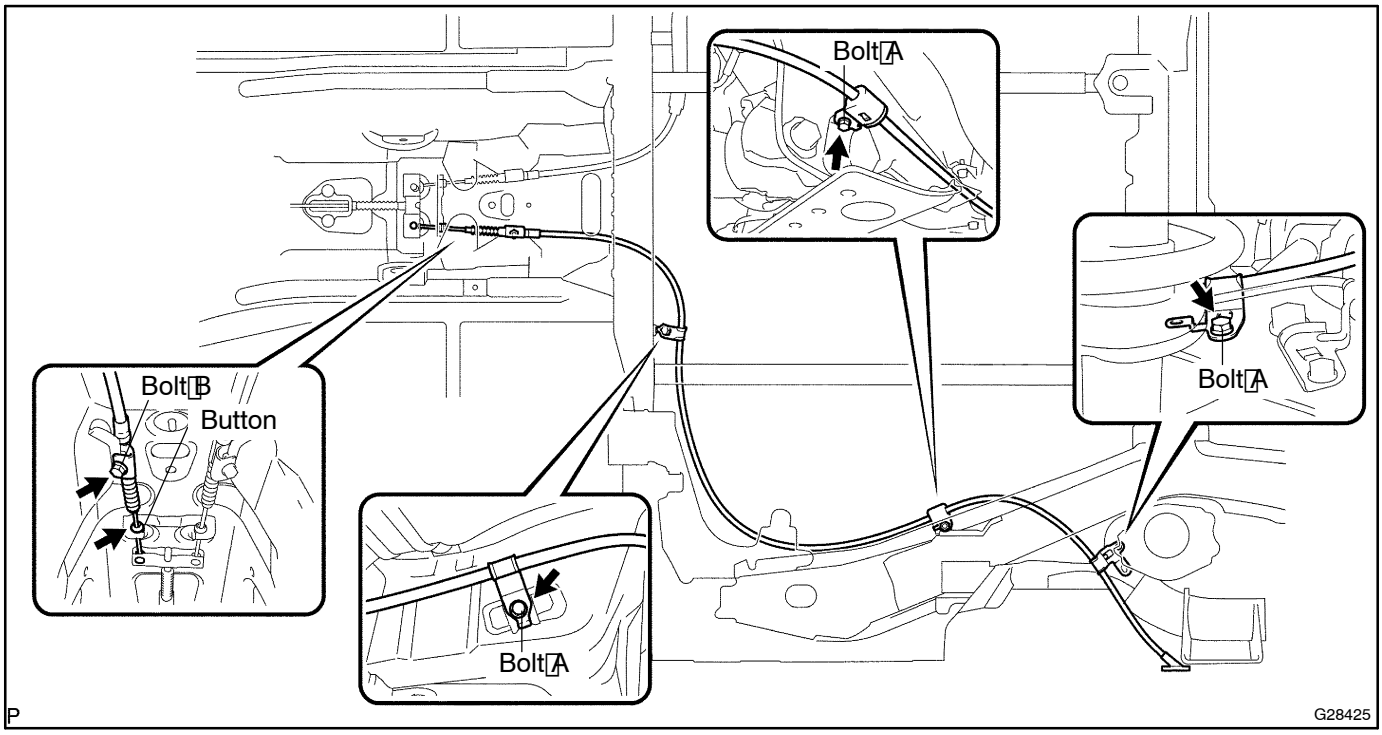

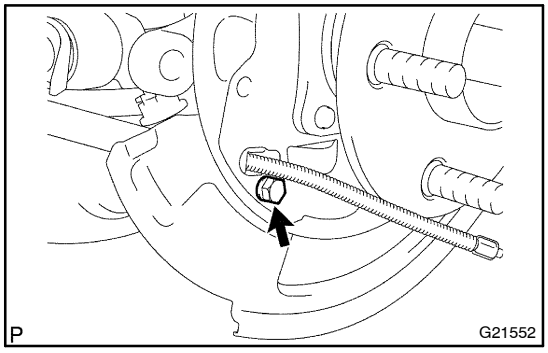

(c) Connect the parking brake cable assy No.3 to the backing plate with a bolt.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

17. INSTALL PARKING BRAKE CABLE HEAT INSULATOR

(a) Install the parking brake heat insulator with 2 nuts.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

18. INSTALL EXHAUST PIPE ASSY FRONT (SEE PAGE 15–2)
19. INSTALL FLOOR PANEL BRACE FRONT (SEE PAGE 15–2)
20. INSTALL OXYGEN SENSOR (SEE PAGE 15–2)
21. APPLY HIGH TEMPERATURE GREASE (SEE PAGE 33–33)
22. INSTALL PARKING BRAKE SHOE LEVER LH (SEE PAGE 33–33)
23. INSTALL PARKING BRAKE SHOE ASSY LH NO.2 (SEE PAGE 33–33)
24. INSTALL PARKING BRAKE SHOE ASSY LH NO.1 (SEE PAGE 33–33)

25. INSTALL PARKING BRAKE SHOE ADJUSTING SCREW SET (SEE PAGE 33–33)
26. INSTALL REAR BRAKE STRUT KIT (SEE PAGE 33–33)
27. CHECK PARKING BRAKE INSTALLATION (SEE PAGE 33–33)
28. INSTALL REAR DISC (SEE PAGE 33–33)
29. INSTALL REAR DISC BRAKE CALIPER ASSY LH (SEE PAGE 33–33)
30. ADJUST REAR DRUM BRAKE SHOE CLEARANCE (SEE PAGE 33–33)
31. INSTALL REAR WHEEL
    Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
32. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33–2)
33. CHECK FOR EXHAUST GAS LEAKS (SEE PAGE 15–2)