330FZ–01


REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)
2. REMOVE FRONT SEAT ASSY LH (SEE PAGE 72–2)
3. REMOVE FRONT SEAT ASSY RH
4. REMOVE FRONT DOOR SCUFF PLATE RH (SEE PAGE 76–29)
5. REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 76–29)
6. REMOVE COWL SIDE TRIM BOARD RH (SEE PAGE 76–29)
7. REMOVE COWL SIDE TRIM BOARD LH (SEE PAGE 76–29)
8. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (SEE PAGE 71–13)
9. REMOVE FRONT FLOOR FOOTREST (SEE PAGE 50–8)
10. REMOVE HEATED OXYGEN SENSOR

    SST 09224–00010
11. REMOVE FLOOR PANEL BRACE FRONT
12. REMOVE EXHAUST PIPE ASSY FRONT
13. REMOVE PARKING BRAKE CABLE HEAT INSULATOR


(a) Remove the 2 nuts and separate the parking brake cable heat insulator.

14. REMOVE CONSOLE PANEL SUB–ASSY UPPER
15. REMOVE CONSOLE BOX POCKET (SEE PAGE 71–17)
16. REMOVE CONSOLE BOX CARPET (SEE PAGE 71–17)
17. REMOVE CONSOLE BOX ASSY RR (SEE PAGE 71–17)
18. REMOVE AIR DUCT REAR NO.3 (SEE PAGE 55–18)
19. REMOVE YAWRATE SENSOR (W/ VSC) (SEE PAGE 32–84)

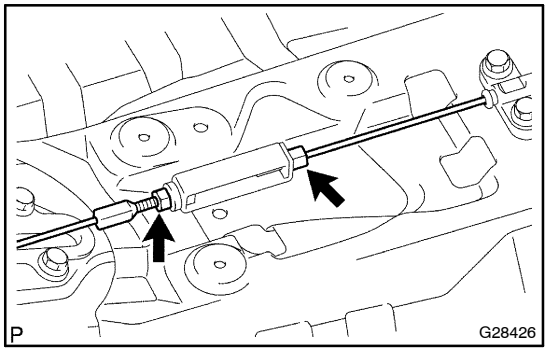


20. REMOVE PARKING BRAKE CABLE ASSY NO.4

(a) Release the parking brake.
(b) Turn up the front seat floor carpet.
(c) Hold the nut on the parking brake cable assy No.4 using a wrench. Loosen and disconnect the turnbuckle from the parking brake cable assy No.1.

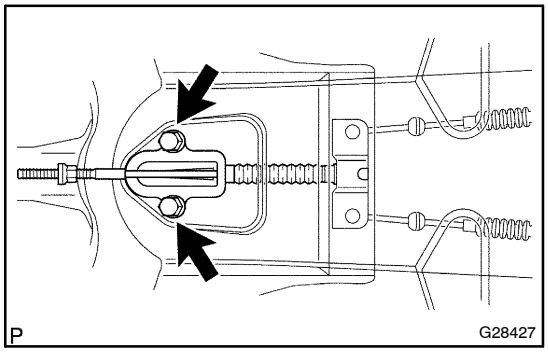

(d) Remove the 2 bolts and separate the parking cable assy No.4 from the parking brake equalizer.

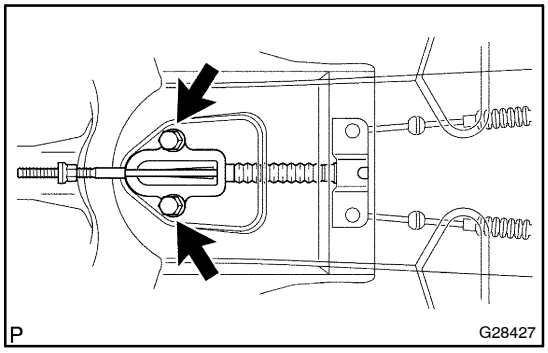


21. INSTALL PARKING BRAKE CABLE ASSY NO.4

(a) Connect the parking brake cable assy No.4 to the parking brake equalizer.

(b) Install the parking brake cable assy No.4 with the 2 bolts.

Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)

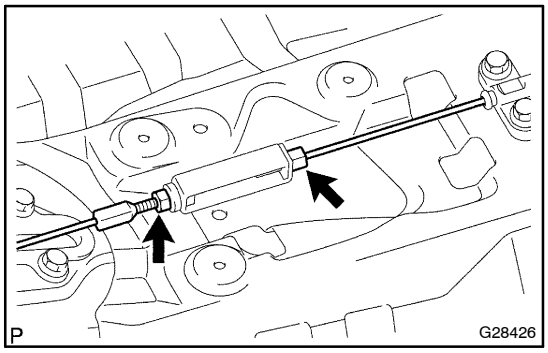

(c) Hold the nut on the parking brake cable assy No.4 using a wrench. Tighten the turnbuckle of the parking brake cable assy No.1.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

NOTICE:

- **Do not twist the parking brake cable assy No.4.**
- **Install the parking brake cable assy No.4 with the red surface facing up.**

(d) Return the front seat floor carpet to its original position.

22. INSTALL PARKING BRAKE CABLE HEAT INSULATOR

(a) Install the parking brake cable heat insulator with 2 nuts.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

23. INSTALL EXHAUST PIPE ASSY FRONT (SEE PAGE 15–2)

24. INSTALL FLOOR PANEL BRACE FRONT (SEE PAGE 15–2)

25. INSTALL HEATED OXYGEN SENSOR (SEE PAGE 15–2)

SST 09224–00010

26. INSTALL FRONT FLOOR FOOTREST (SEE PAGE 50–8)

27. INSTALL CONSOLE BOX MOUNTING BRACKET NO.1

28. INSTALL YAWRATE SENSOR (W/ VSC) (SEE PAGE 32–84)

29. INSTALL FRONT SEAT ASSY LH (SEE PAGE 72–2)

30. INSTALL FRONT SEAT ASSY RH

31. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33–2)