

STEERING GEAR ASSY

COMPONENTS

510H3–01

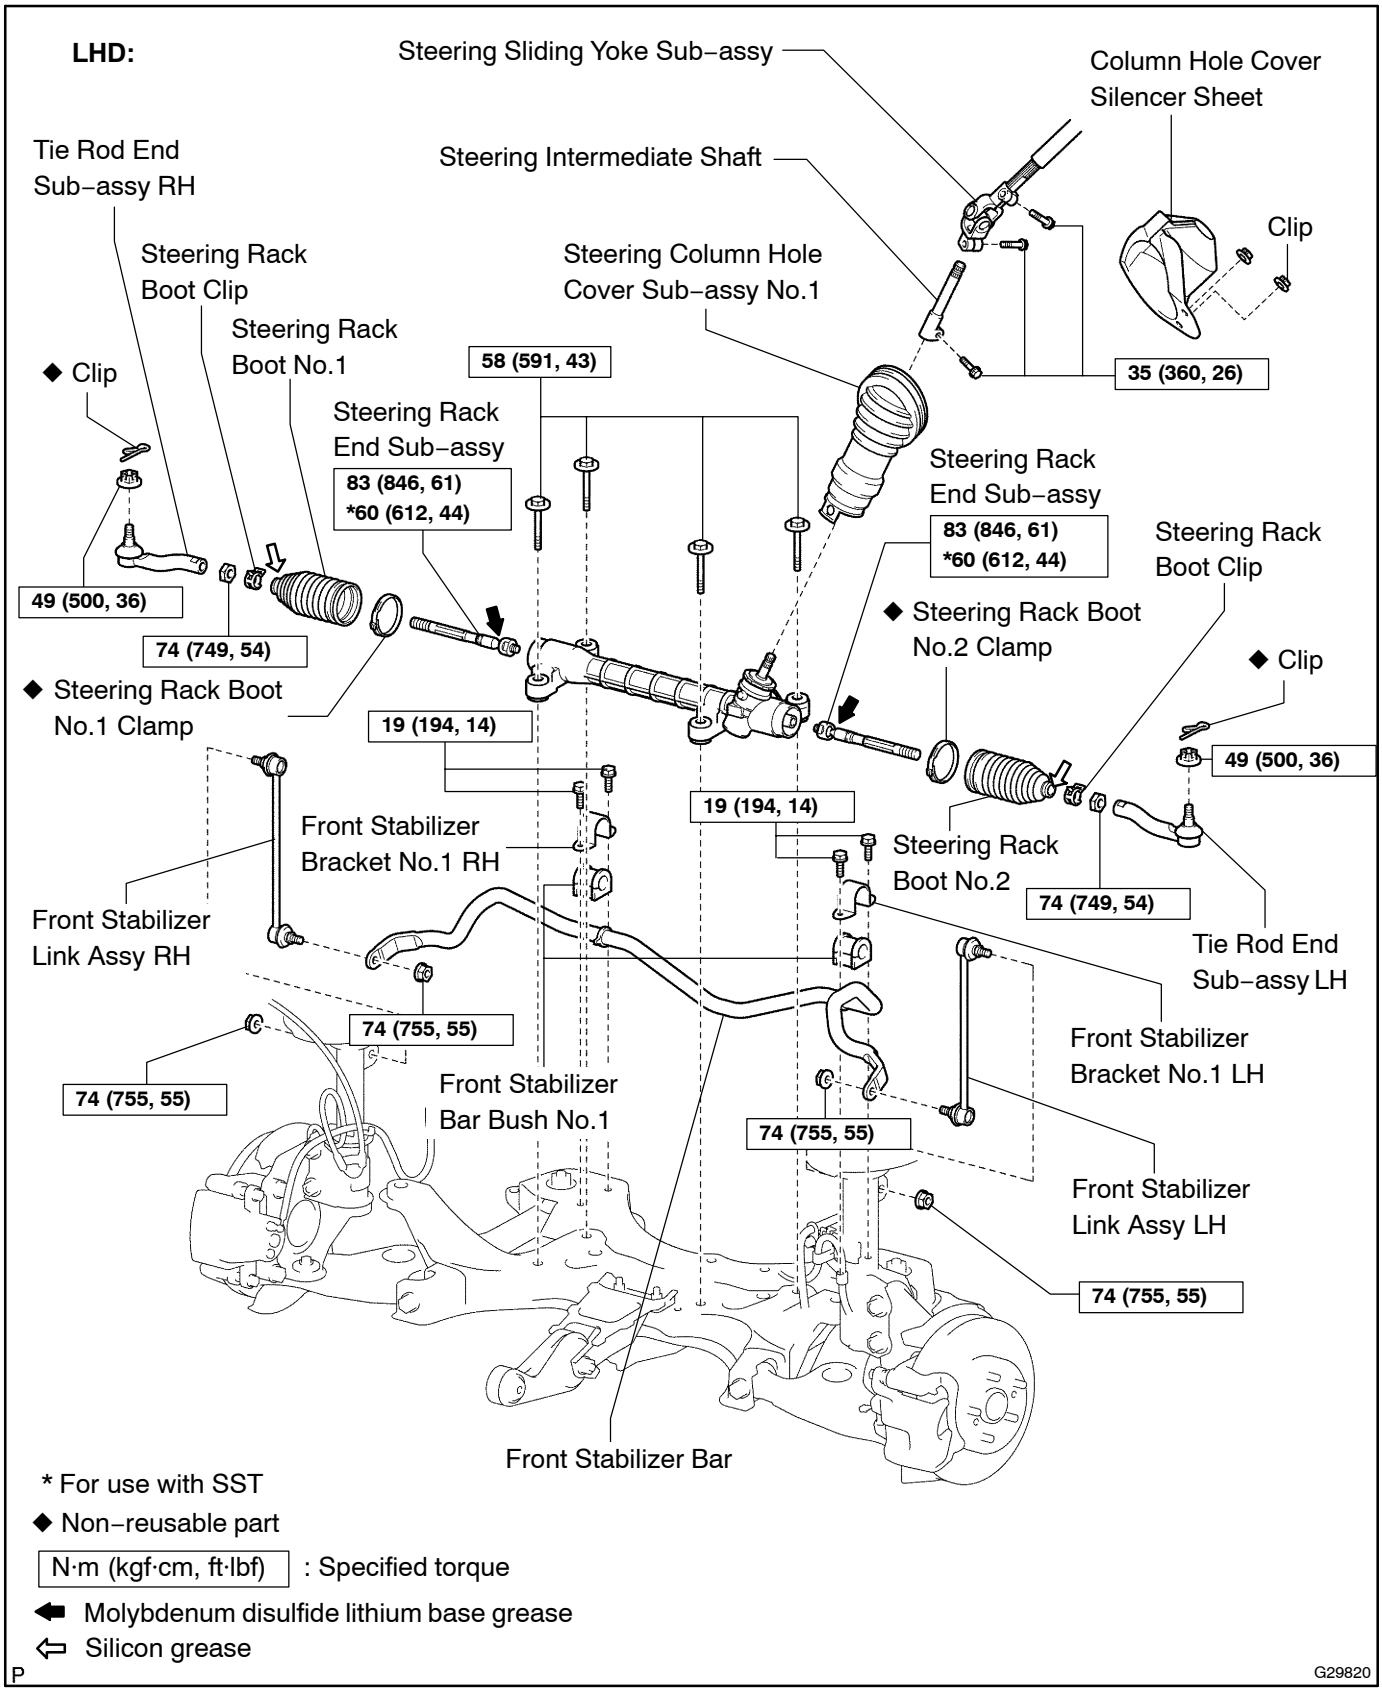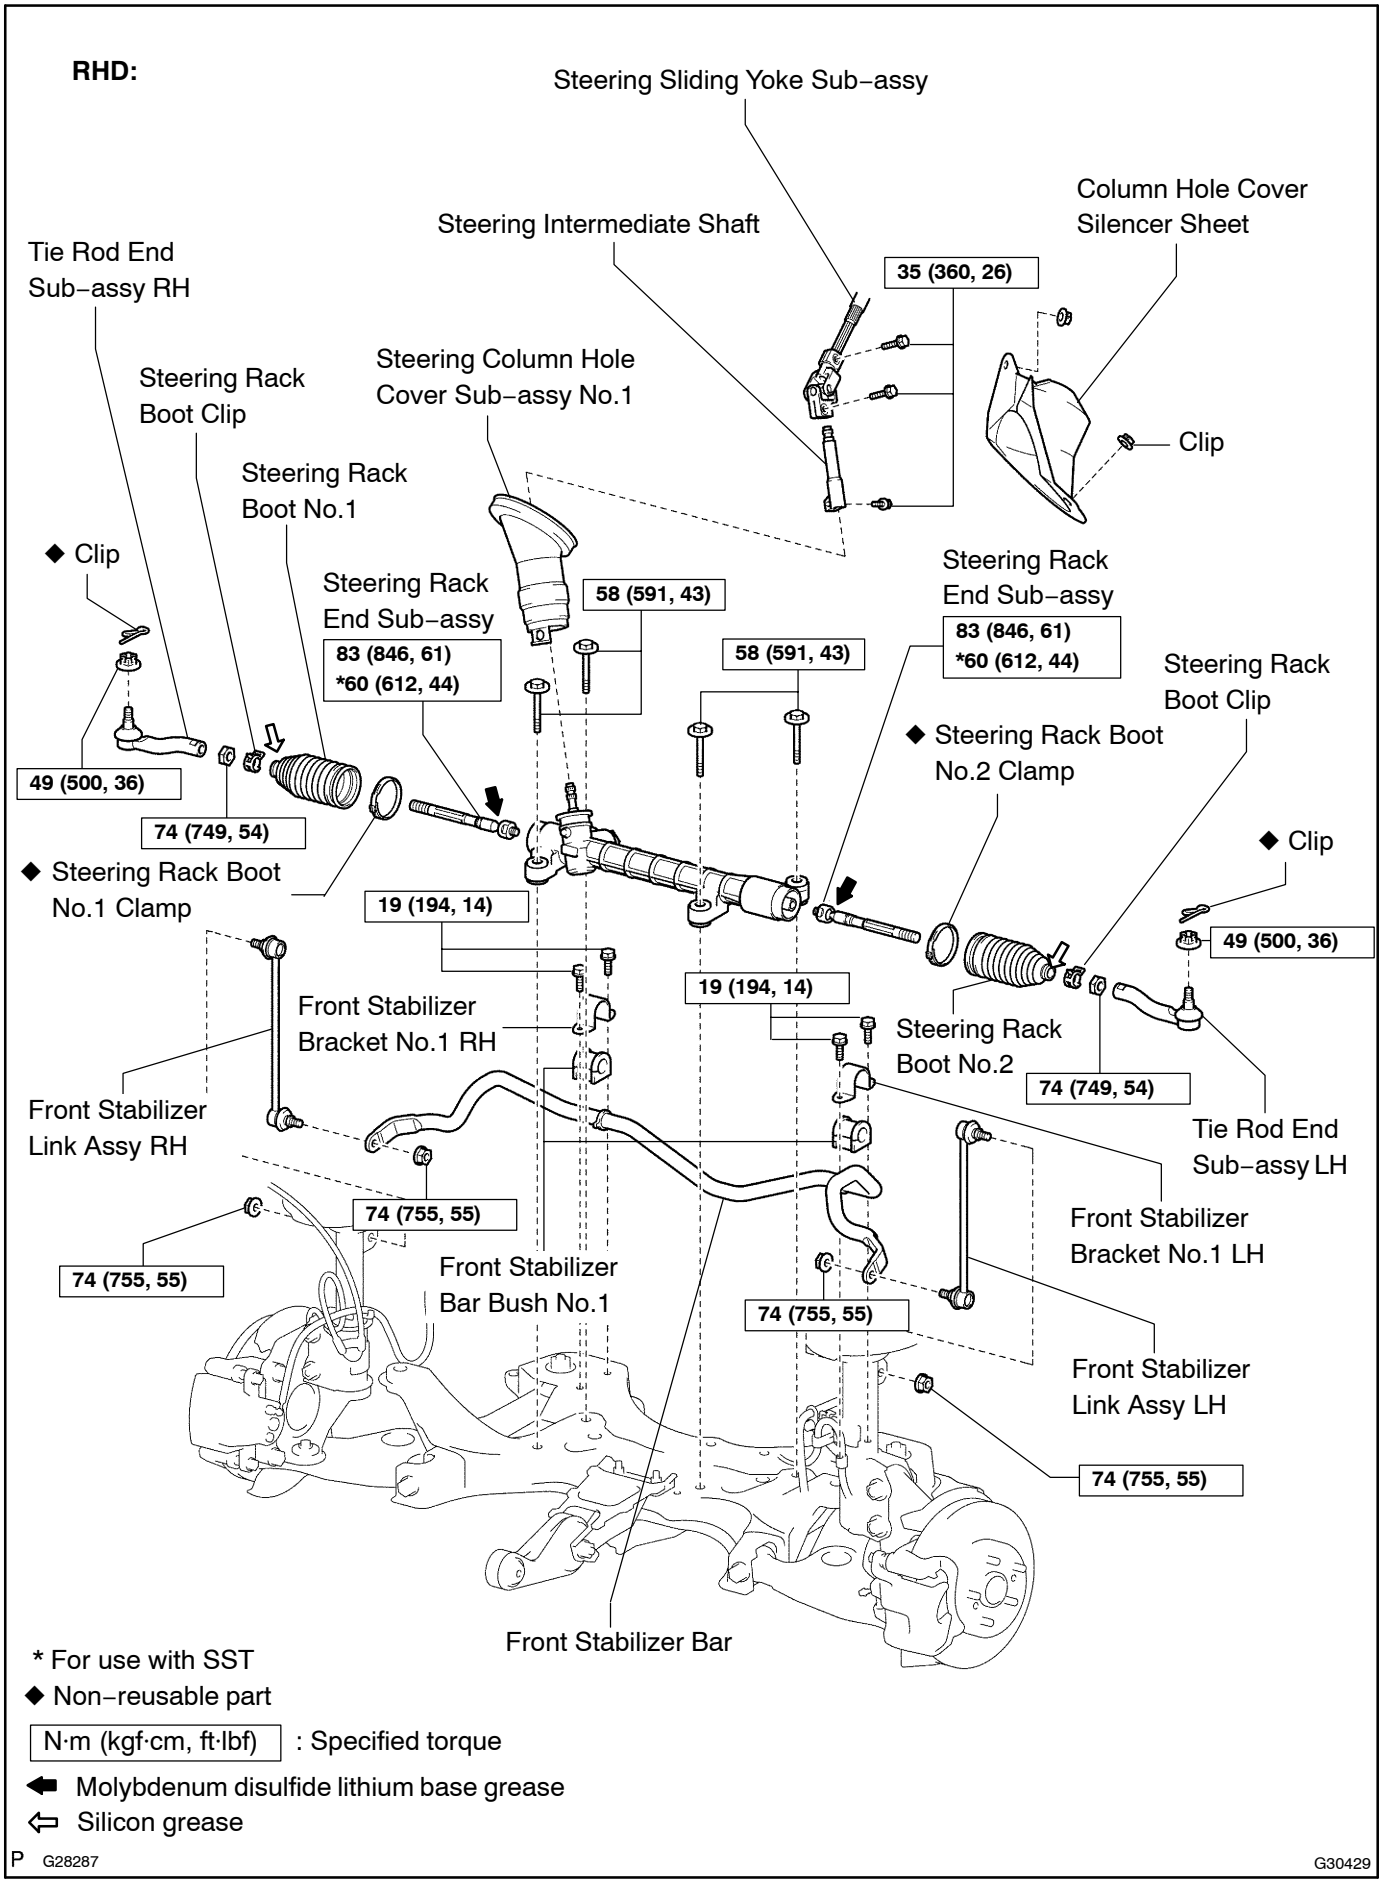


RHD:
Steering Sliding Yoke Sub–assy
Steering Intermediate Shaft
Column Hole Cover Silencer Sheet
Tie Rod End Sub–assy RH
35 (360, 26)
Steering Rack Boot Clip
Steering Column Hole Cover Sub–assy No.1
Clip
Steering Rack Boot No.1
◆ Clip
Steering Rack End Sub–assy
58 (591, 43)
Steering Rack End Sub–assy
83 (846, 61)
*60 (612, 44)
58 (591, 43)
83 (846, 61)
*60 (612, 44)
Steering Rack Boot Clip
◆ Steering Rack Boot No.2 Clamp
49 (500, 36)
74 (749, 54)
◆ Steering Rack Boot No.1 Clamp
◆ Clip
19 (194, 14)
49 (500, 36)
19 (194, 14)
Front Stabilizer Bracket No.1 RH
Steering Rack Boot No.2
74 (749, 54)
Front Stabilizer Link Assy RH
Tie Rod End Sub–assy LH
74 (755, 55)
Front Stabilizer Bracket No.1 LH
74 (755, 55)
Front Stabilizer Bar Bush No.1
74 (755, 55)
Front Stabilizer Link Assy LH
74 (755, 55)
Front Stabilizer Bar
* For use with SST
◆ Non–reusable part
N·m (kgf·cm, ft·lbf) : Specified torque
Molybdenum disulfide lithium base grease
Silicon grease
P G28287
G30429