
HEATER WATER PUMP ASSY


REPLACEMENT

55197–01

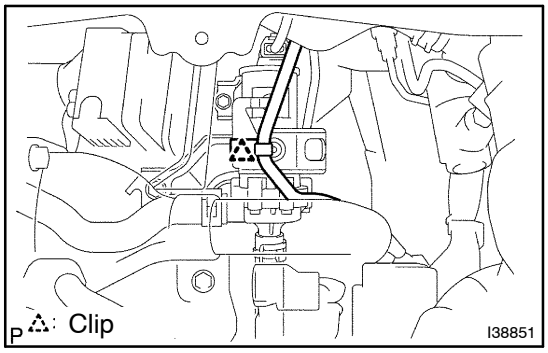

1. DISCONNECT HEATER WATER HOSE C


(a) Disengage the clip and disconnect the wire harness.

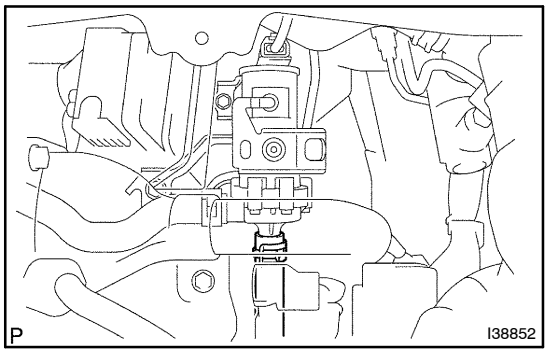

(b) Slide the hose clip and then disconnect the heater water hose C.

NOTICE:


- **Do not apply excessive force to the heater water hose C.**
- **Prepare a drain pan or cloth for when the cooling water leaks.**

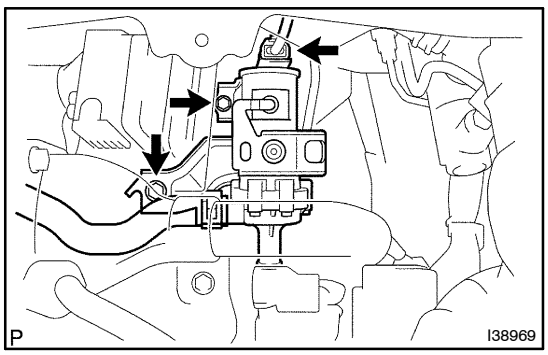

2. REMOVE HEATER WATER PUMP ASSY

(a) Disconnect the connector.

(b) Remove the 2 bolts and then disconnect the heater water pump assy.

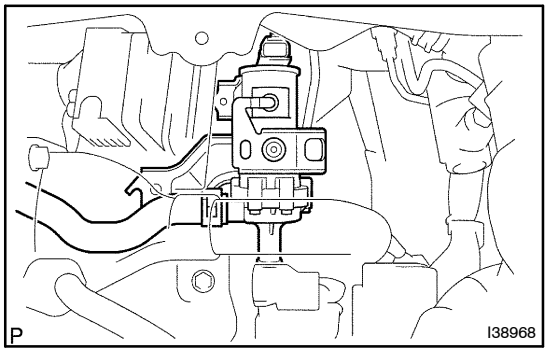


(c) Slide the hose clip and then disconnect the heater water hose A.

(d) Remove the heater water pump assy.

NOTICE:

- **Do not apply excessive force to the heater water hose A.**
- **Prepare a drain pan or cloth for when the cooling water leaks.**

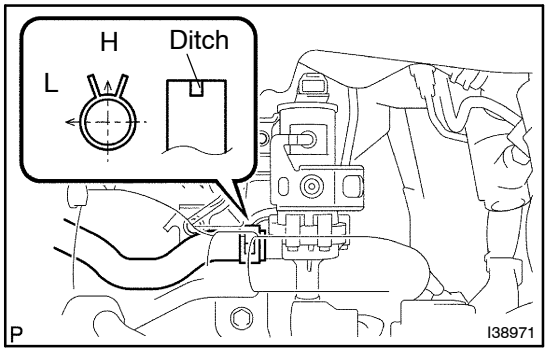


3. INSTALL HEATER WATER PUMP ASSY

(a) Install the heater water hose A with the hose clip.

NOTICE:

- **Ensure that the hose ditch faces upwards.**
- **Install the hose clip in the direction as shown in the illustration.**

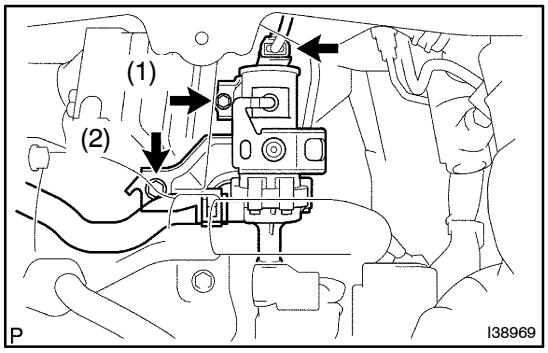


(b) Install the heater water pump assy with the 2 bolts.

NOTICE:

Tighten them in the order indicated in the illustration.

(c) Connect the connector.

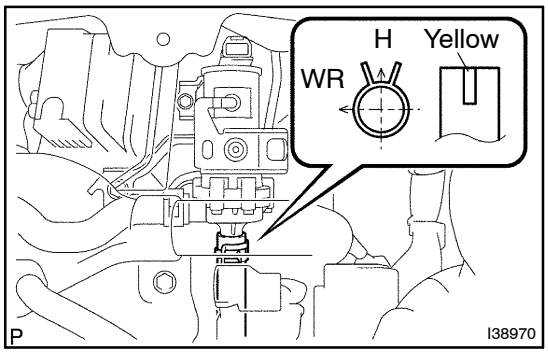

4. INSTALL HEATER WATER HOSE C

(a) Install the heater water hose C with the hose clip.

NOTICE:

- **Install the hose marking facing upwards.**
- **Install the hose clip in the direction as shown in the illustration.**

5. ADD ENGINE COOLANT (SEE PAGE 16–11)

6. CHECK FOR ENGINE COOLANT LEAKS (SEE PAGE 16–2)