
600S0–01

REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60–1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)**
3. **REMOVE GLOVE COMPARTMENT DOOR (SEE PAGE 71–7)**

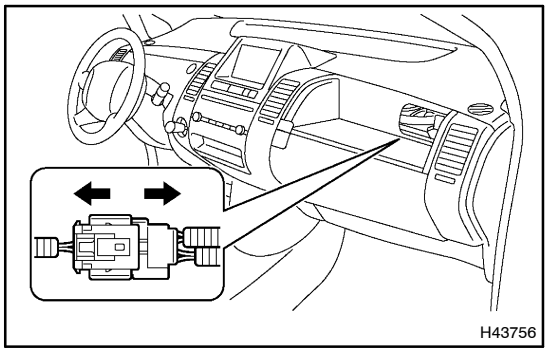


4. **DISCONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR**

(a) Disconnect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

5. **REMOVE INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71–7)**

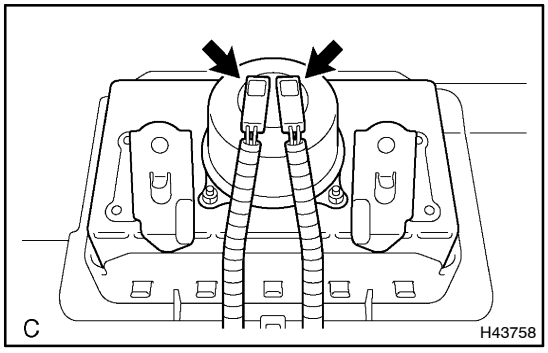


6. **DISCONNECT INSTRUMENT PANEL WIRE ASSY**

(a) Disconnect the connectors from the front passenger airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

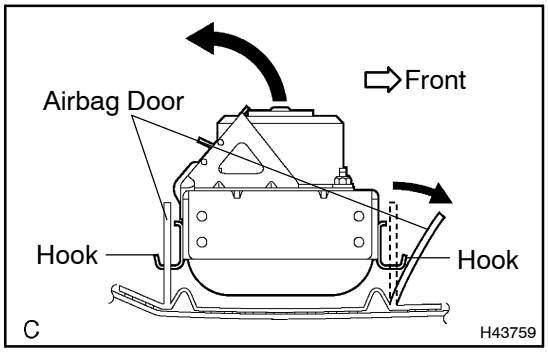


7. **REMOVE FRONT PASSENGER AIRBAG ASSY**

(a) Release the front side wall of the airbag door from the hook by slightly deflecting it and roll the front passenger airbag assy rearward.

(b) Release the rear side wall of the airbag door from the other hook and remove the front passenger airbag assy.

8. **INSPECT FRONT PASSENGER AIRBAG ASSY (SEE PAGE 60–14)**
9. **INSTALL FRONT PASSENGER AIRBAG ASSY**

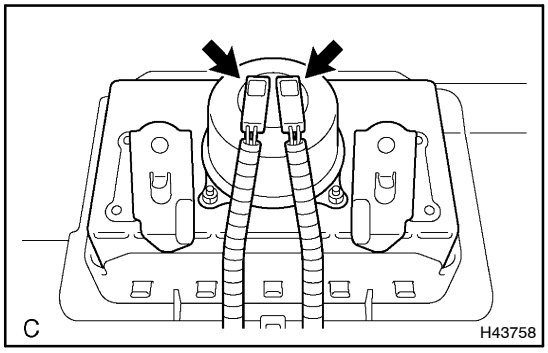


10. CONNECT INSTRUMENT PANEL WIRE ASSY

(a) Connect the connectors to the front passenger airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

11. INSTALL INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71–7)

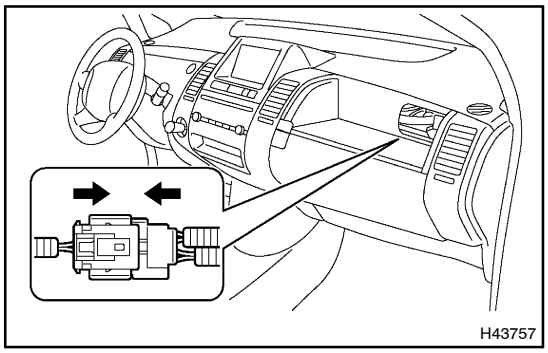

12. CONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR

(a) Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

13. CONNECT BATTERY NEGATIVE TERMINAL

NOTICE:

When disconnecting the negative (–) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01–29

14. INSPECT SRS WARNING LIGHT (SEE PAGE 05–1155)