600S3–01

REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. PRECAUTION (SEE PAGE 60–1)

2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)

3. REMOVE ROOF HEADLINING ASSY (SEE PAGE 76–29)

4. REMOVE CURTAIN SHIELD AIRBAG ASSY


(a) Disconnect the connector from the curtain shield airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

(b) Remove the 3 clips.

(c) Remove the 9 bolts and the curtain shield airbag assy in the order shown in the illustration.

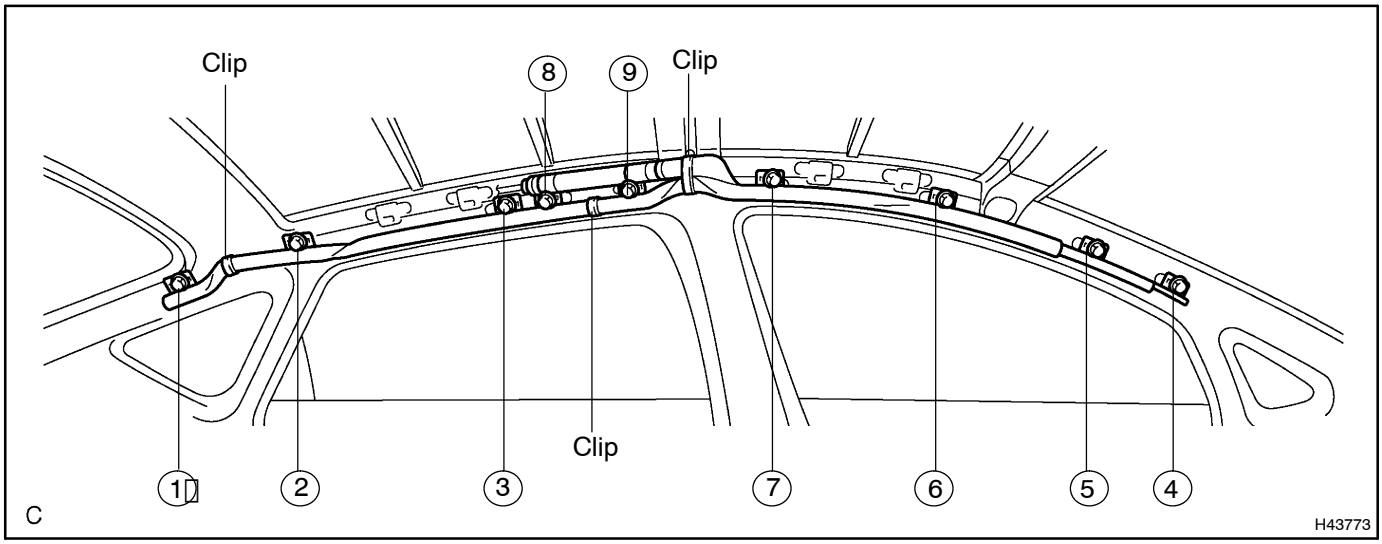

5. INSPECT CURTAIN SHIELD AIRBAG ASSY (SEE PAGE 60–14)


6. INSTALL CURTAIN SHIELD AIRBAG ASSY

(a) Install the curtain shield airbag assy with the 9 bolts in the order shown in the illustration.
Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)

(b) Install the 3 clips.

(c) Connect the connector to the curtain shield airbag assy.

NOTICE:
When handling the airbag connector, take care not to damage the airbag wire harness.

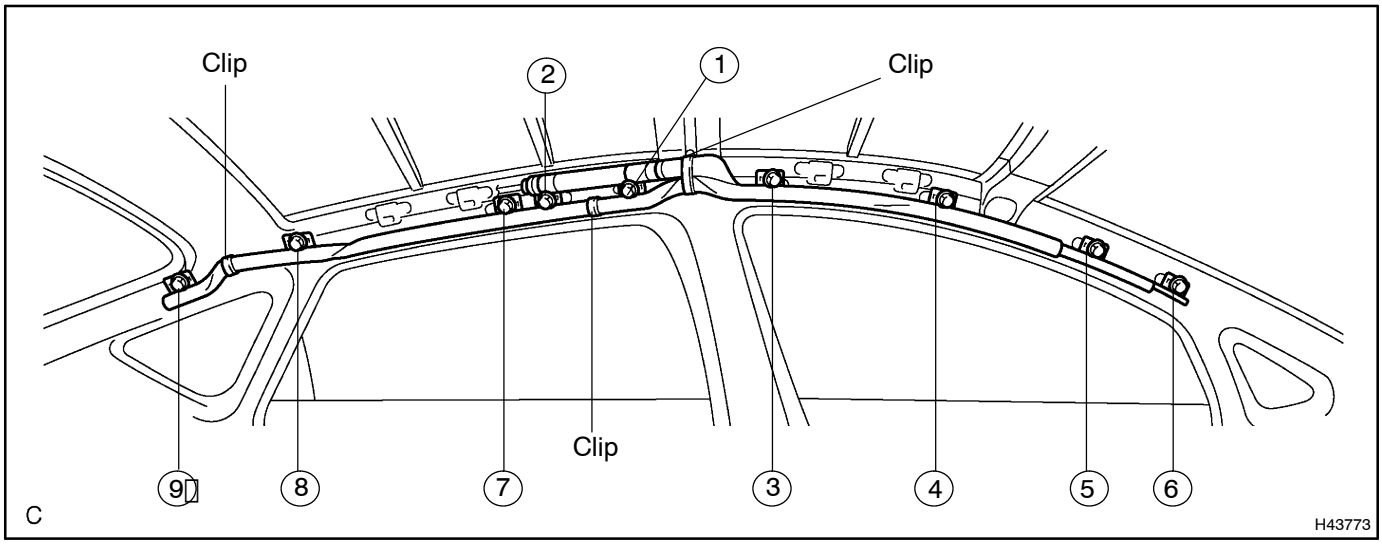

7. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76–29)

8. CONNECT BATTERY NEGATIVE TERMINAL

NOTICE:
When disconnecting the negative (–) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01–29

9. INSPECT SRS WARNING LIGHT (SEE PAGE 05–1155)