
600S6–01

REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60–1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)**
3. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (SEE PAGE 71–13)**
4. **REMOVE AIR DUCT REAR NO.3 (SEE PAGE 55–18)**

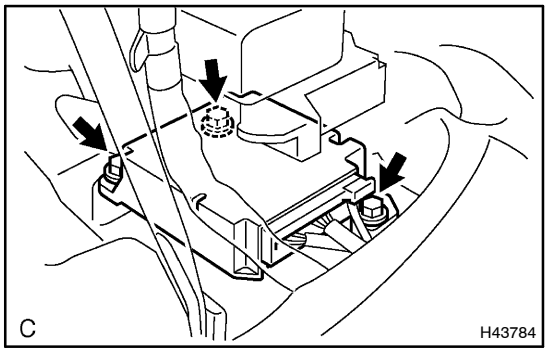

5. **REMOVE AIR BAG ECU ASSY**

(a) Disconnect the holder (with connectors) from the airbag ECU assy.

(b) Remove the 3 bolts and the airbag ECU assy.

6. **INSTALL AIR BAG ECU ASSY**

(a) Check that the power switch is off.

(b) Check that the battery negative (–) terminal is disconnected.

NOTICE:

After removing the terminal, wait for at least 90 seconds before starting the operation.

(c) Install the airbag ECU assy with the 3 bolts.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

NOTICE:

- **If the airbag ECU assy has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the airbag ECU assy, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

(d) Check that there is no looseness in the installation parts of the airbag ECU assy.

(e) Connect the holder (with connectors) to the airbag ECU assy.

(f) Check that the water–proof sheet is properly set.

7. **CONNECT BATTERY NEGATIVE TERMINAL**

NOTICE:

When disconnecting the negative (–) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01–29

8. **INSPECT SRS WARNING LIGHT (SEE PAGE 05–1155)**