

# SEAT BELT WARNING SYSTEM


## LOCATION

610JI–01

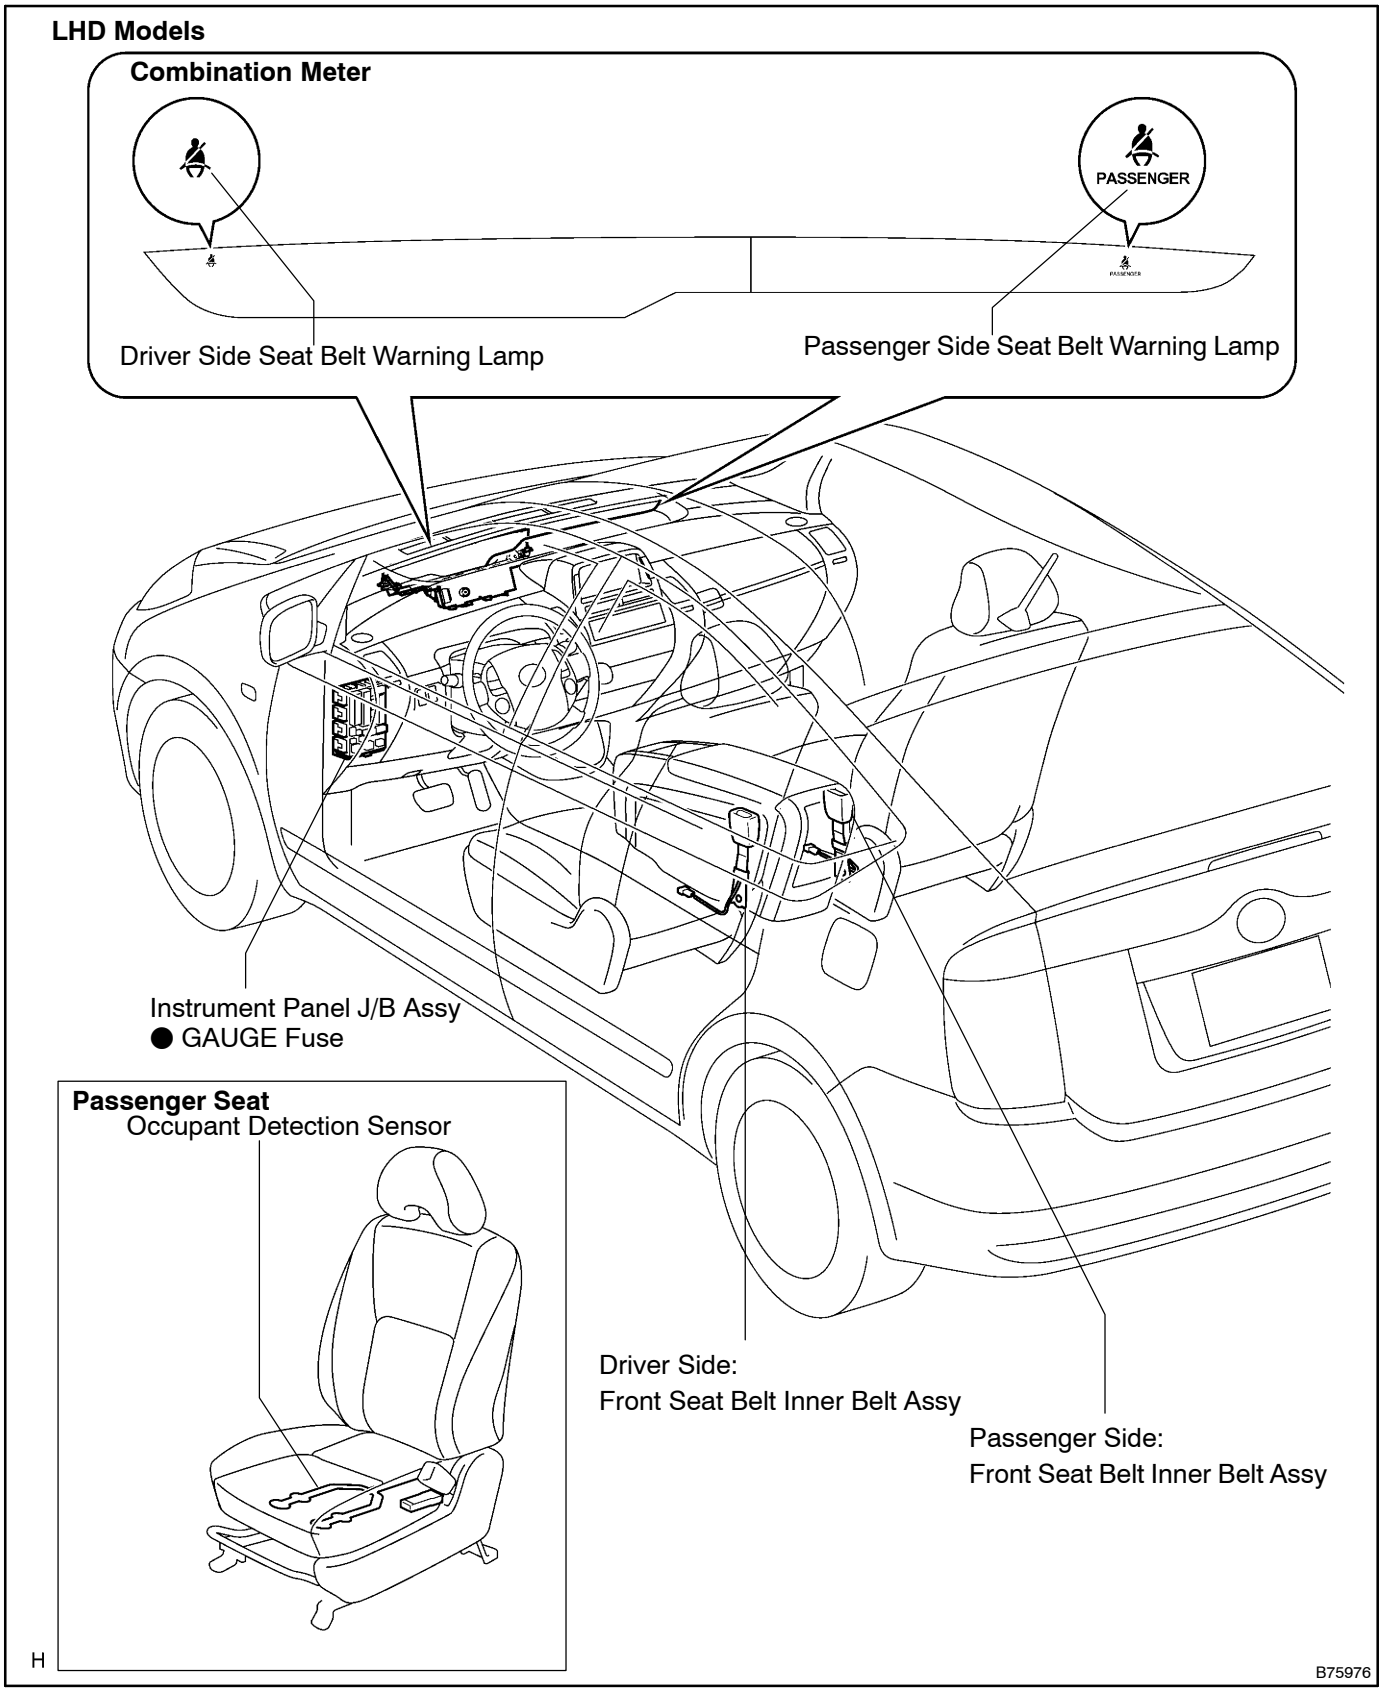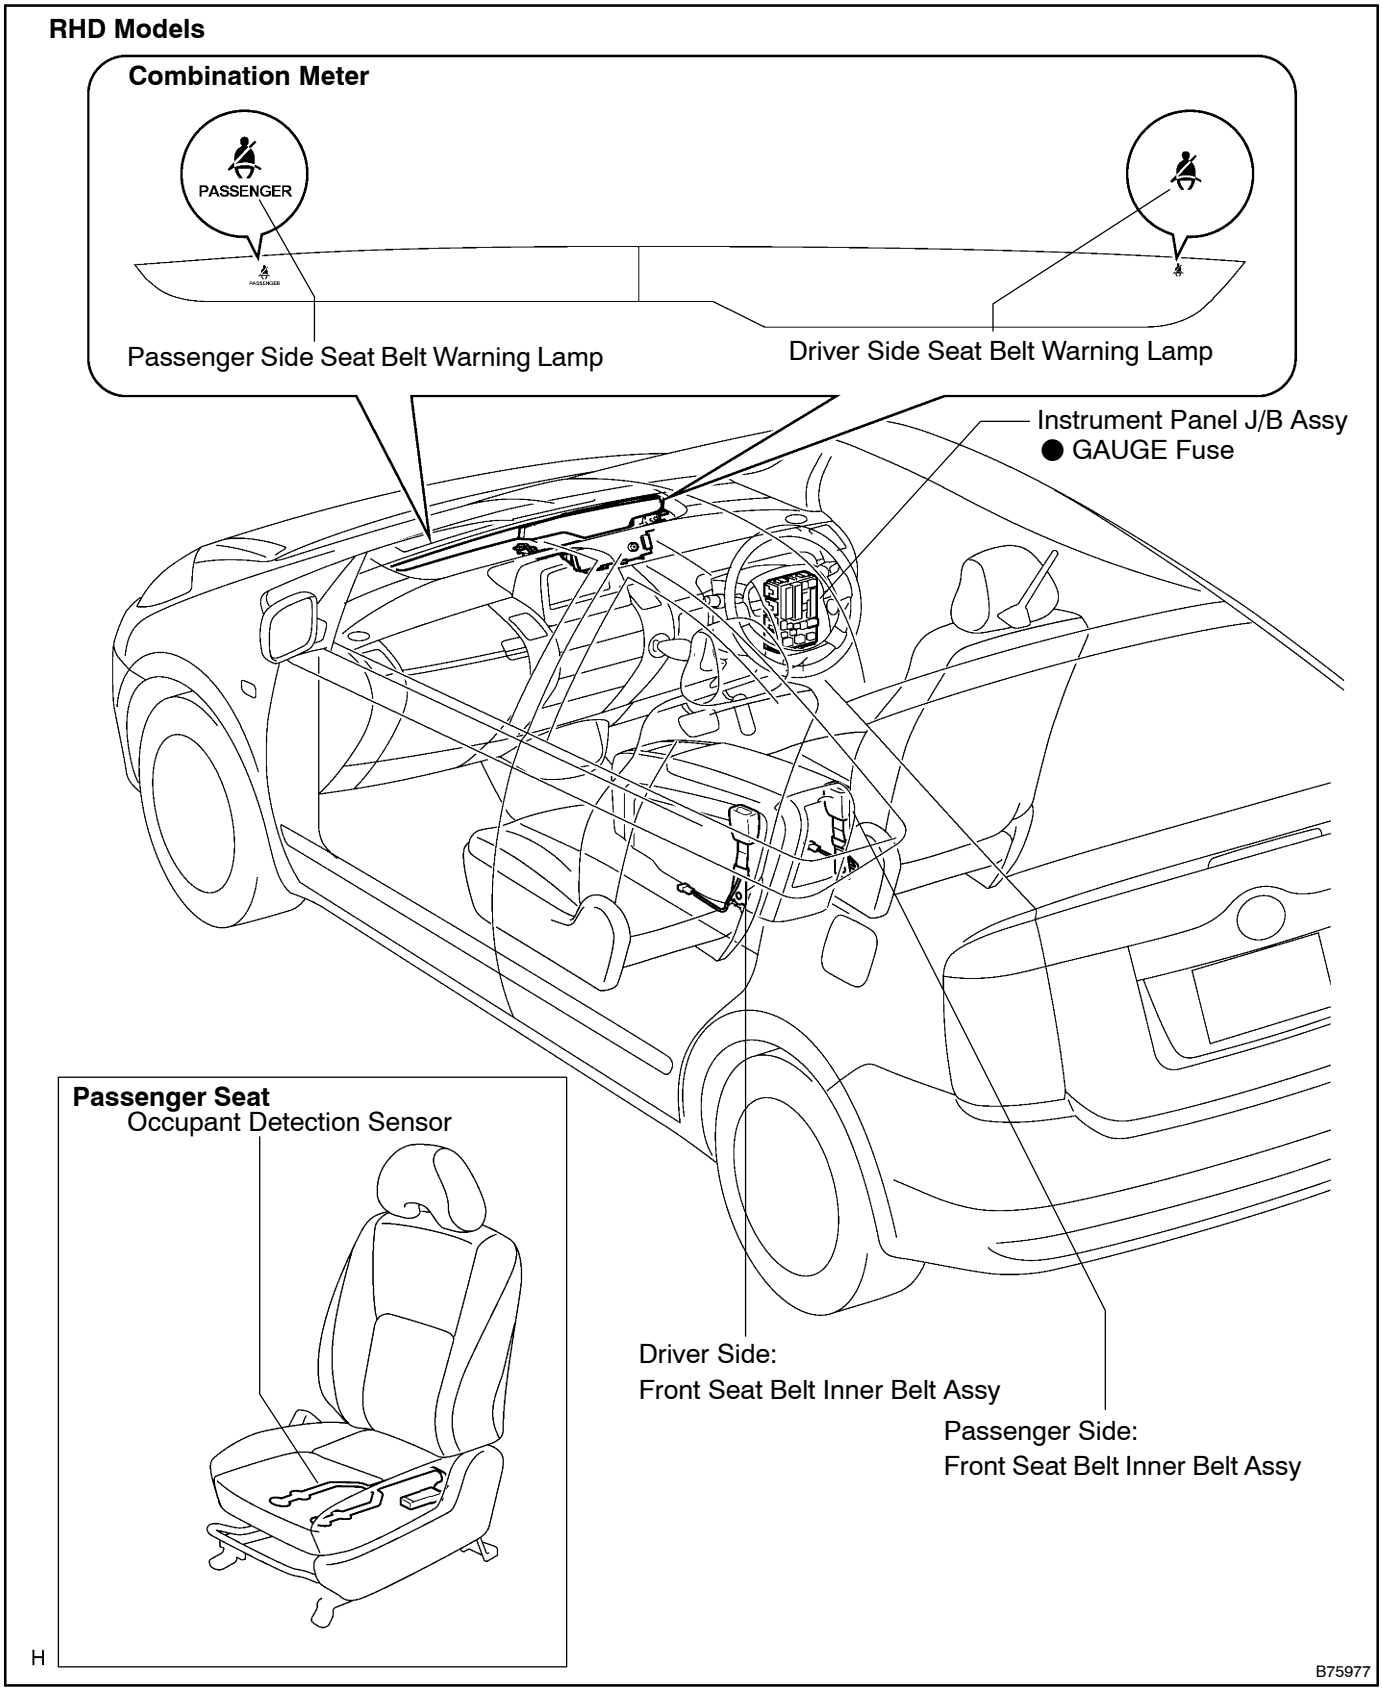

**RHD Models**


Combination Meter
PASSENGER
Passenger Side Seat Belt Warning Lamp
Driver Side Seat Belt Warning Lamp
Instrument Panel J/B Assy
● GAUGE Fuse
Passenger Seat
Occupant Detection Sensor
Driver Side:
Front Seat Belt Inner Belt Assy
Passenger Side:
Front Seat Belt Inner Belt Assy
H
B75977

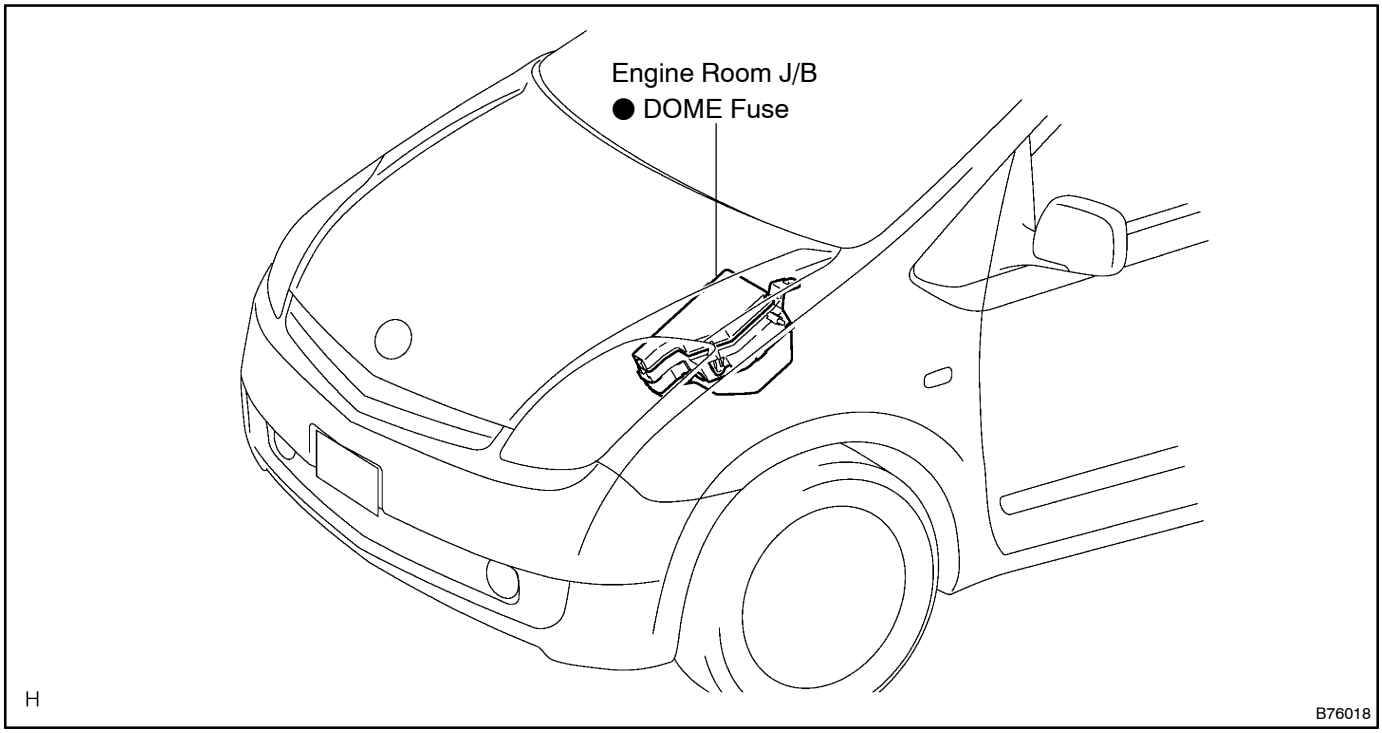
Engine Room J/B
● DOME Fuse
H
B76018