
610JL–01

INSPECTION

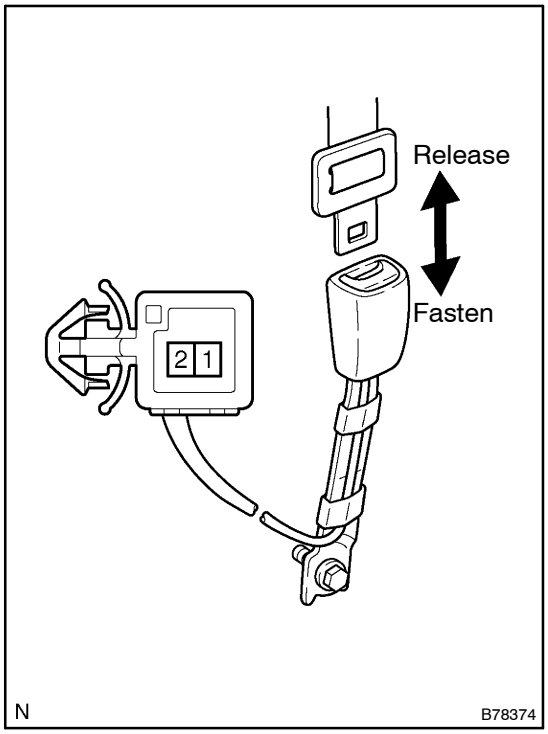


1. Driver side:
INSPECT FRONT SEAT INNER BELT ASSY

(a) Measure the resistance between the terminals of the buckle switch.

Standard:

Tester Condition	Condition	Specified Condition
1 – 2	Fasten seat belt	1 MΩ or higher
1 – 2	Release seat belt	Below 1 Ω

If the result is not as specified, replace the inner belt assy.

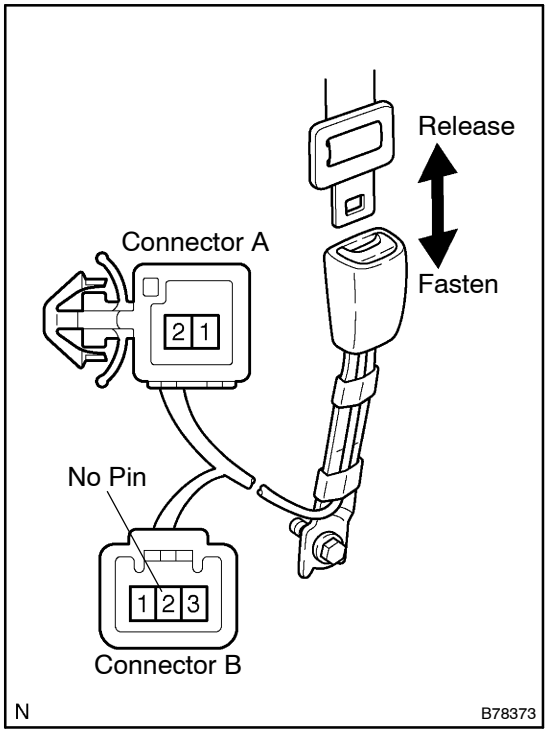


2. Passenger side:
INSPECT FRONT SEAT INNER BELT ASSY

(a) Measure the resistance between the terminals of the buckle switch.

Standard:

Tester Condition	Condition	Specified Condition
A–2 – B–3	Fasten seat belt	1 MΩ or higher
A–2 – B–3	Release seat belt	Below 1 Ω

If the result is not as specified, replace the inner belt assy.

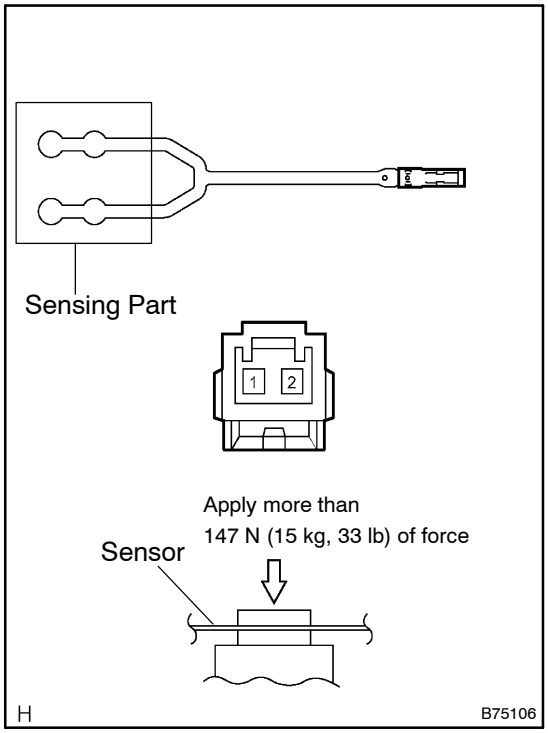

3. INSPECT OCCUPANT DETECTION SENSOR

(a) Measure the resistance between the terminals.

Standard:

Tester Condition	Condition	Specified Condition
1 – 2	Apply more than 147 N (15 kg, 33 lb) to occupant detection sensor	Below 1 Ω
1 – 2	Free	1 MΩ or higher

If the result is not as specified, replace the seat cushion pad.