
SIDE TURN SIGNAL LAMP LENS

6511Q–02

REPLACEMENT

HINT:

Parts are shown for the LH side only. The LH and RH side are symmetrical.

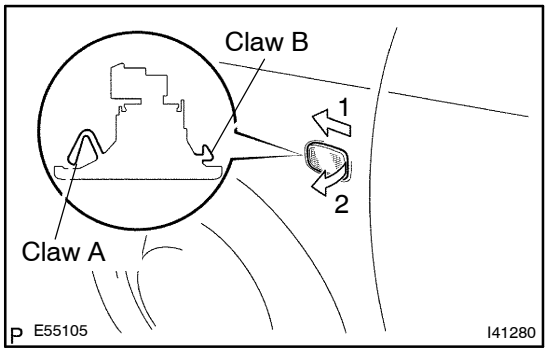

1. REMOVE SIDE TURN SIGNAL LAMP LENS

(a) While pulling claw A towards the front of the vehicle, bend it towards you and disengage claw B.

(b) Remove the socket and the side turn signal lamp lens.