
6511P–01

# ADJUSTMENT

**1. ADJUST FOG LIGHT AIM**

(a) Prepare the vehicle by performing the following.
- Ensure there is no damage or deformation to the body around the headlamps.
- Fill the fuel tank.
- Make sure that the oil is filled to the specified level.
- Make sure that the coolant is filled to the specified level.
- Inflate the tires to the appropriate pressure (see page 28–1).
- Place the spare tire, tools, and jack in their original position.
- Unload the trunk.
- Sit a person of average weight (75 kg, 165 lbs) in the driver's seat.

(b) Start the engine and let it idle.

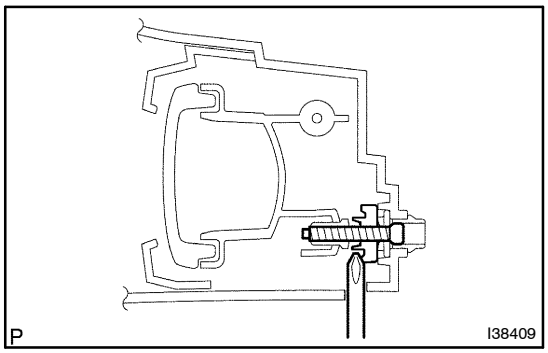


(c) From underneath the vehicle, turn the screw to perform the adjustment.

HINT:
- The lamp moves up when turning the screw clockwise, and moves down when turning the screw counterclockwise.
- When adjusting the fog lamp, insert a Philips head screwdriver into the front fender liner fog lamp service hole.