REAR COMBINATION LAMP ASSY


6511R–01

OVERHAUL

HINT:

Parts are shown for the LH side only. The LH and RH side are symmetrical.

1. REMOVE REAR COMBINATION LAMP SERVICE COVER LH

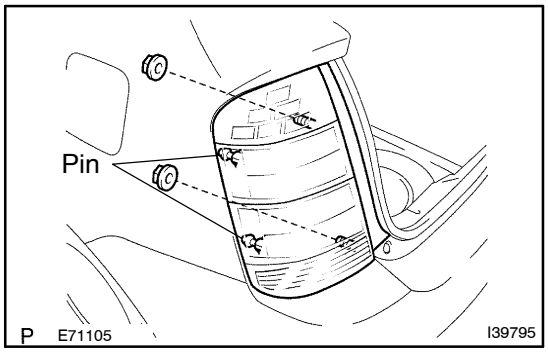

2. REMOVE REAR COMBINATION LAMP ASSY

(a) Remove the 2 nuts.

(b) Slide the 2 pins towards the back of the vehicle to remove them.

(c) Disconnect the connector and remove the rear combination lamp assy.

(d) Remove all bulb sockets and the 3 rear combination lamp bulbs.